


CODING
-336069

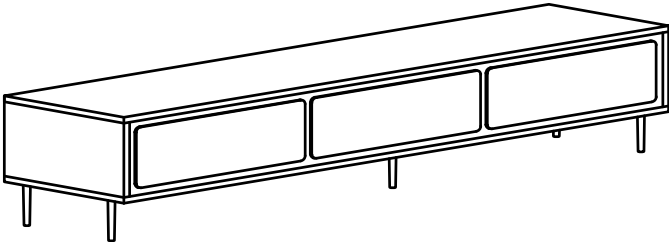


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubberma to prevent from scratches .


Caution
KEEP ALL PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST	QTY
Ⓐ	JCBC SCREW M6 X 15MM 	14
Ⓑ	ALLEN KEY M5 	1

ITEM	PART LIST	QTY
①	BODY 	1
②	METAL LEG 	2
③	SUPPORT LEG 	1

CODING

-336069

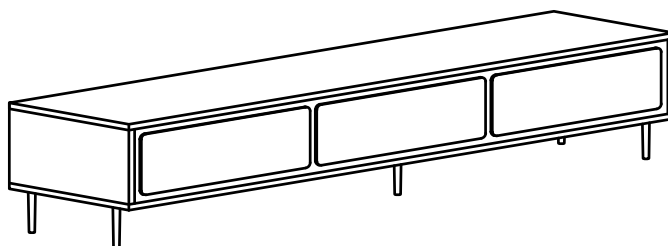

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

1

