


CODING
- 336103

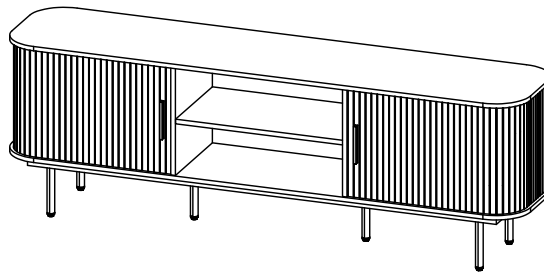

ISO 9001:2015
Reg. No. 00005-1-0001-1-Q000

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.


HARDWARE				
A	MINI FIX	A1  A2  A3 	14 SETS	
B	M8 X 30MM WOOD DOWEL		24 PCS	
C	M6 X 50MM CSK CAP WOOD SCREW		10 PCS	
D	ALLEN KEY M4		1 PC	
E	PAN HEAD SCREW M4 X 12MM		8 PCS	
F	METAL BRACKET		4 PCS	
G	M3.5 X 16MM C.B SCREW		4 PCS	
H	PVC HANDLE 7050.96		2 PCS	
I	METAL SHELF SUPPORT		8 PCS	
J	STUD 192 WITH SCREW	J1  J2 	8 PCS	
K	ROSE METAL LEG		6 PCS	
	TIPPING PACK WITH A1	  	2 SETS	

SELF-PREPARED TOOLS: Tools below are NOT included in package.


	SCREWDRIVER		HAMMER
---	-------------	---	--------

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	CENTER PANEL (L)	1 PC
6	CENTER PANEL (R)	1 PC
7	MIDDLE PANEL	1 PC
8	SIDE SHELF PANEL	2 PCS
9	BACK SIDE	2 PCS
10	BACK PANEL (C)	1 PC
11	BACK PANEL (L/R)	2 PCS
12	SLIDING DOOR	2 PCS


CODING
- 336103

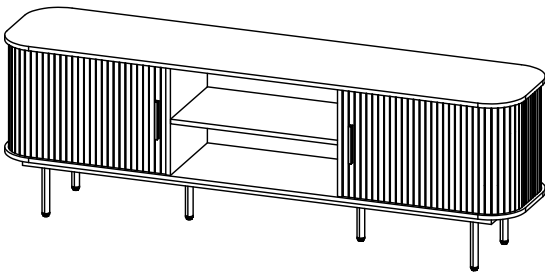

ISO 9001:2015
Reg. No. 080-GS-1-2017-1-Q008

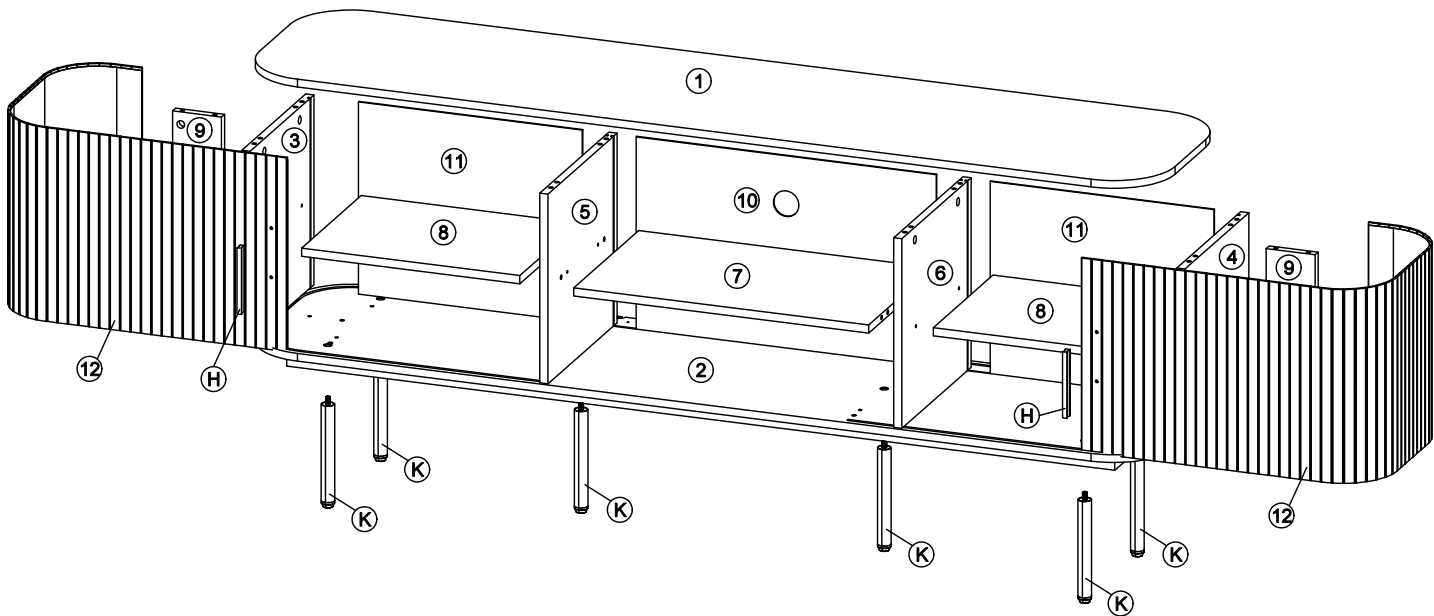


CODING
- 336103

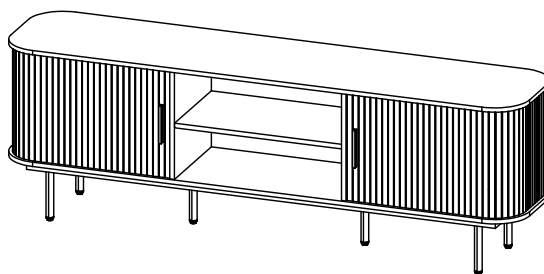

ISO 9001:2015
Reg. No. 00035-1-2017-1-Q008


STEP 1

- Insert hardware **A2** onto panel **(1)**.
(Repeat 10 times.)
- Insert hardware **B** onto panel **(3)** and **(4)**.
(Repeat 8 times.)

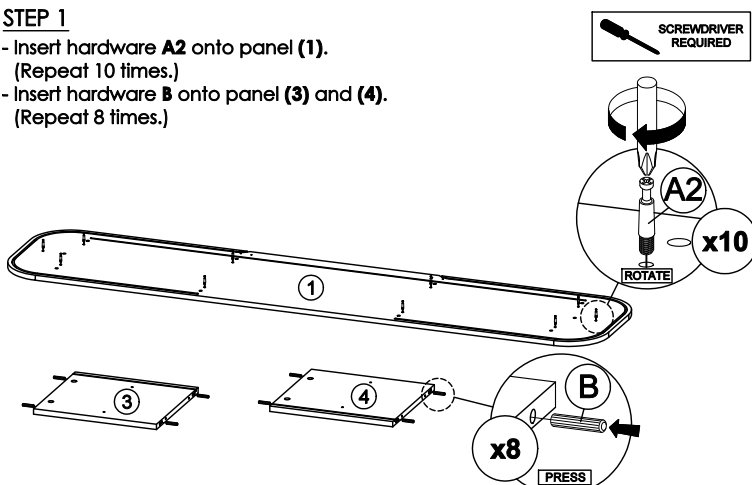


STEP 2

- Insert hardware **A2** onto panel **(5)** and **(6)**.
(Repeat 4 times.)
- Insert hardware **B** onto panel **(5)**, **(6)**, **(7)** and **(9)**.
(Repeat 16 times.)

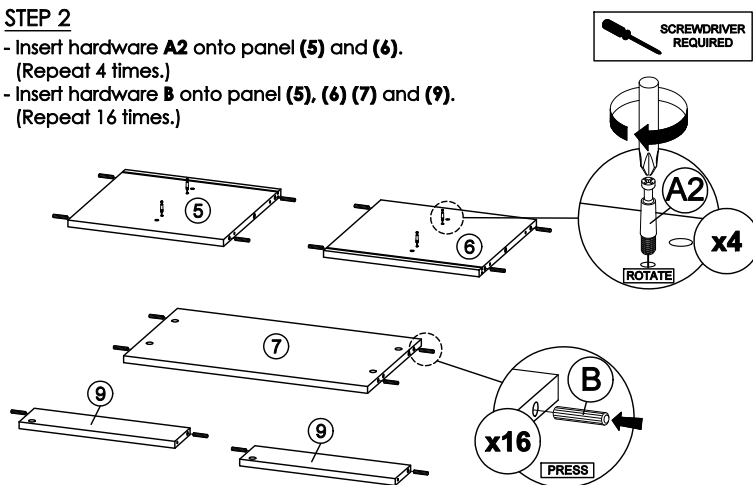


STEP 3

- Insert hardware **A1** onto panel **(7)**.
- Attach panel **(5)** and **(6)** to panel **(7)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)

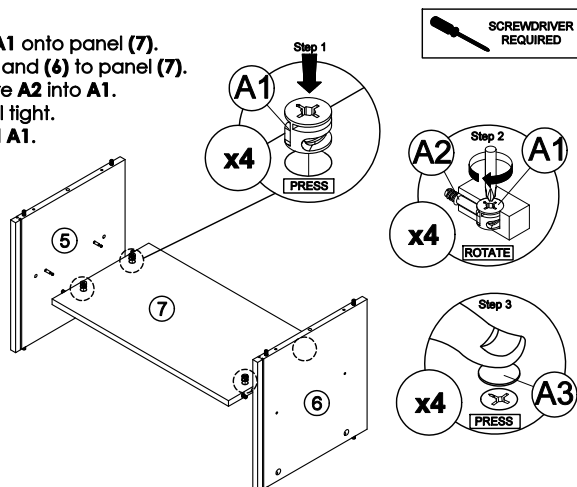


STEP 4

- Insert hardware **A1** onto panel **(5)** and **(6)**.
- Attach panel **(5)** and **(6)** to panel **(1)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)

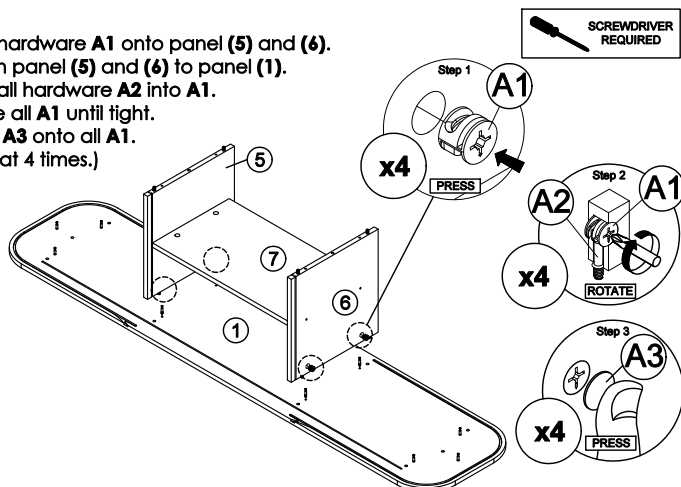


STEP 5

- Insert hardware **A1** onto panel **(3)**, **(4)** and **(9)**.
- Attach panel **(3)**, **(4)** and **(9)** to panel **(1)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 6 times.)

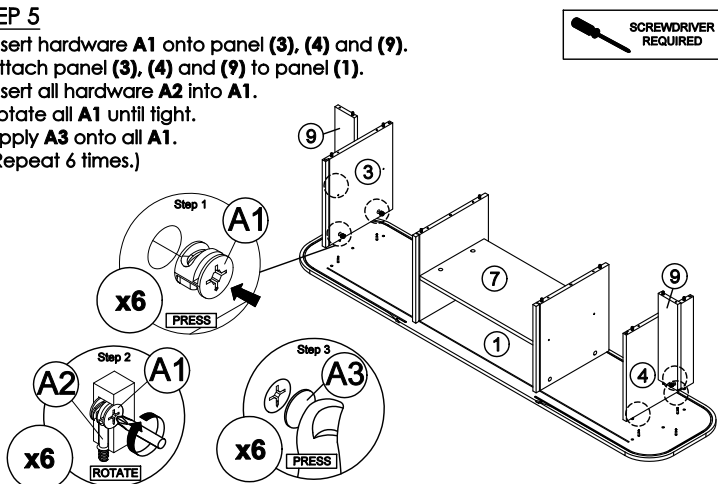


STEP 6

- Insert the panel **(10)** and **(11)** along the slot.
(Repeat 3 times.)

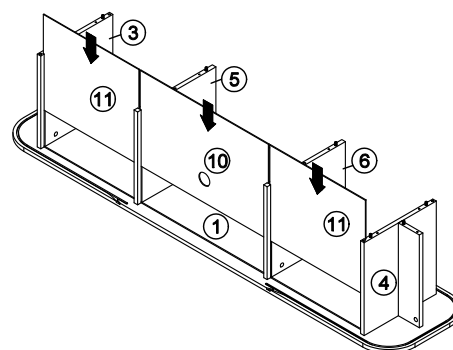


CODING
- 336103

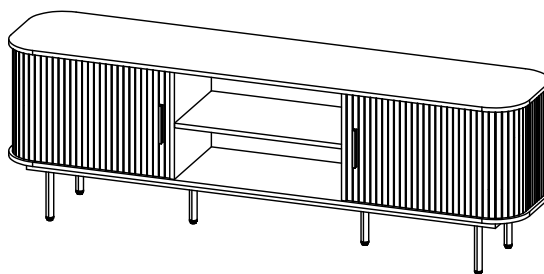

ISO 9001:2015
Reg. No. 00003-1-001-1-Q008


STEP 7

- Connect panel (2) to panel (3), (4), (5), (6) and (9) by using hardware C and D.
(Repeat 10 times.)

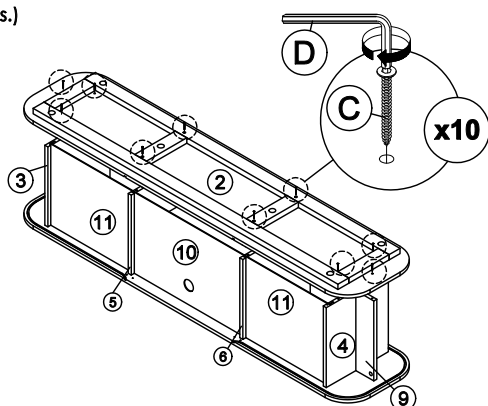


STEP 8

- Insert hardware J1 into slot at panel (1), (2), (3) and (4).
- Assemble hardware J1 by using hardware J2.
(Repeat 8 times.)

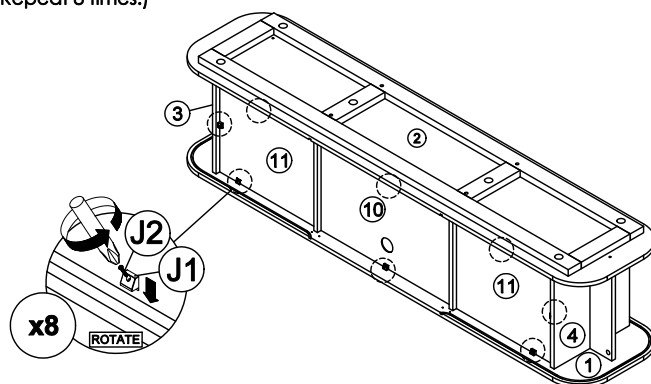


STEP 9

- Assemble hardware K into bottom of panel (2).
(Repeat 6 times.)

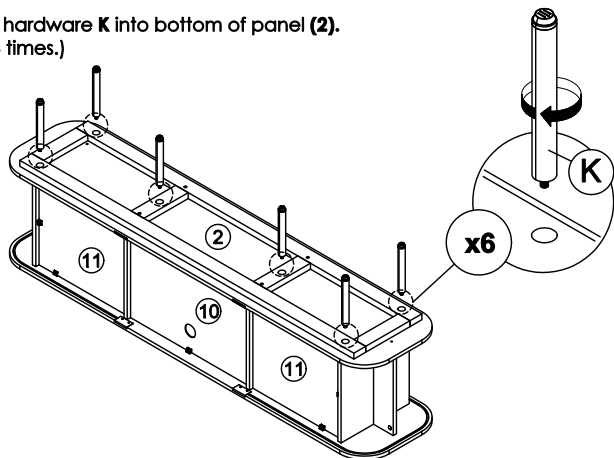


STEP 10

- Insert hardware I into mounting positions on panel (3), (4), (5) and (6) by hand.
(Repeat 8 times.)

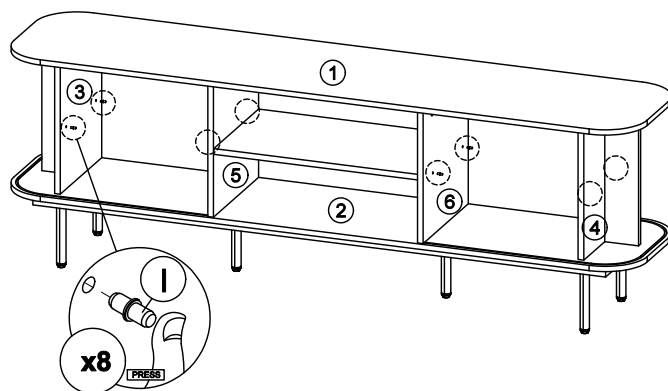


STEP 11

- Assemble the panel (8) into between panel (3) and (5).
- Assemble the panel (8) into between panel (4) and (6).

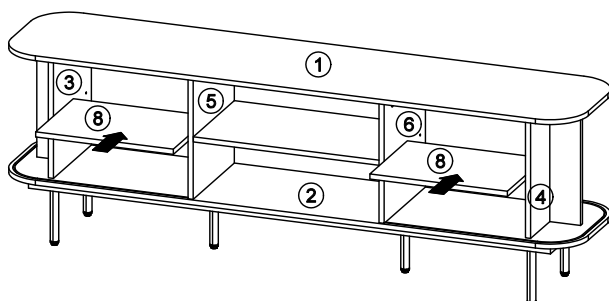


STEP 12

- Fix hardware H onto panel (12) by using hardware G.
(Repeat 2 times for each hardware.)

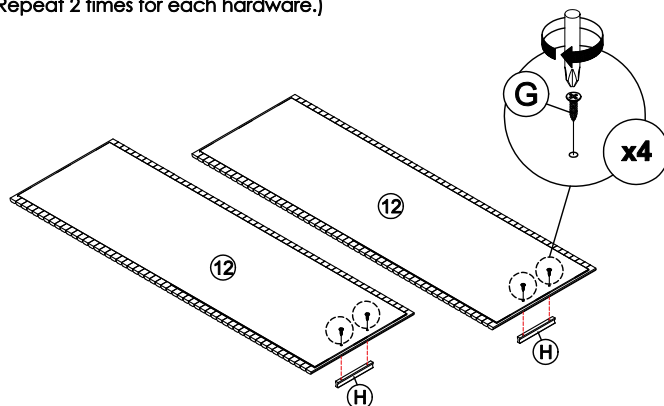


CODING
- 336103

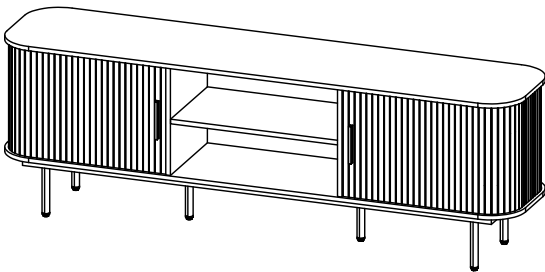

ISO 9001:2015
Reg. No. 000-03-1-017-1-Q008


STEP 13

- Insert panel (12) into grooves at panel (1) and (2).

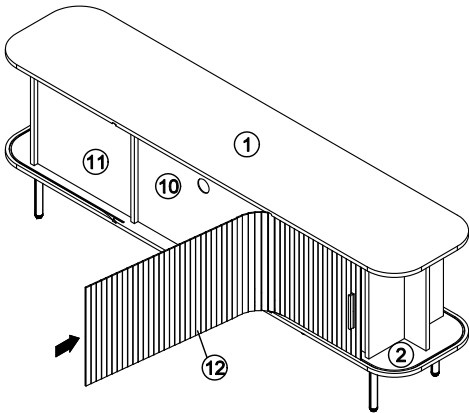

STEP 14

- Insert panel (12) into grooves at panel (1) and (2).

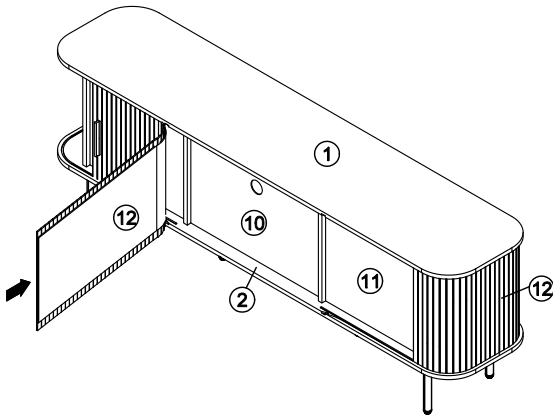

STEP 15

- Assemble the hardware F onto panel (1) and (2)
by using hardware E.
(Repeat 2 times for each hardware.)

