



CODING
- 336118





ISO 9001:2015
Reg. No. 00005-1-2017-1-Q008

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN’S REACH.

HARDWARE			
A	MINI FIX	A1  A2  A3 	8 SETS
B	M8 X 30MM WOOD DOWEL		16 PCS
C	M6 X 60MM CSK CAP WOOD SCREW		8 PCS
D	ALLEN KEY M4		1 PC
E	M3.5 X 16MM C.B SCREW		24 PCS
F	JCBC SCREW M6 X 70MM		8 PCS
G	SPRING WASHER M6		8 PCS
H	FLAT WASHER M6		8 PCS
I	METAL SHELF SUPPORT		4 PCS
J	STUB 192 WITH SCREW	J1  J2 	8 PCS
K	SOFT CLOSING 5/8 HINGES		4 PCS

TIPPING PACK WITH A1			2 SETS
----------------------	---	---	--------

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
 SCREWDRIVER	 HAMMER

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	CENTER PANEL (L)	1 PC
6	CENTER PANEL (R)	1 PC
7	SHELF PANEL	1 PC
8	BACK PANEL (CTR)	1 PC
9	BACK PANEL (SIDE)	2 PCS
10	DOOR PANEL	2 PCS
11	CABINET LEG	4 PCS

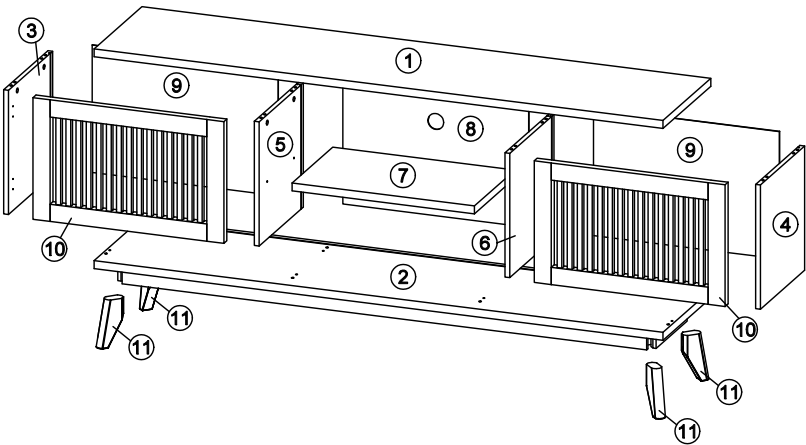


CODING
- 336118



ISO 9001:2015
Reg. No. 00003-1-2017-1-Q008


STEP 1

- Insert hardware **A2** onto panel **(1)**.
(Repeat 8 times.)
- Insert hardware **B** into panel **(3), (4), (5)** and **(6)**.
(Repeat 16 times.)

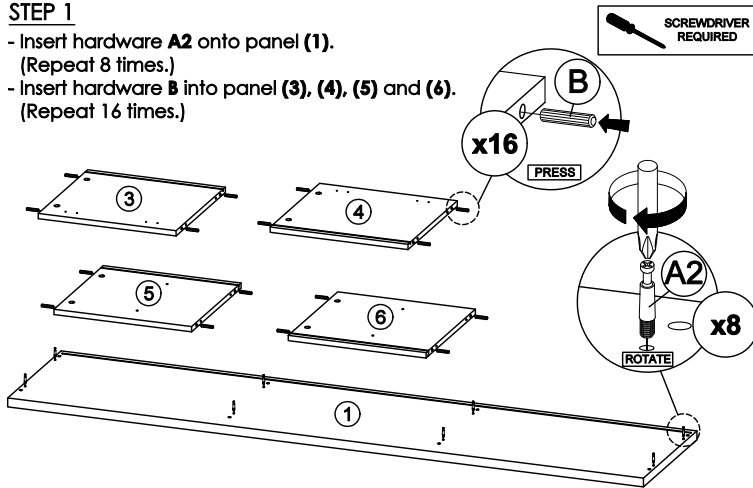


STEP 2

- Insert hardware **A1** into panel **(3), (4), (5)** and **(6)**.
(Repeat 8 times.)
- Attach panel **(3), (4), (5)** and **(6)** to panel **(1)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 8 times.)

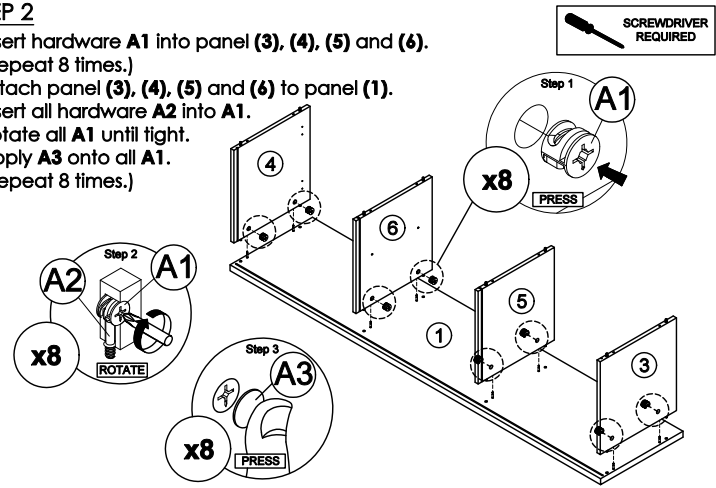


STEP 3

- Insert the panel **(8)** and **(9)** along the slot.
(Repeat 3 times.)

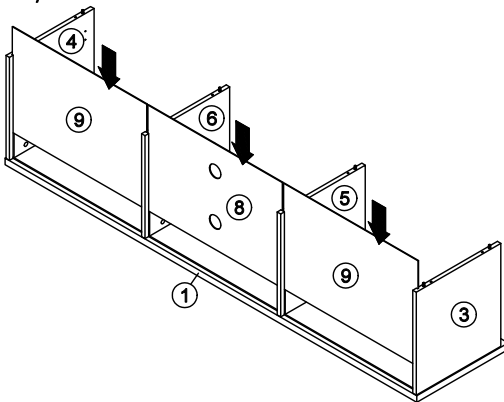


STEP 4

- Connect panel **(2)** to panel **(3), (4), (5)** and **(6)** by using hardware **C** and **D**.
(Repeat 8 times.)

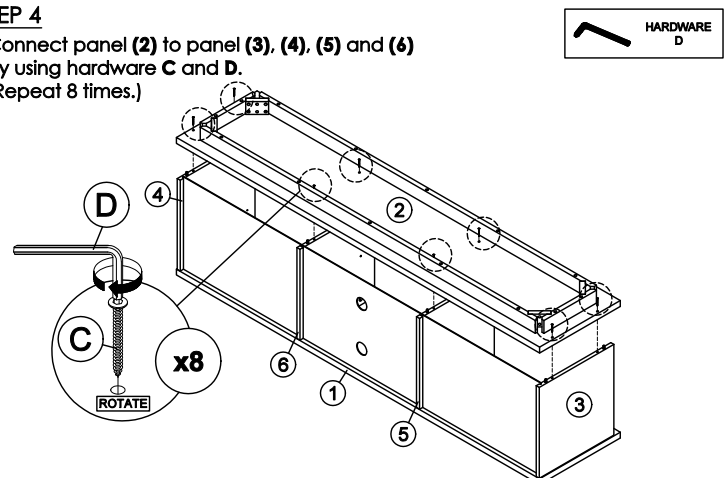


STEP 5

- Fix legs **(11)** to panel **(2)** by using hardware **D, F, G** and **H**.
(Repeat 8 times.)

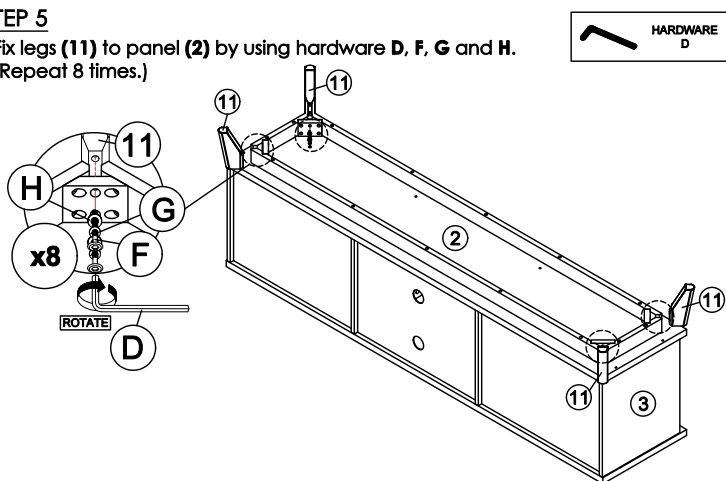

STEP 6

- Insert hardware **J1** into slot at panel **(1), (2), (3), (4), (5)** and **(6)**.
- Assemble hardware **J1** by using hardware **J2**.
(Repeat 8 times.)

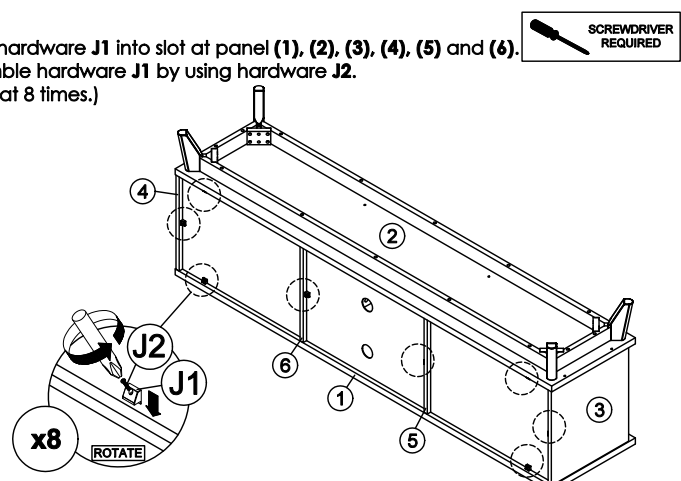


CODING
- 336118



ISO 9001:2015
Reg. No. 00035-1-2017-1-Q008


STEP 7

- Insert hardware **I** into mounting positions on panel **(5)** and **(6)** by hand.
(Repeat 4 times.)

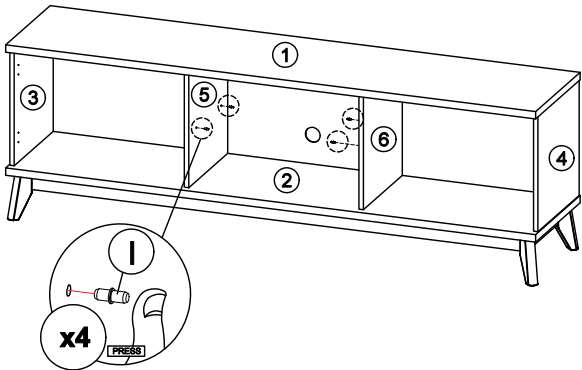


STEP 8

- Assemble the panel **(7)** into between panel **(5)** and **(6)**.

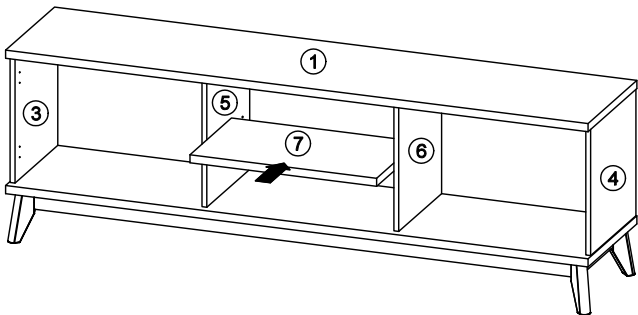

STEP 9

- Fix hardware **K** onto panel **(10)** by using hardware **E**.
(Repeat 2 times for each hardware.)

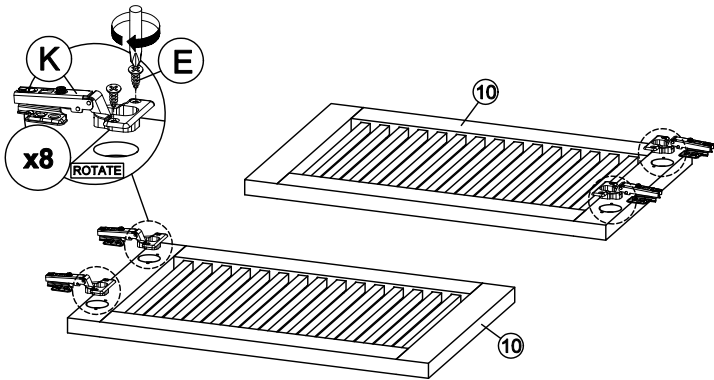

STEP 10

- Fix hardware **K** into panel **(3)** and **(4)** by using hardware **E**.
(Repeat 4 times for each hardware.)
- Tighten or loosen the screw to adjust position of panel **(10)**.
(Do only when needed.)

