


CODING

-346030

-346042

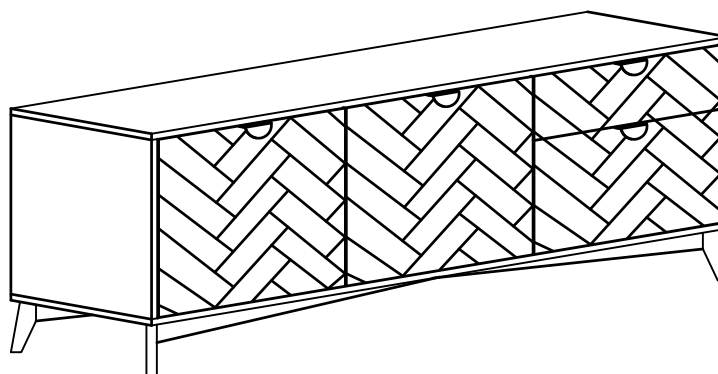


ISO 9001:2015
Reg. No. 000435-I-MY-I-QMS

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches .

Caution

KEEP ALL PARTS OUT OF REACH OF CHILDREN.


ITEM	HARDWARE LIST	QTY
(A)	JCBC SCREW M6 X 50MM 	5
(B)	SPRING WASHER 5/16" 	5
(C)	FLAT WASHER 5/16" 	5
(D)	ALLEN KEY M5 	1
(E)	HANDLE 	4
(F)	SCREW M3.5 X 20MM 	8

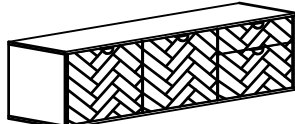ITEM	PART LIST	QTY
(1)	BODY 	1
(2)	TABLE LEG 	2
(3)	SUPPORT LEG 	1

CODING


-346030

-346042

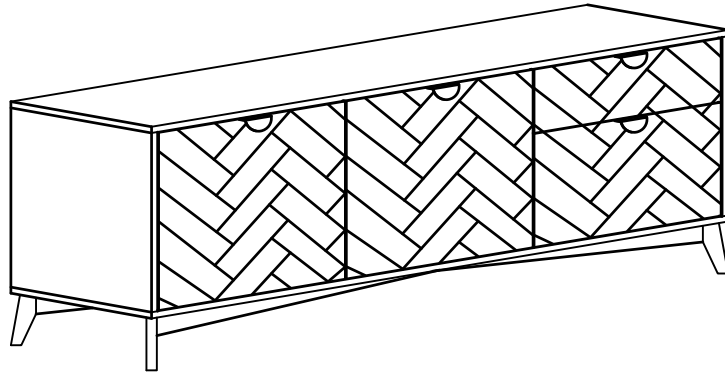


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

1

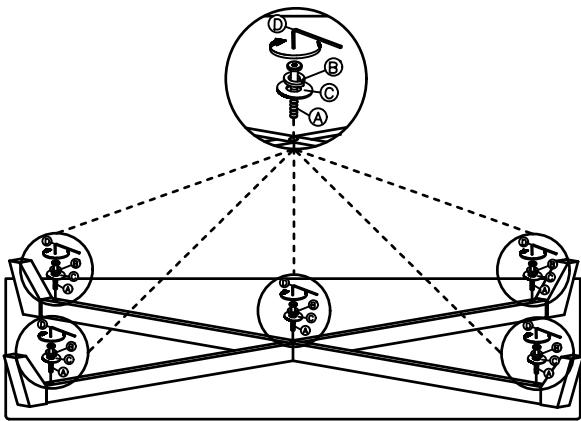

2

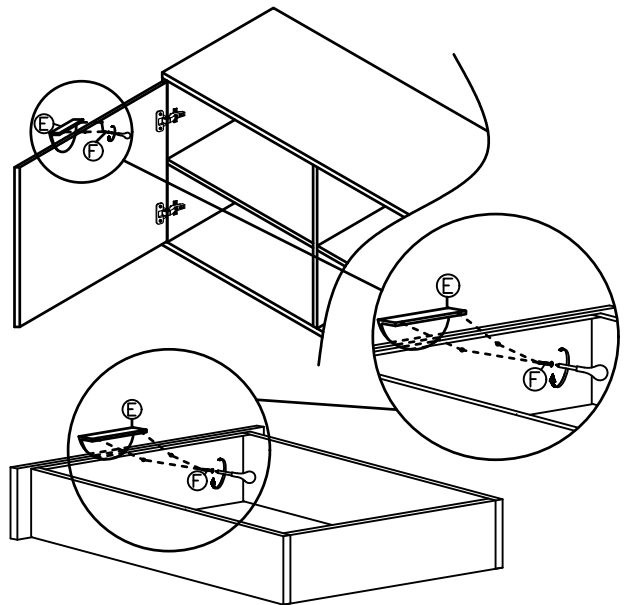

2

