



CODING
- 353030

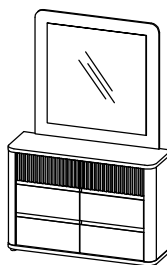

ISO 9001:2015
Reg. No. 000435-1-007-1-QMS

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

HARDWARE			
A	MINI FIX	A1  A2  A3 	54 SETS
B	M8 X 30MM WOOD DOWEL		66 PCS
C	M6 X 50MM CSK CAP WOOD SCREW		2 PCS
D	M6 X 60MM CSK CAP WOOD SCREW		6 PCS
E	ALLEN KEY M4		1 PC
F	M4 X 38MM C.B SCREW		24 PCS
G	M4 X 30MM C.B SCREW		5 PCS
H	M3.5 X 16MM C.B SCREW		88 PCS
I	PAN HEAD SCREW M4 X 16MM		4 PCS
J	JCBC SCREW M6 X 35MM		10 PCS
K	ONE HOLE L BRACKET (2MM)		8 PCS
L	25MM SOFA LEG		5 PCS
M	12" DRAWER SLIDE	 M1 (L/R) M2 (L/R)	6 SETS
TIPPING PACK WITH A1    			2 SETS


PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L&R)	2 PCS
4	SIDE SUPPORT (L)	1 PC
5	SIDE SUPPORT (R)	1 PC
6	LEG CORNER	2 PCS
7	CENTER PANEL	1 PC
8	BACK SUPPORT	1 PC
9	BACK PANEL	1 PC
10	MIDDLE BONE	4 PCS
11	MIRROR PANEL	1 PC
12	BACK SUPPORT BAR	2 PCS
13	DRAWER FRONT UP (L)	1 PC
14	DRAWER FRONT UP (R)	1 PC
15	DRAWER FRONT DOWN (L)	2 PCS
16	DRAWER FRONT DOWN (R)	2 PCS
17	DRAWER BACK	6 PCS
18	DRAWER SIDE (L)	6 PCS
19	DRAWER SIDE (R)	6 PCS
20	DRAWER BOTTOM	6 PCS
21	DRAWER BONE	6 PCS

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
 SCREWDRIVER	 HAMMER

CODING
- 353030

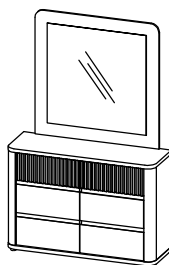


ISO 9001:2015
Reg. No. 000435-1-KTY-1-QMS

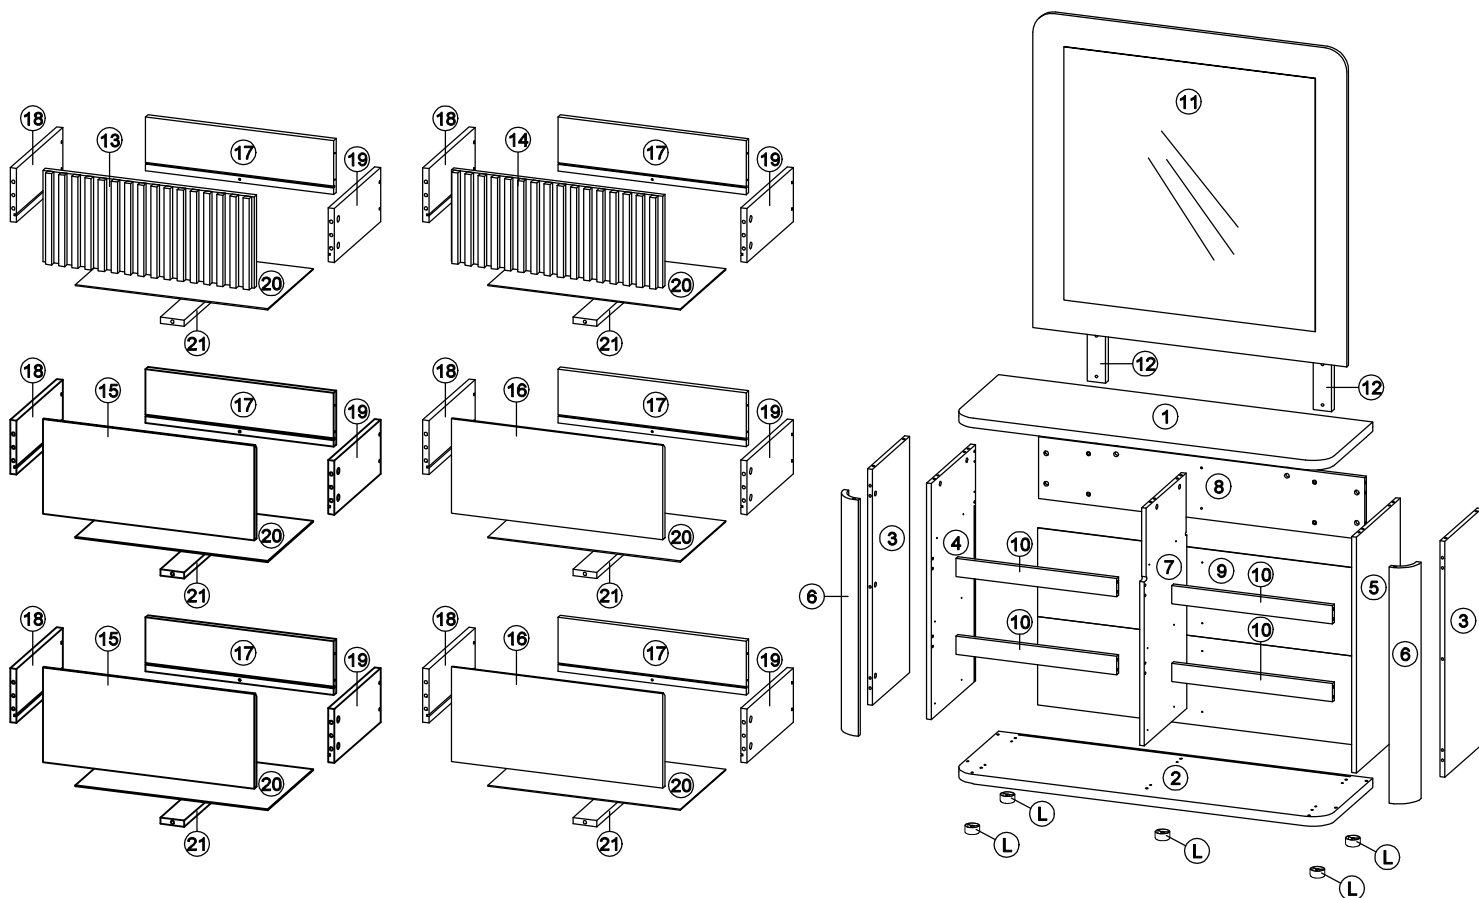


STEP 1

- Insert hardware **A2** onto panel (4), (5) and (6).
(Repeat 10 times.)
- Insert hardware **B** into panel (3), (4), (5), (6), (7), (8), (10), (12), (18) and (19).
(Repeat 66 times.)
- Assemble the hardware **K** onto panel (10) by using hardware **H**.
(Repeat 1 times for each hardware.)

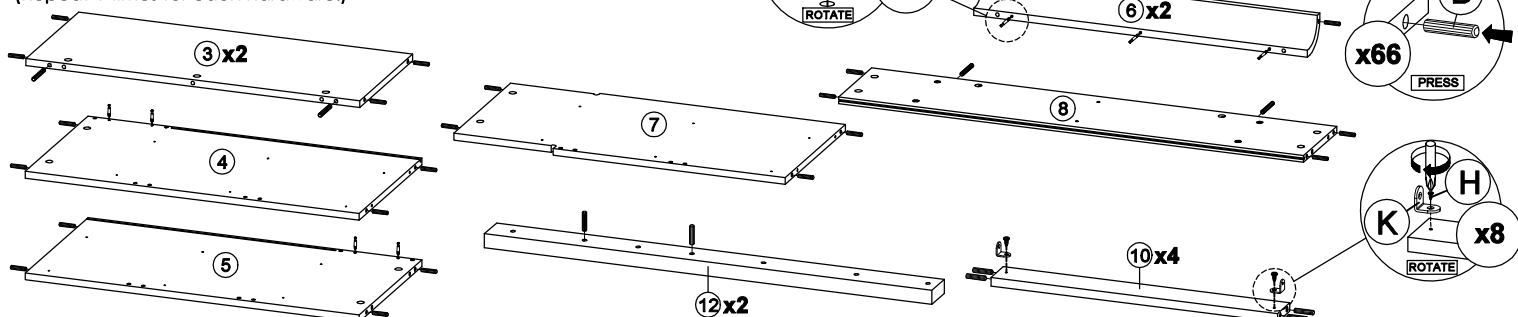


CODING - 353030

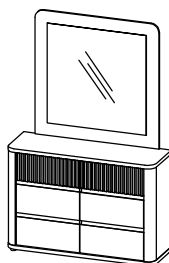

ISO 9001:2015
Reg. No. 000435-1-KTY-1-QMS


STEP 2

- Insert hardware **A2** onto panel (1), (13), (14), (15), (16) and (17).
(Repeat 44 times.)

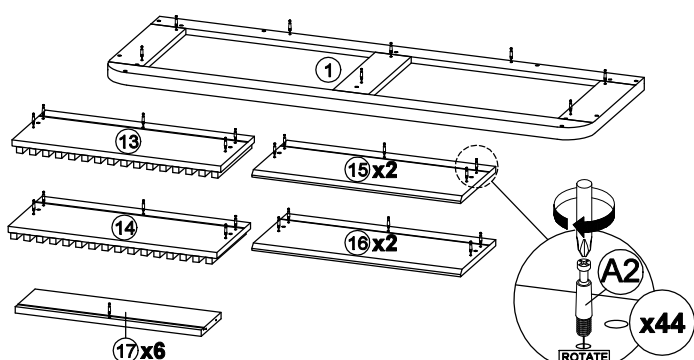


STEP 4

- Fix hardware **M1 (R)** onto panel (7) with hardware **H**.
(Repeat 3 times for each hardware.)

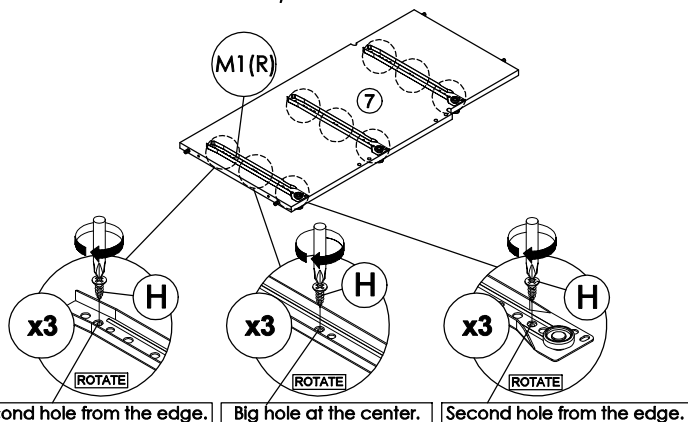


STEP 6

- Attach panel (10) to panel (7).
(Repeat 4 times.)
- Assemble hardware **K** on panel (10) to panel (7)
by using hardware **H**.
(Repeat 4 times.)

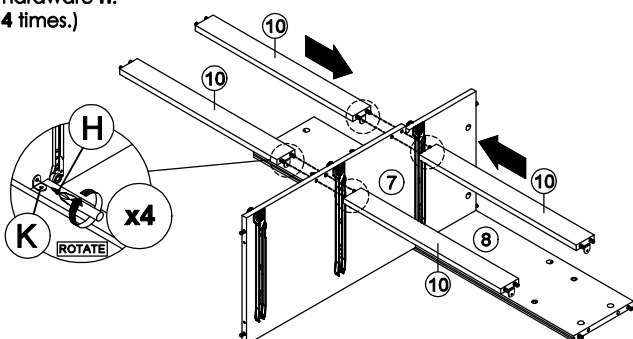


STEP 3

- Fix hardware **M1 (L/R)** onto panel (4), (5) and (7) with hardware **H**.
(Repeat 3 times for each hardware.)

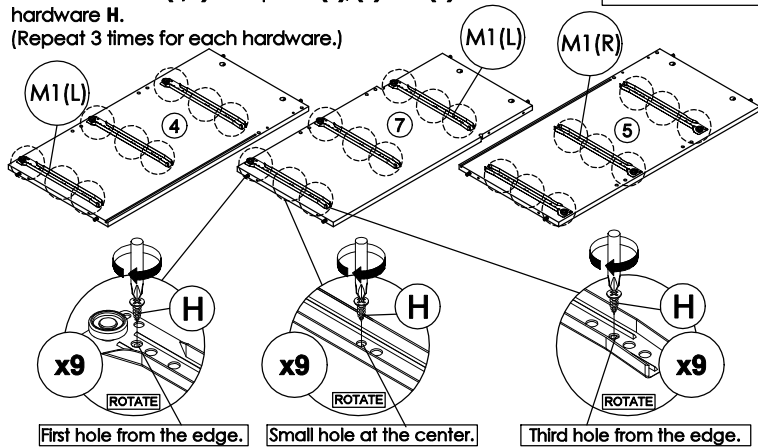


STEP 5

- Connect panel (8) to panel (7) by using hardware **C** and **E**.
(Repeat 2 times.)

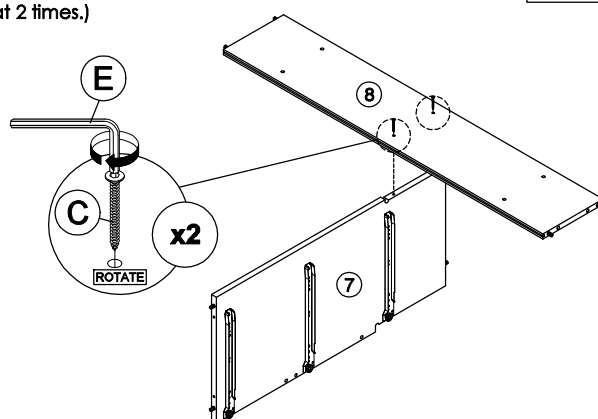


STEP 7

- Insert hardware **A1** into panel (8).
(Repeat 4 times.)
- Attach panel (4) and (5) to panel (8) and (10).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)

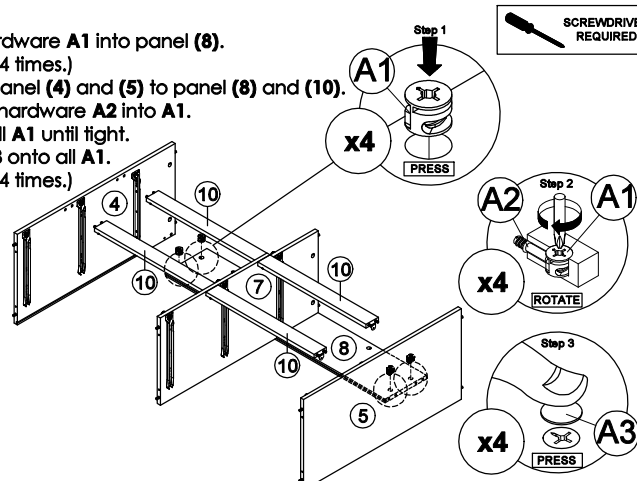


CODING - 353030

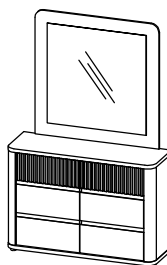

ISO 9001:2015
Reg. No. 000435-1-KTY-1-QMS


STEP 8

- Attach panel (4) and (5) to panel (10).
(Repeat 4 times.)
- Assemble hardware K on panel (10) to panel (4) and (5) by using hardware H.
(Repeat 4 times.)

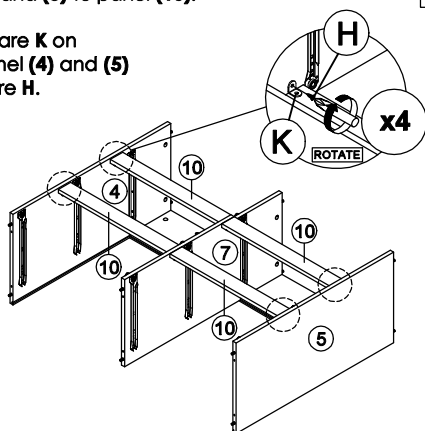


STEP 9

- Insert hardware A1 into panel (3).
(Repeat 6 times.)
- Attach panel (6) to panel (3).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1.
(Repeat 6 times.)

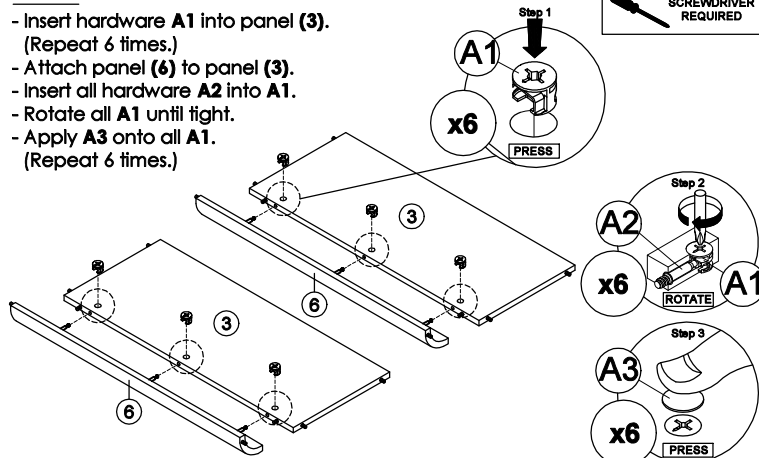


STEP 10

- Insert hardware A1 into panel (4), (5), (7) and (8).
(Repeat 8 times.)
- Attach panel (3), (4), (5), (6), (7), (8) to panel (1).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1.
(Repeat 8 times.)

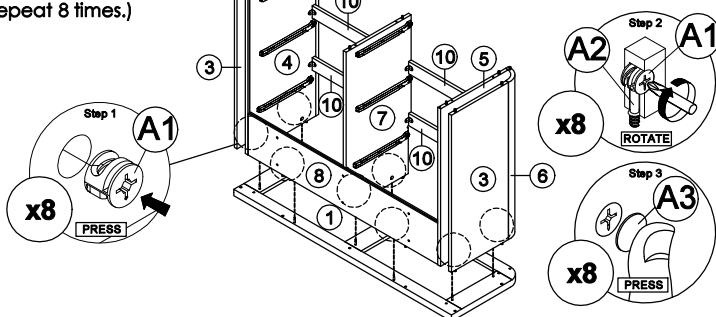


STEP 11

- Insert the panel (9) along the slot.

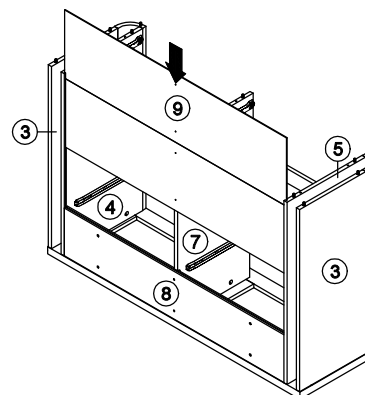


STEP 12

- Connect panel (2) to panel (3), (4), (5), (6) and (7) by using hardware D and E.
(Repeat 6 times.)

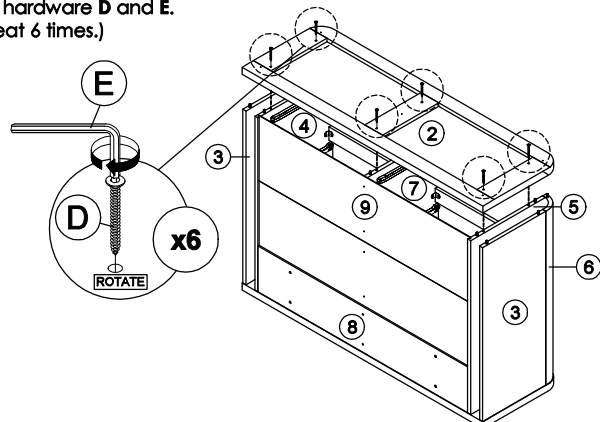


STEP 13

- Connect panel (9) to panel (7) by using hardware I.
(Repeat 4 times.)

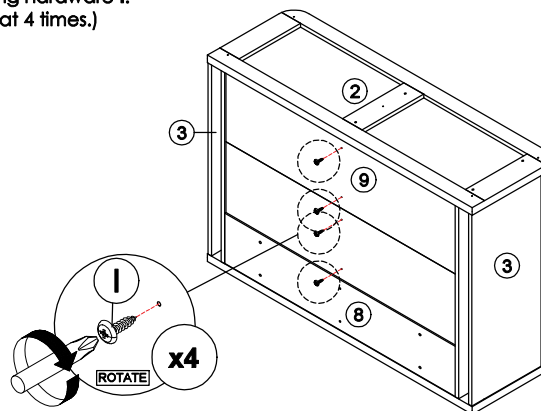


CODING
- 353030

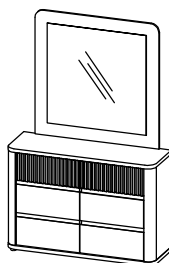

ISO 9001:2015
Reg. No. 000435-1-KTY-1-QMS


STEP 14

Fix hardware **L** onto panel **(2)** by using hardware **G**.
(Repeat 5 times.)

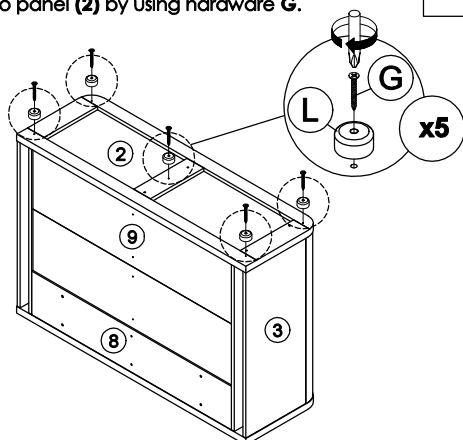


STEP 15

Assemble panel **(18)** and **(19)** with panel **(17)**
by using hardware **F**.
(Repeat 24 times.)

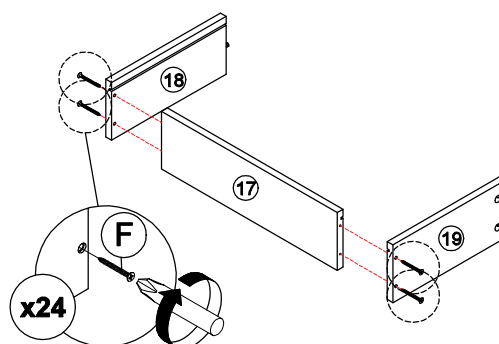

STEP 16



Insert the panel **(20)** along the slot.
(Repeat 6 times.)

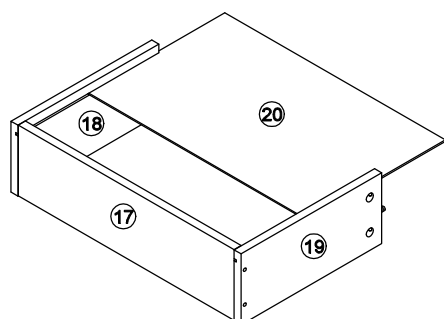

x6

STEP 17


- Insert hardware **A1** into panel **(21)**.
(Repeat 6 times.)
- Attach panel **(21)** to panel **(17)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 6 times.)

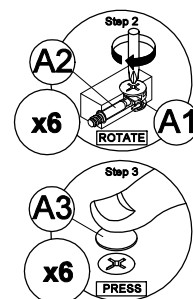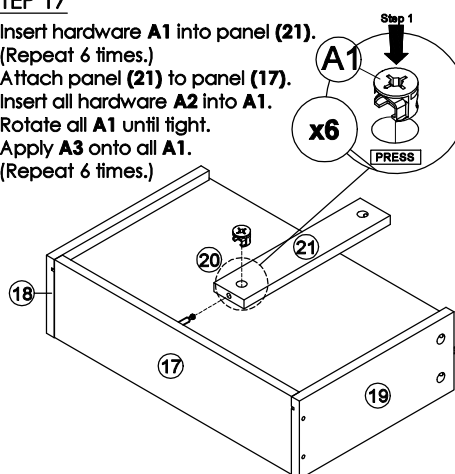

x6



STEP 18

- Insert hardware **A1** into panel **(18)** and **(19)**.
(Repeat 10 times.)
- Attach panel **(13)** and **(14)** to panel **(18)** and **(19)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 10 times.)

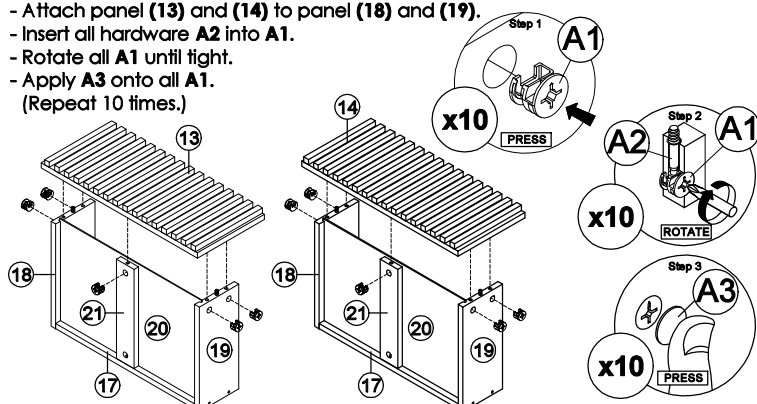


STEP 19

- Insert hardware **A1** into panel **(18)** and **(19)**.
(Repeat 20 times.)
- Attach panel **(15)** and **(16)** to panel **(18)** and **(19)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 20 times.)

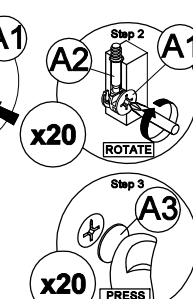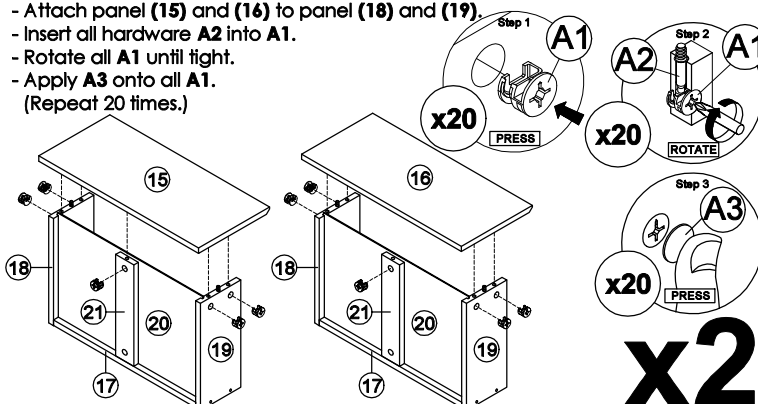

x2


CODING
- 353030

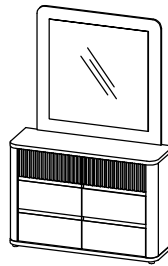

ISO 9001:2015
Reg. No. 000435-1-KTY-1-QMS


STEP 20

Assemble hardware **M2 (L/R)** to panel **(18)** and **(19)** by using hardware **H**.
(Repeat 3 times for each hardware.)

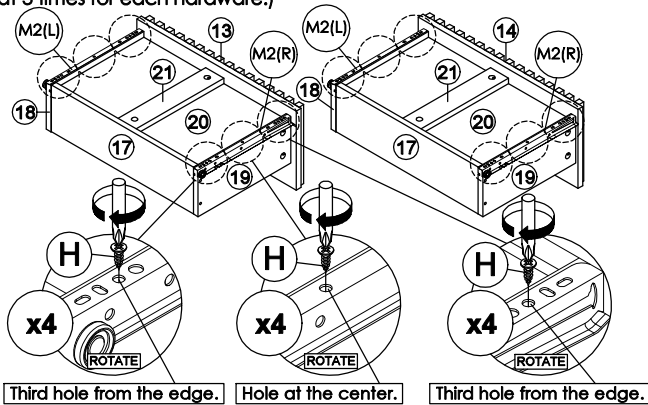


STEP 22

Put all the drawer in place along the drawer slides.

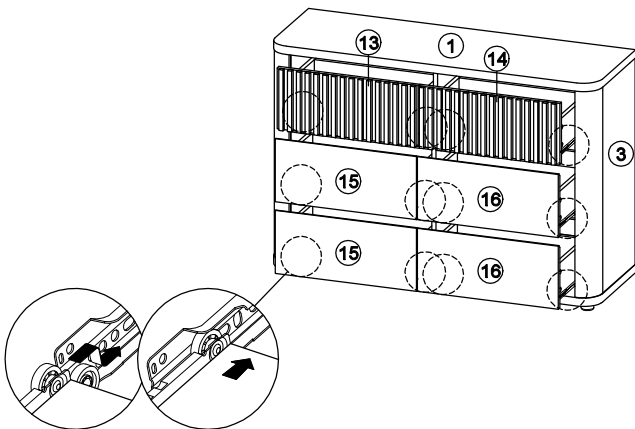


STEP 24

- Connect panel **(12)** to panel **(8)** by using hardware **E** and **J**.
(Repeat 4 times.)

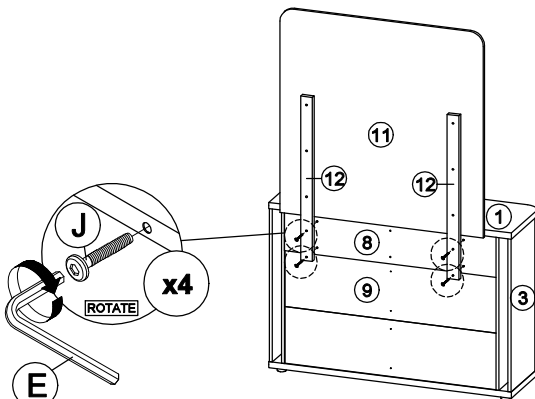

STEP 21

Assemble hardware **M2 (L/R)** to panel **(18)** and **(19)** by using hardware **H**.
(Repeat 3 times for each hardware.)

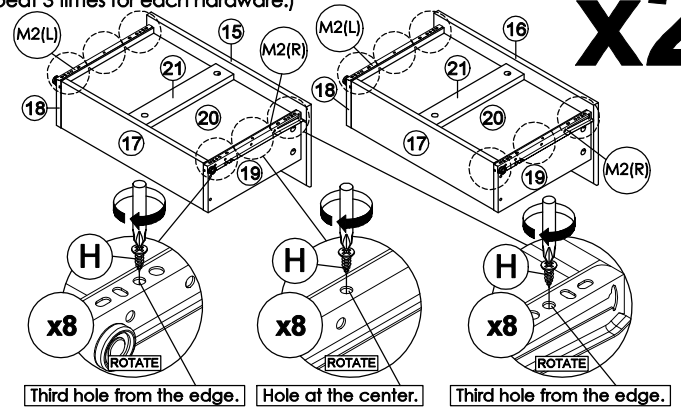

STEP 23

- Connect panel **(12)** to panel **(11)** by using hardware **E** and **J**.
(Repeat 6 times.)

