


Cartoon Cabinet

CODING

- 354012 - 354021
- 354013 - 354022
- 354014 - 354023
- 354015 - 354024
- 354019 - 354027
- 354020 - 354028

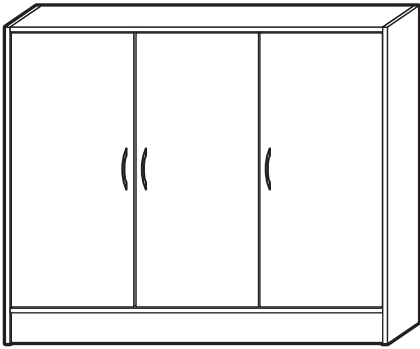






ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN’S REACH.

ITEM	HARDWARE LIST		QTY
①		M5 x 40mm JCBCW Screw	18
②		M4 x 25mm Chipboard Screw	6
③		M3.5 x 16mm Chipboard Screw	14
④		M3 x 12mm Chipboard Screw	9
⑤		Nail	50
⑥		Wood Dowel 6 x 25mm	28
⑦		Minifix Pin	1
⑧		Minifix Cam	1
⑨		Magnet	3
⑩		Magnet Plate	3
⑪		Door Holder (L)	6
⑫		Square Leg (End)	4
⑬		Square Leg (Center)	2
⑭		L Bracket	2
⑮		Handle (1009)	3
⑯		Shelf Support	7
⑰		Aluminium Pipe	1


ITEM	PART LIST		QTY
Ⓐ	Left Side Panel		1
Ⓑ	Right Side Panel		1
Ⓒ	Center Panel		1
Ⓓ	Shelf (S) Panel		2
Ⓔ	Shelf (B) Panel		1
Ⓕ	Top Panel		1
Ⓖ	Bottom Panel		1
Ⓗ	Bottom Panel		2
Ⓘ	Back Panel (MDF)		3
Ⓙ	Door Panel		3

Cartoon Cabinet

ASSEMBLY GUIDE


CODING

- 354012 - 354021
- 354013 - 354022
- 354014 - 354023
- 354015 - 354024
- 354019 - 354027
- 354020 - 354028

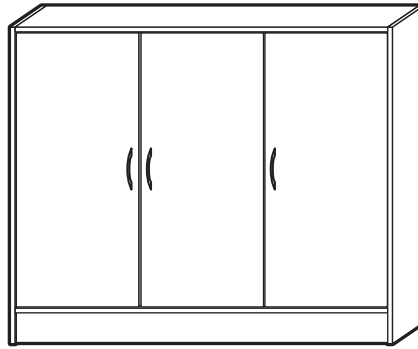


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


Step 1

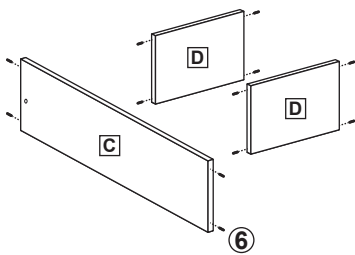


Step 2

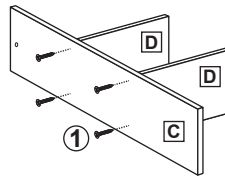


Step 3

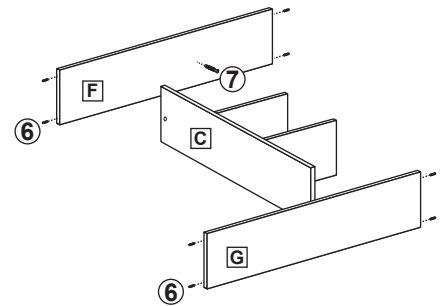


Step 4

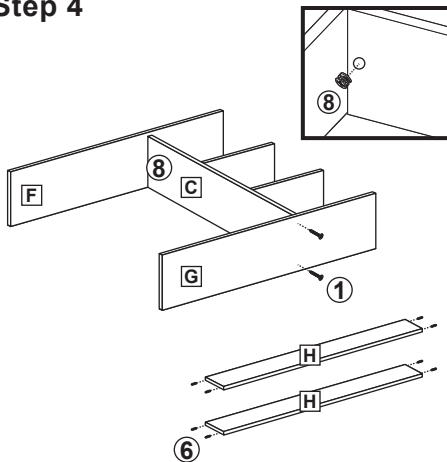


Step 5

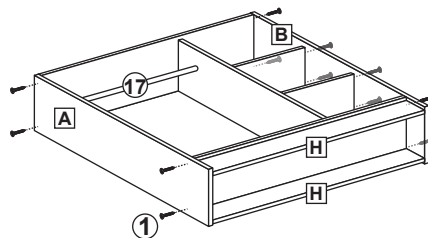

Step 6

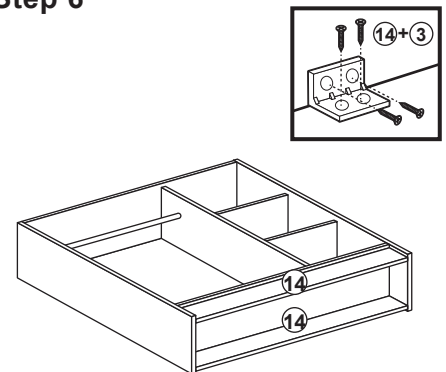

Step 7

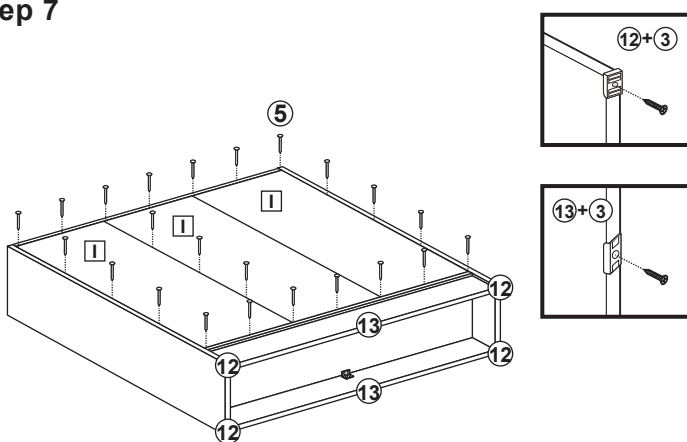

Step 8

