


CODING
-355021

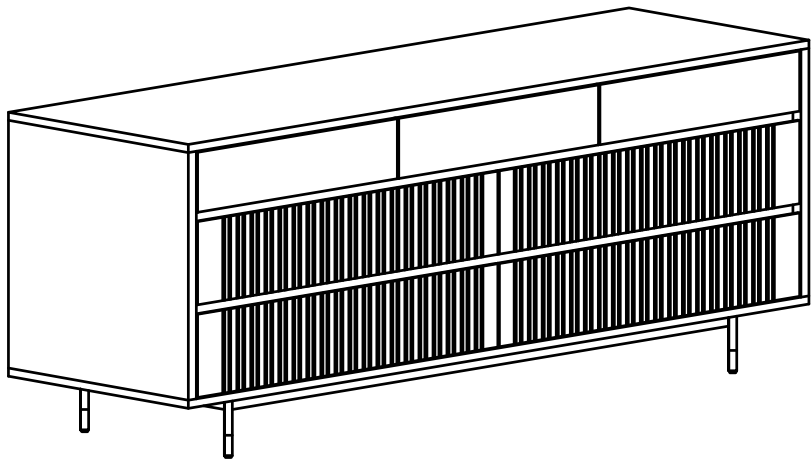


ISO 9001:2015
Reg. No. 000435-I-MY-I-QMS

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches .


Caution
KEEP ALL PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST	QTY
Ⓐ	JCBC SCREW M8 X 20MM 	8
Ⓑ	JCBC SCREW M6 X 15MM 	2
Ⓒ	SPRING WASHER 5/16" 	10
Ⓓ	FLAT WASHER 5/16" 	10
Ⓔ	ALLEN KEY 4MM 	1
Ⓕ	ALLEN KEY 5MM 	1

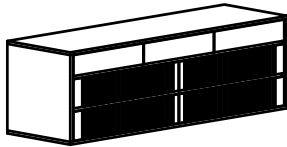ITEM	PART LIST	QTY
①	BODY 	1
②	LEG 	2


CODING

-355021

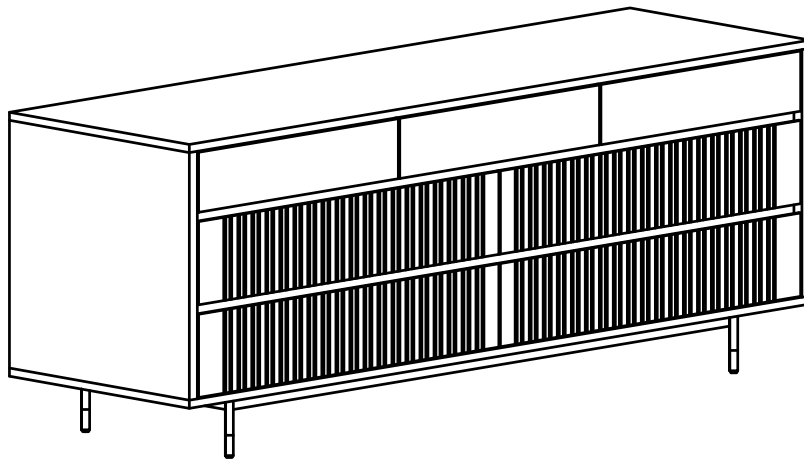

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

1

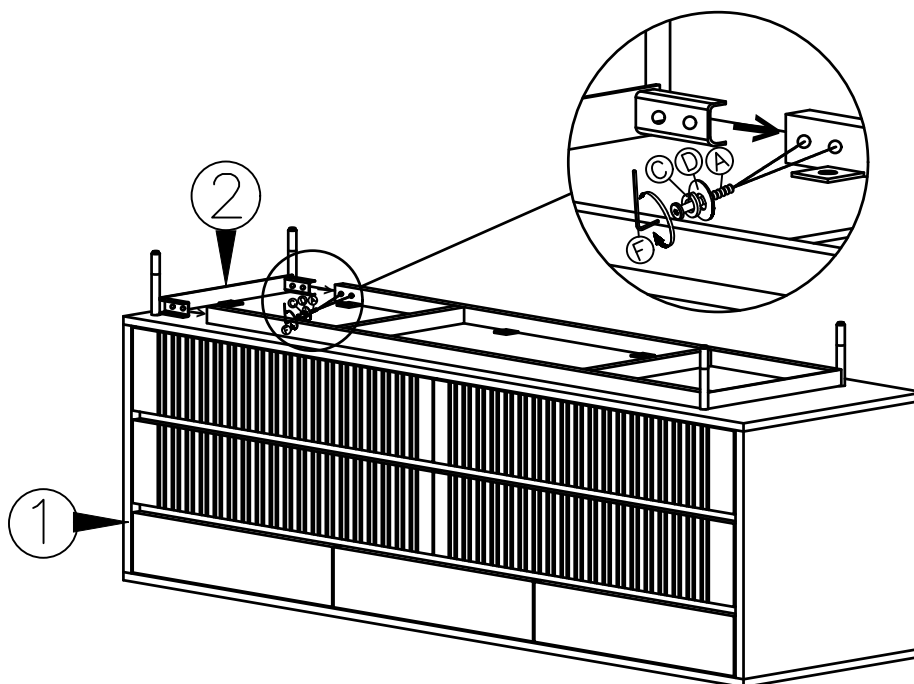

2

