

CODING

- 372036
- 372037
- 372025



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HAREWARE NAME	QTY
(A)		MINIFIX	10
(B)		CAM 15/12	10
(C)		DOWEL Ø8 X 30MM	10
(D)		UNITAR SCREW	6
(E)		CSK SCREW M3.5 X 15MM	57
(F)		CSK SCREW 3.1 X 20	10
(G)		CSK SCREW (4.7 x 38mm)	4
(H)		CSK SCREW (4 x 25mm)	16
(I)		SOFT CLOSE HINGES 7/8	2 SET
(J)		EXTENSION DRAWER SLIDE	1 SET

ITEM	PHOTO	HAREWARE NAME	QTY
(K)		SHOE RACK	2 SET
(L)		HANDLE (69 HOLE)	4
(M)		HANDLE SCREW (M4 X 22)	8
(N)		SHELF STOPPER (5mm)	8
(O)		TAPPIG SCREW (M6 X 20)	4
(P)		BACKPLY STOPPER	10
(Q)		SQUARE LEG	5
(R)		SAFETY STRAP	1
(S)		M4 ALLEN KEY	1


CODING

- 372036
- 372037
- 372025



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

ITEM	PARTS NAME	QTY
①	Side Panel	1
②	Side Panel	1
③	Center Panel	1
④	Top Panel	1
⑤	Bottom Panel	1
⑥	Shelves Panel	2
⑦	Back Support Panel	1
⑧	Front Drawer Panel	1
⑨	Front Shoe Rack Panel	2
⑩	Door Panel	1
⑪	Drawer side Panel	1
⑫	Drawer Side Panel	1
⑬	Drawer Back Panel	1
⑭	Shoe Rack Panel (Bottom)	2
⑮	Shoe Rack Panel (Mid)	2
⑯	Shoe Rack Panel (Back)	2
⑰	Back Panel	2
⑱	Back Panel	1
⑲	Drawer Panel	1




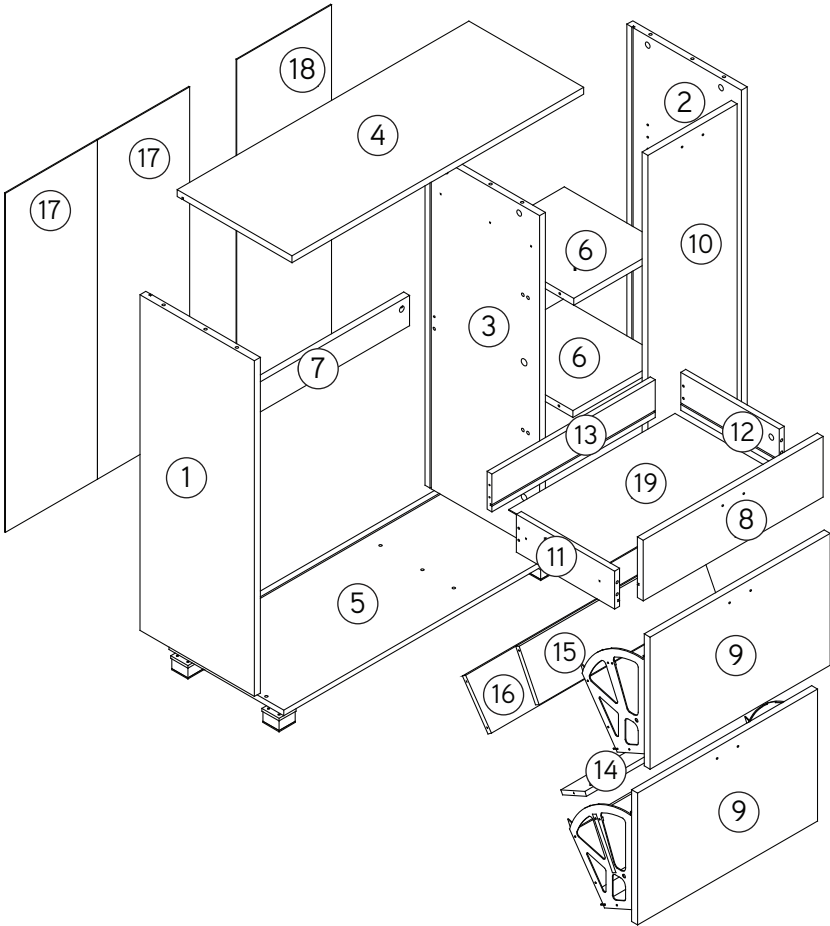


CODING

- 372036
- 372037
- 372025



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

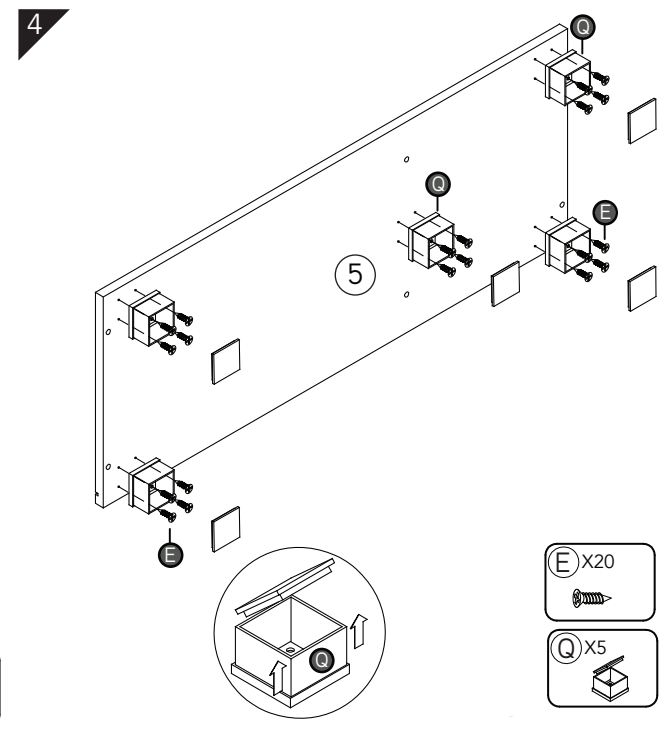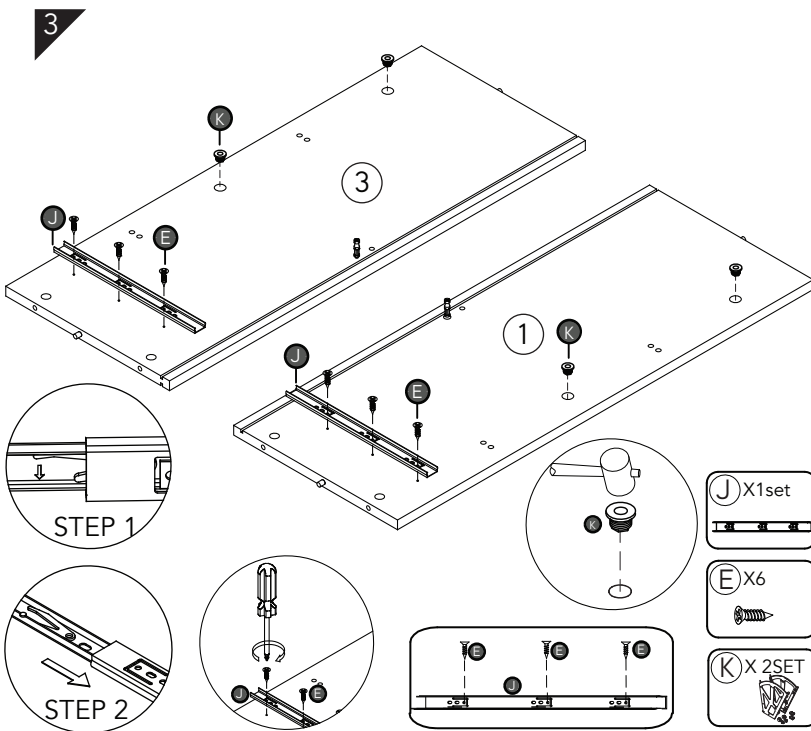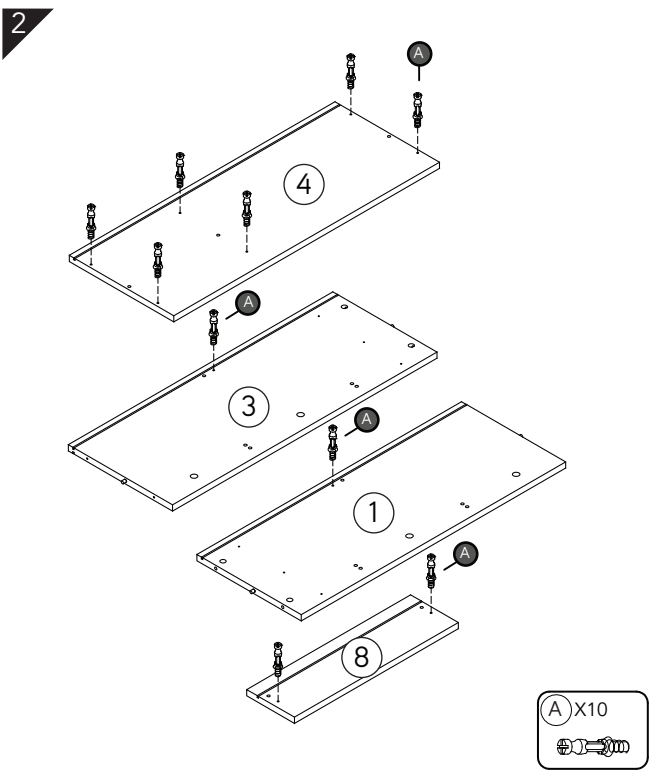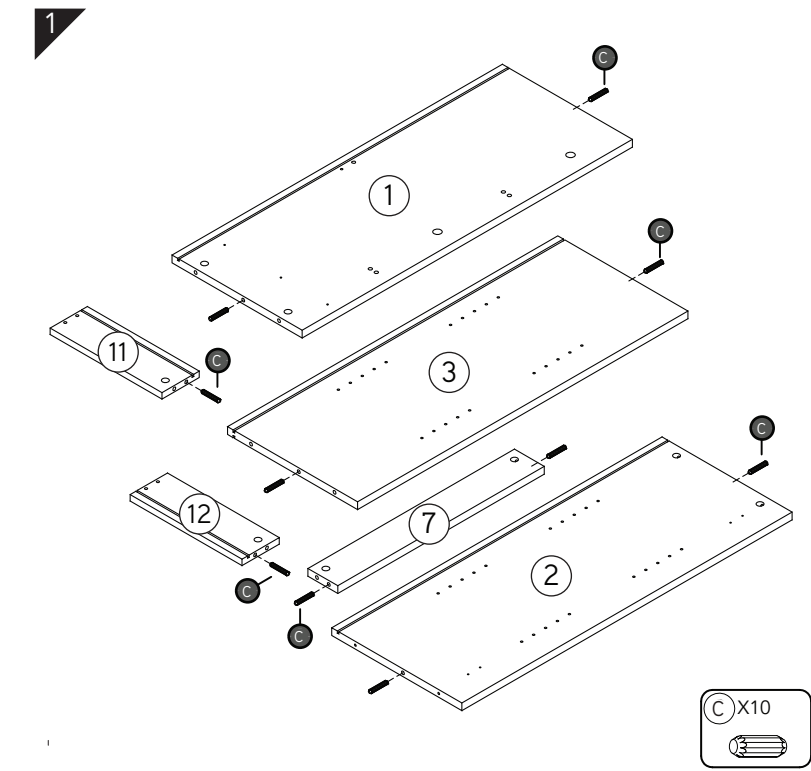


CODING

- 372036
- 372037
- 372025




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

5

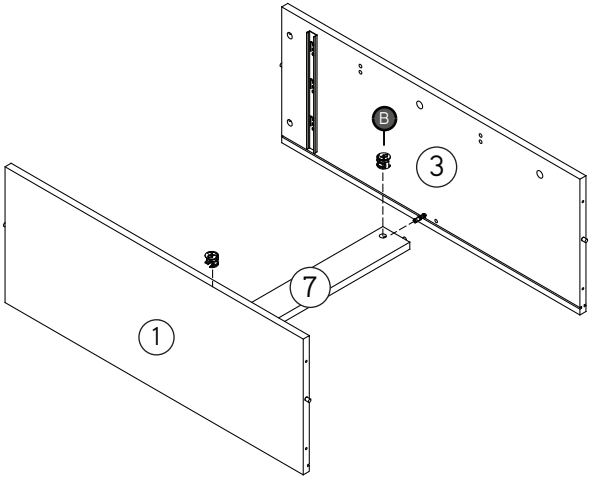


B x 2

6

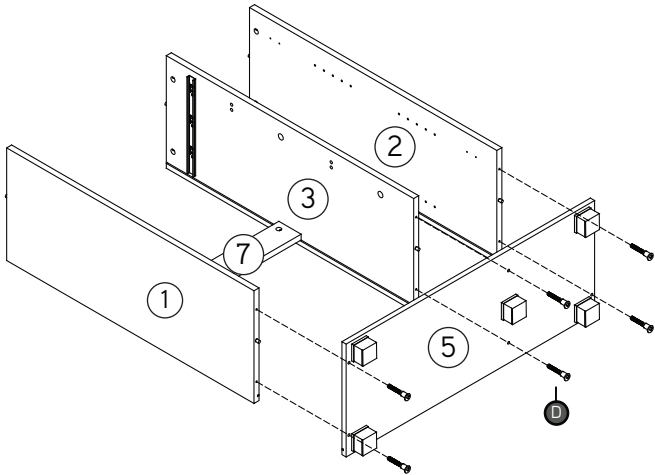


D x 6

7

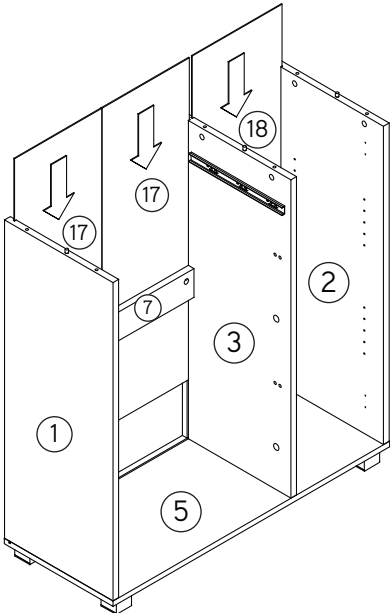

8

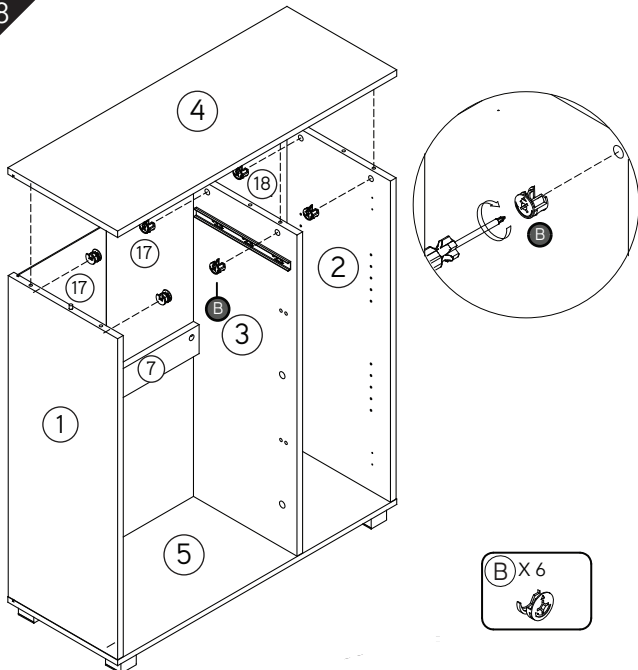

B x 6

CODING

- 372036
- 372037
- 372025



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

9

STEP A

X2

STEP B

X2

STEP C

X2

M X4

H X12

L X2

E X12

K X 2SET

10

X2

O X4

K X 2SET

11

X2

H X4

12

X2

K X 2SET


CODING

- 372036
- 372037
- 372025





ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS




13

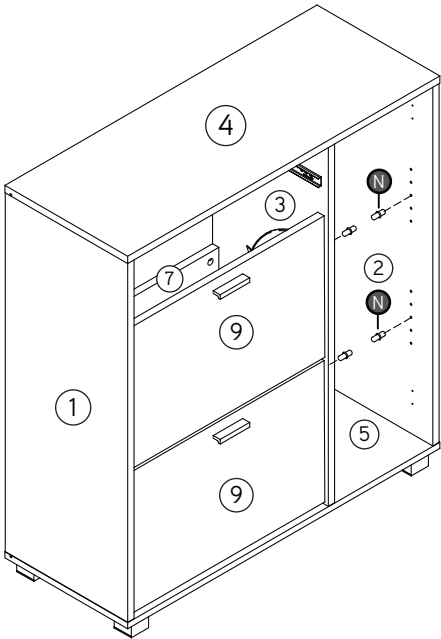


14

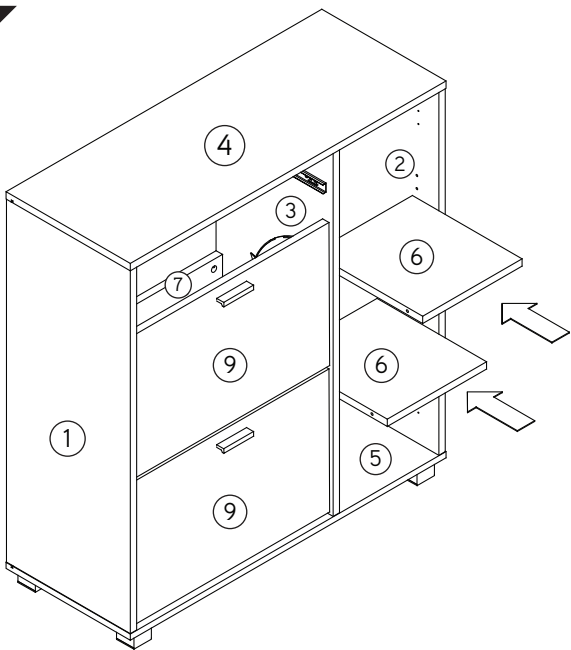

15

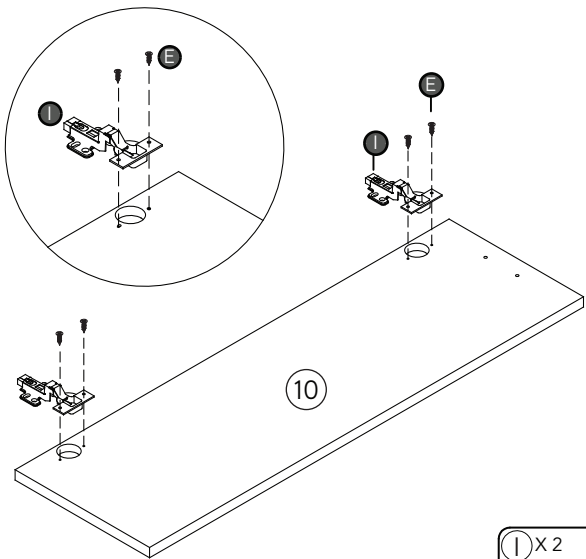

16




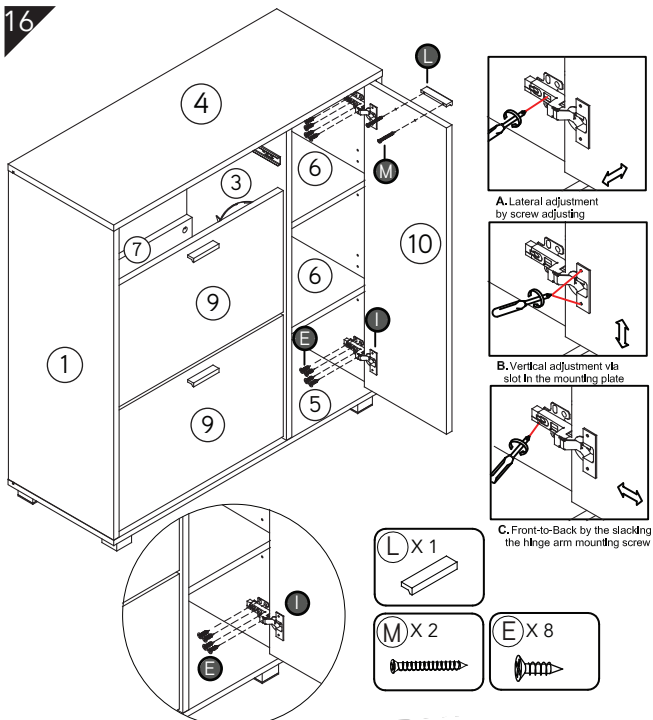


CODING

- 372036
- 372037
- 372025



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

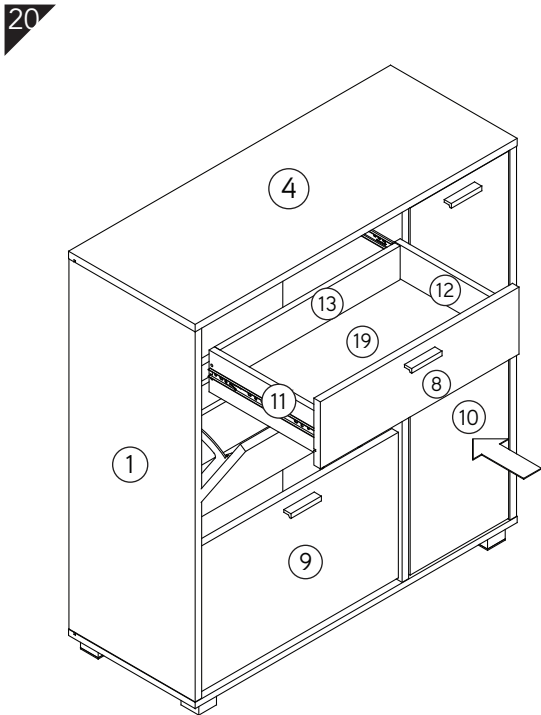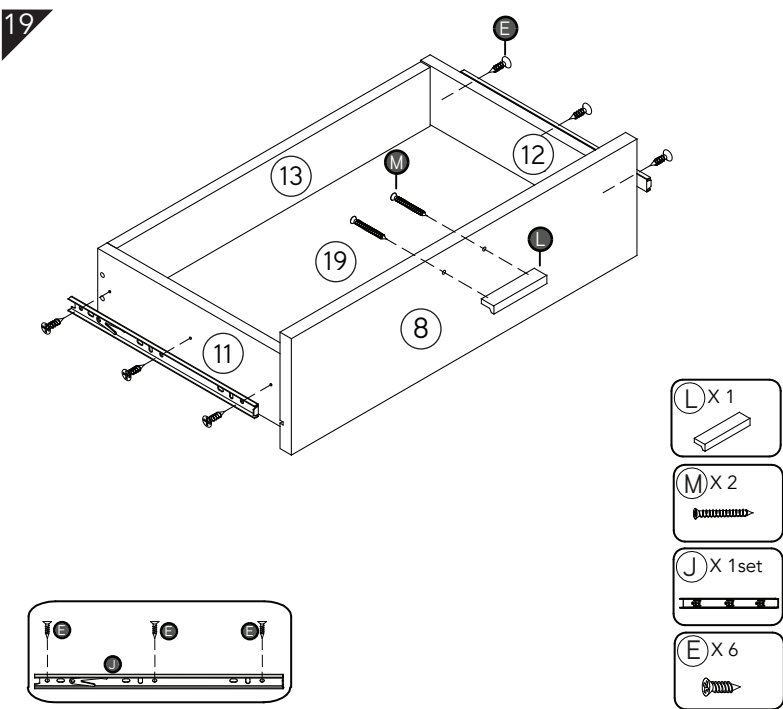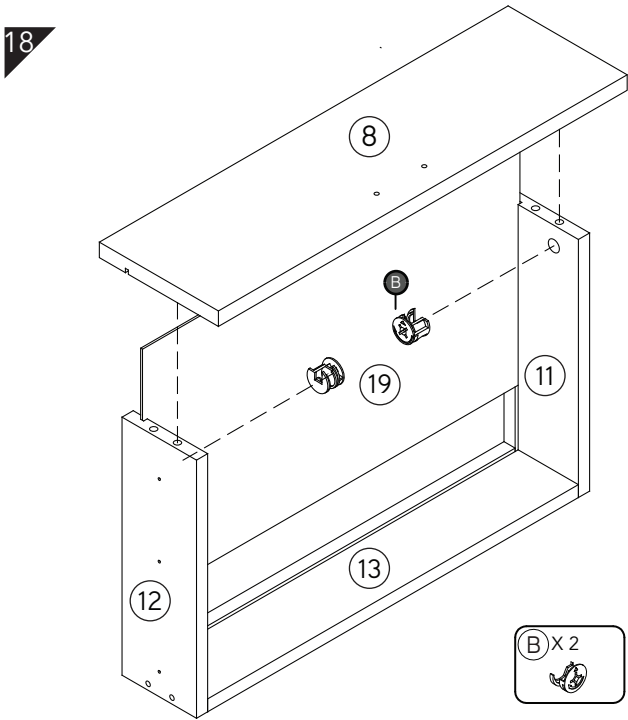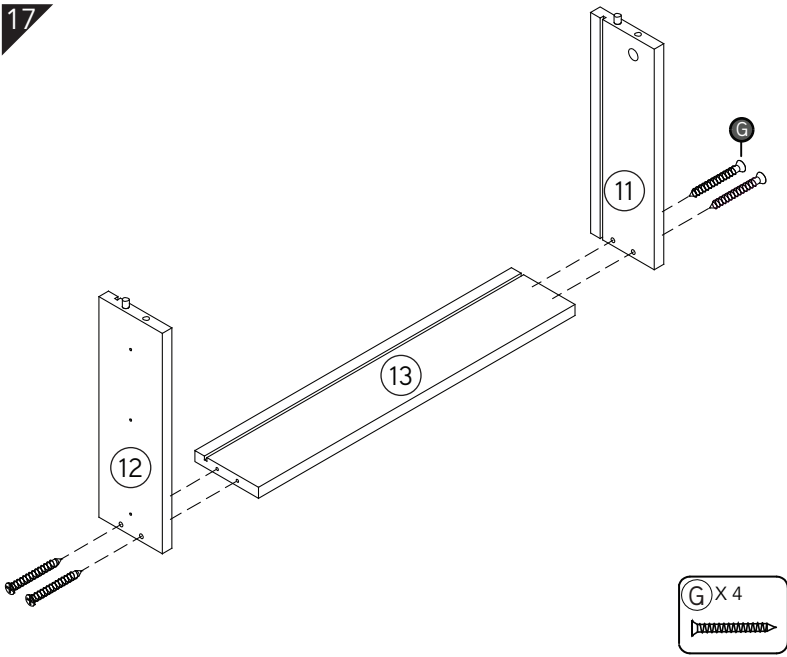



CODING

- 372036
- 372037
- 372025



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

21

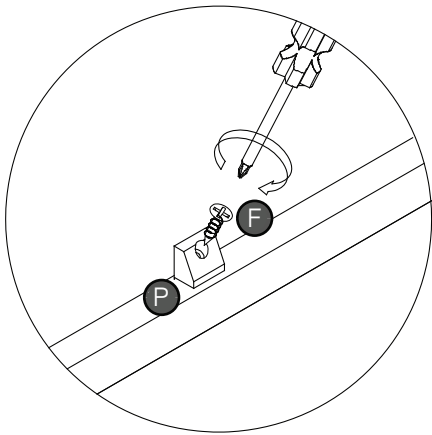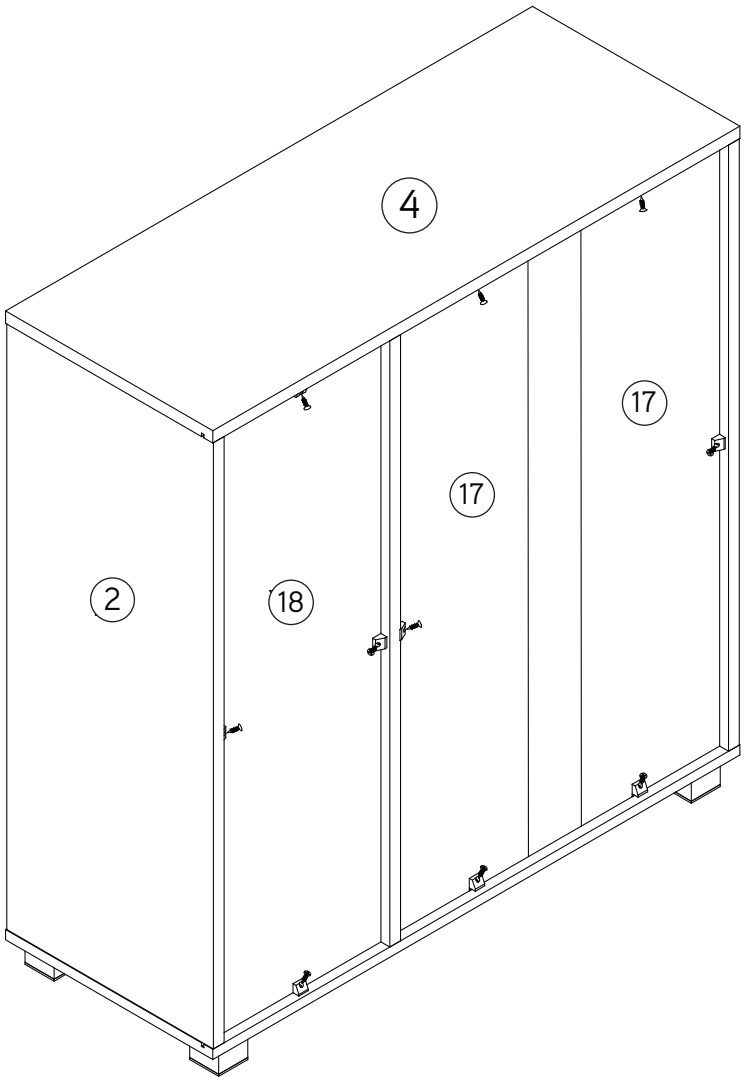

CODING

- 372036
- 372037
- 372025




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

FITTING OF ANTI-TIP SAFETY STRAP


STEP 1:

Push the screw and make hole on top panel of your furniture

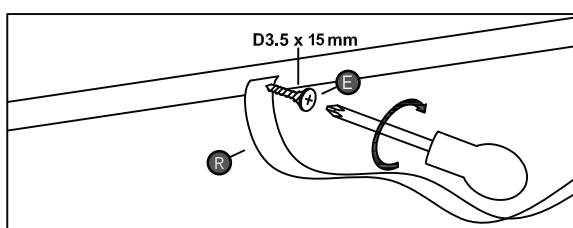


STEP 2:

Make a hole on the wall and pull the wall plug in

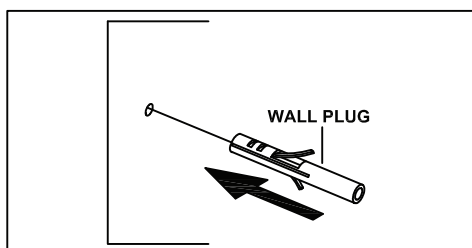

STEP 3:

Pull the screw in the wall plug hole

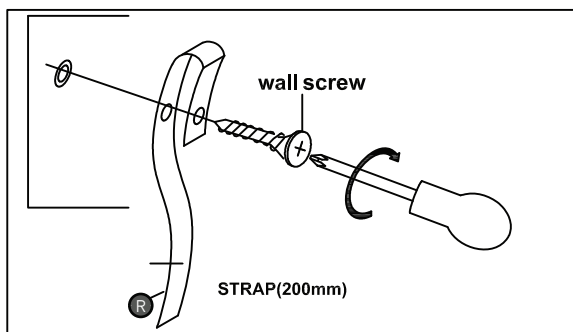

NOTE : Wall fixing are not supplied with this product as different wall materials require different types of fixing devices (such as Rawl plugs on brick work). You must use fixing devices suitable for the type of wall you intend to mount this product to. Please ensure that the head of any screw used has a diameter greater than the diameter of the mounting hole on the product and that the fixing is safe and secure before use.

The straps and screws which to fix the strap on to the furniture are provided only.

HARDWARE LIST



STRAP(200mm)-1Pc

