


CODING
- 372065

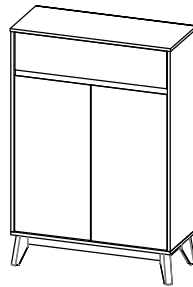

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS



Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.


PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	BONE PANEL	1 PC
6	SHELF PANEL	3 PCS
7	BACK PANEL	1 PC
8	DOOR PANEL (L)	1 PC
9	DOOR PANEL (R)	1 PC
10	DRAWER FRONT	1 PC
11	DRAWER SIDE	2 PCS
12	DRAWER BACK	1 PC
13	DRAWER BOTTOM	1 PC
14	LEG	4 PCS

HARDWARE				
A	MINI FIX	A1 A2 A3	4 PCS	
B	M8 X 30MM WOOD DOWEL		12 PCS	
C	M6 X 50MM CSK CAP WOOD SCREW		4 PCS	
D	5/8 NAIL		30 PCS	
E	ALLEN KEY M4		1 PC	
F	ONE HOLE L BRACKET (2MM)		2 PCS	
G	M3.5 X 16MM C.B SCREW		42 PCS	
H	M4 X 38MM C.B SCREW		8 PCS	
I	METAL SHELF SUPPORT		12 PCS	
J	STOPPER(2 PIN)		1 PC	
K	12" DRAWER SLIDE	K1 (L/R) K2 (L/R)	1 SET	
L	SOFT CLOSING 7/8 HINGES		4 PCS	
M	JCBC Screw M6 x 70		8 PCS	
N	SPRING WASHER M6		8 PCS	
O	FLAT WASHER M6		8 PCS	
P	TIPPING PACK	P1 P2 P3 P4 P5	2 SETS	

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
	SCREWDRIVER
	HAMMER

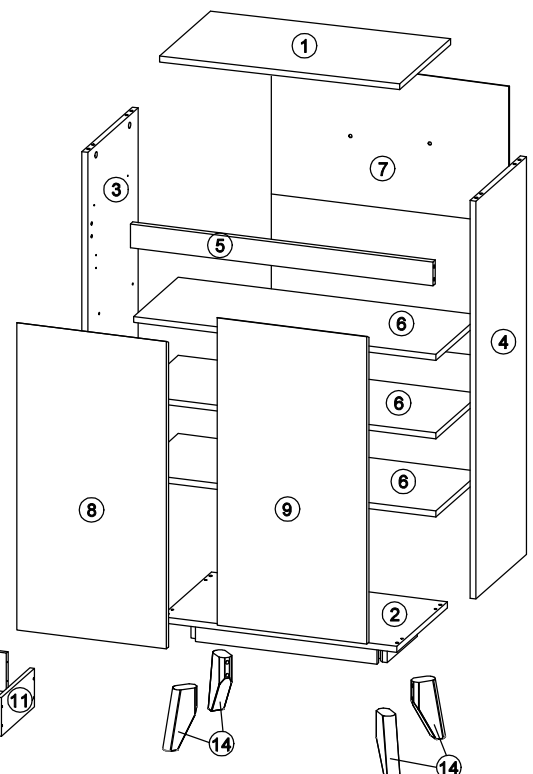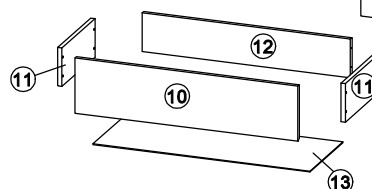


CODING
- 372065

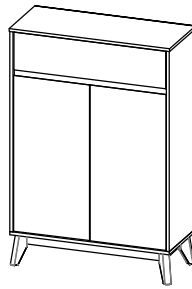

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


STEP 1

- Insert hardware **A2** onto panel (1).
(Repeat 4 times.)
- Hit hardware **J** onto panel (2).
(Repeat 1 times.)

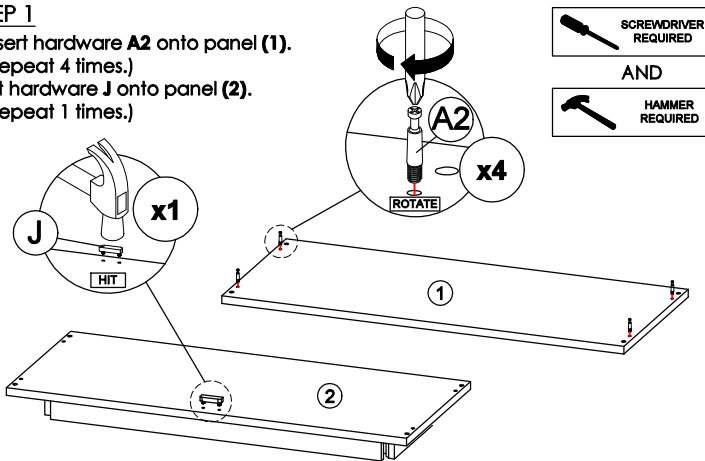

STEP 2


- Insert hardware **A1** onto panel (3) and (4).
(Repeat 2 times on each panel.)
- Insert hardware **B** onto panel (3) and (4).
(Repeat 4 times on each panel.)
- Assemble hardware **F** to panel (5) with hardware **G**.
(Repeat 2 times on each panel.)
- Insert hardware **B** onto panel (5).
(Repeat 4 times on each panel.)

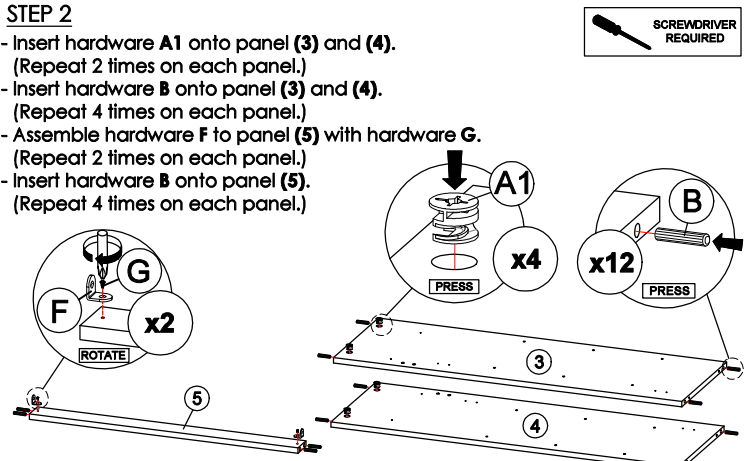

* Ensure the arrows on hardware **A1** point towards mounting positions.


STEP 3

- Fix hardware **K1 (L)** into panel (3) with hardware **G**.
(Repeat 4 times for each hardware.)
- Fix hardware **K1 (R)** into panel (4) with hardware **G**.
(Repeat 4 times for each hardware.)

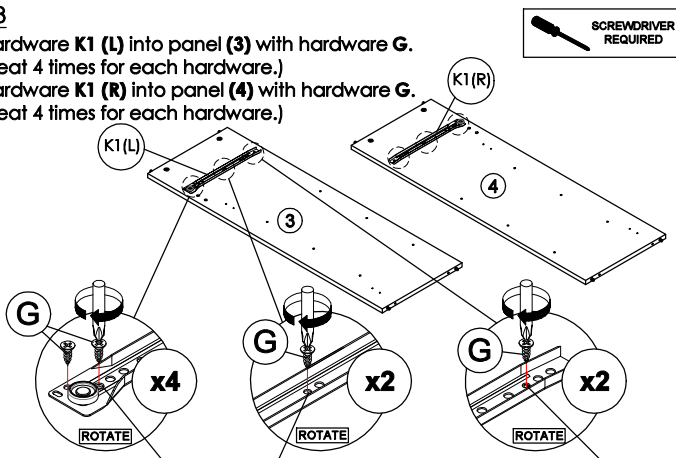

STEP 4

- Attach panel (5) to panel (3) and (4).
(Repeat 1 times.)

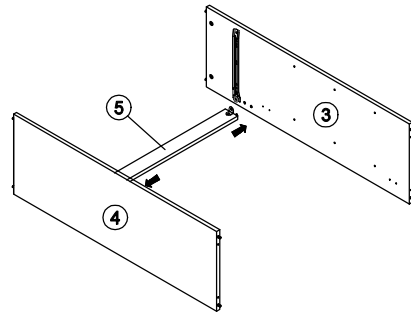


First and top second from the edge. Small hole at the center. Third hole from the edge.

* In this step hardware **B** are pre-inserted.


STEP 5

- Attach panel (3) and (4) to panel (1).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)

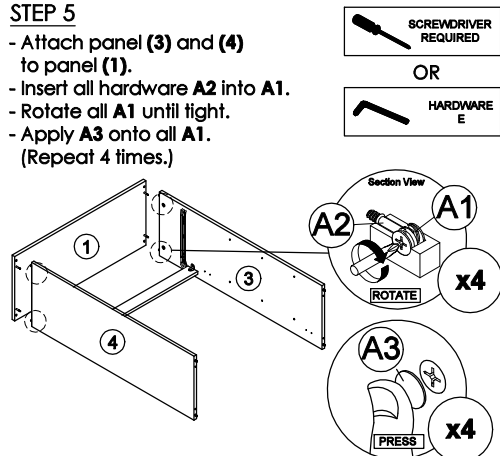


STEP 6

- Connect panel (2) to panel (3) and (4) by using hardware **C** and **E**.
(Repeat 4 times.)

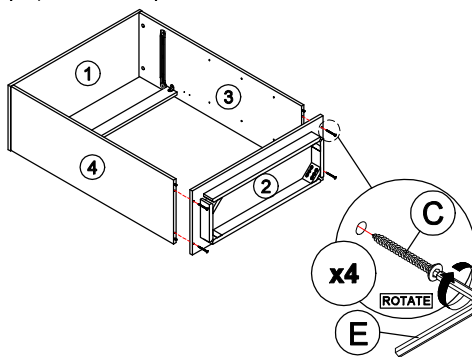

STEP 7


- Assemble hardware **F** on panel (5) to panel (3) and (4) by using hardware **G**.
(Repeat 1 times on each side panel.)

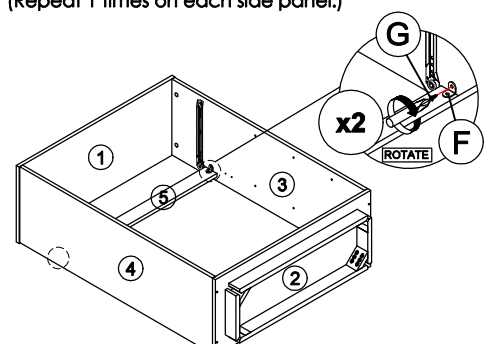

* In this step hardware **A1**, **A2** and **B** are pre-inserted.

* In this step hardware **B** are pre-inserted.


CODING
- 372065

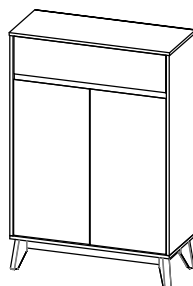

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS



STEP 8

Assemble part **14** into panel **(2)** by using hardware **E**, **M**, **N** and **O**.
(Repeat 2 times for each Leg.)

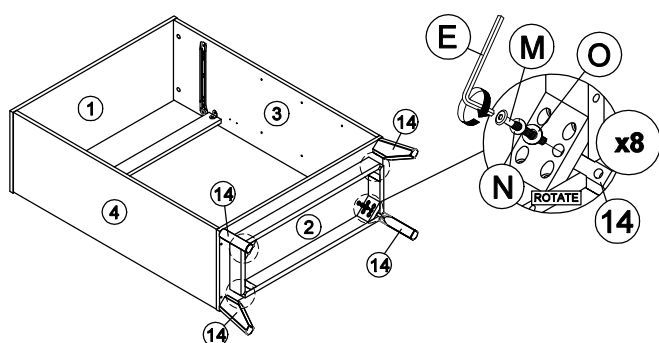


STEP 9

Assemble panel **(7)** to entire body with hardware **D**.
(Repeat 18 times.)

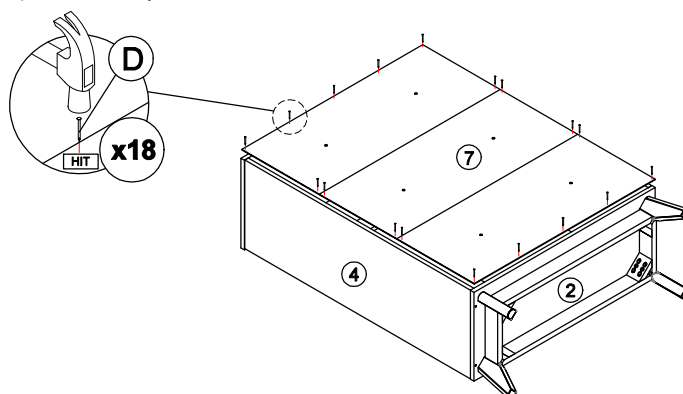


STEP 10

Insert hardware **I** into mounting positions on panel **(3)** and **(4)** by hand.
(Repeat 12 times.)

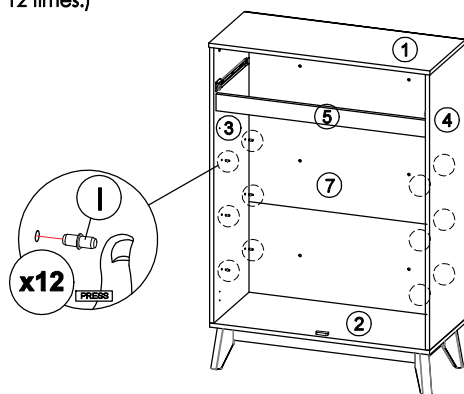


STEP 11

Assemble the panel **(6)** into between panel **(3)** and **(4)**.
(Repeat 3 times.)

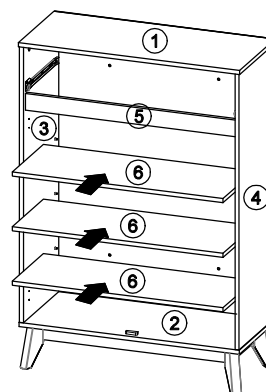

STEP 12


Fix hardware **L** onto panel **(8)** and **(9)** by using hardware **G**.
(Repeat 2 times for each hardware.)

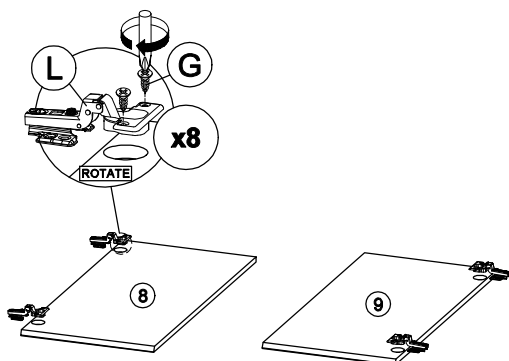

* In this step hardware **I** are pre-inserted.


STEP 13

- Fix hardware **L** into panel **(3)** and **(4)** by using hardware **G**.
(Repeat 4 times for each hardware.)
- Tighten or loosen the screw to adjust position of panel **(8)** and **(9)**.
(Do only when needed.)

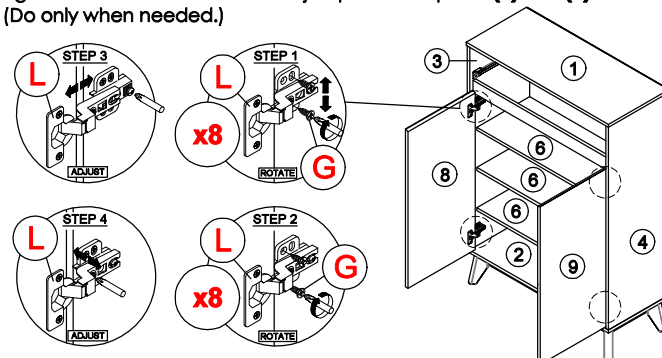

* In this step hardware **L** have been assembled in panel **(8)** and **(9)**.


CODING
- 372065

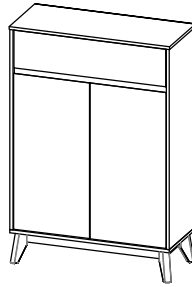

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


STEP 14

Assemble panel (11) with panel (10) and (12) by using hardware H.
(Repeat 8 times for each drawer.)

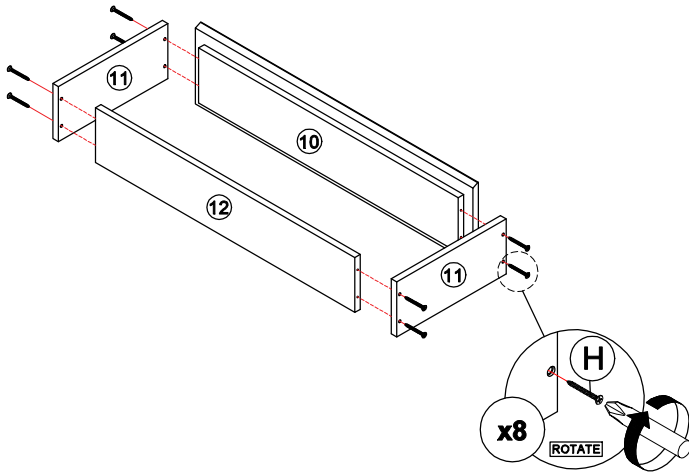


STEP 15

Assemble panel (13) to entire body with hardware D.
(Repeat 12 times.)

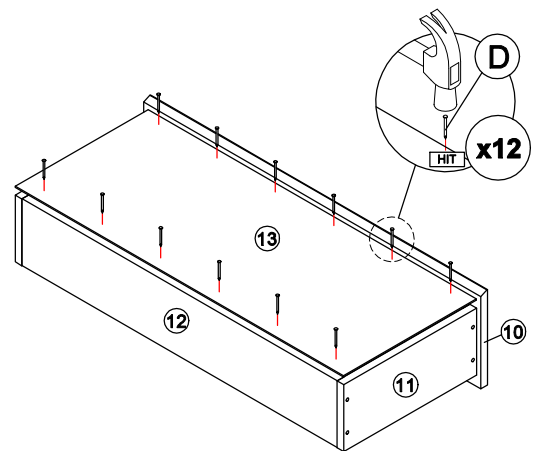

STEP 16


Assemble hardware K2 (L/R) to panel (13) by using hardware G.
(Repeat 3 times for each hardware.)

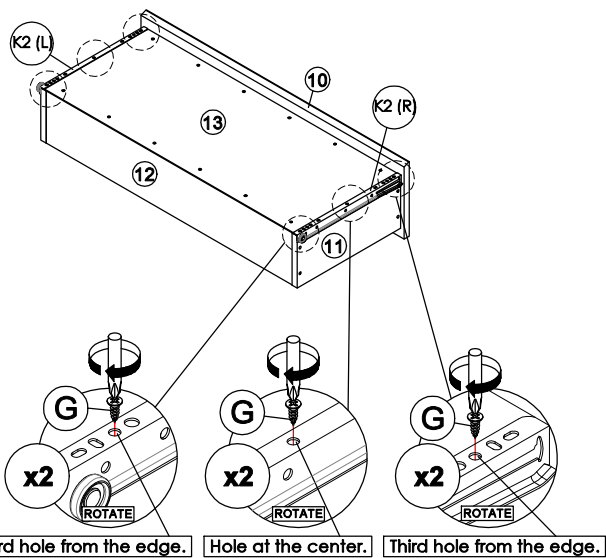


*Hardware K2 (L/R) shall be leaning against panel (10) when assembling.

STEP 17

Put all the drawer in place along the drawer slides.

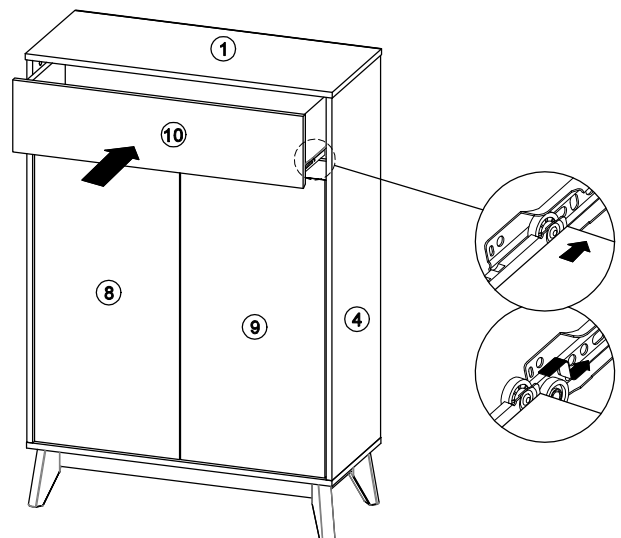


CODING
- 372065

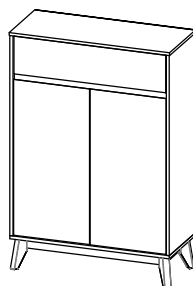

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


STEP 18

Assemble hardware **P1** into panel **(1)** and **(7)** by using hardware **P2**.
(Repeat **2** times.)

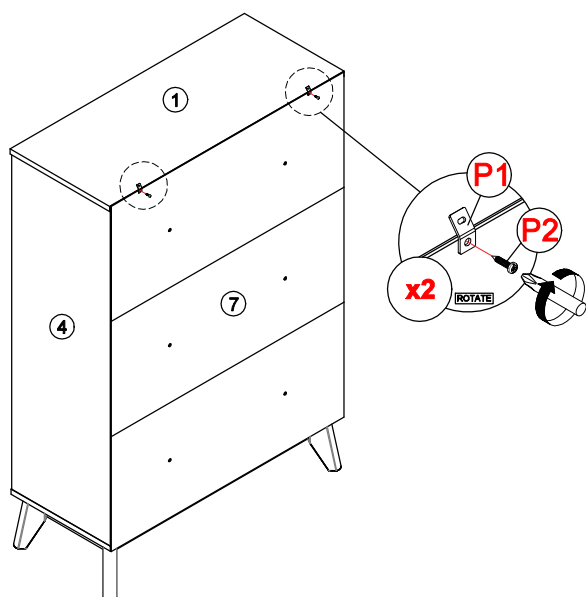


STEP 19

- Mark and use the power drill to drill a hole on the wall.
- Hit hardware **P3** into the wall.
(Repeat **2** times.)

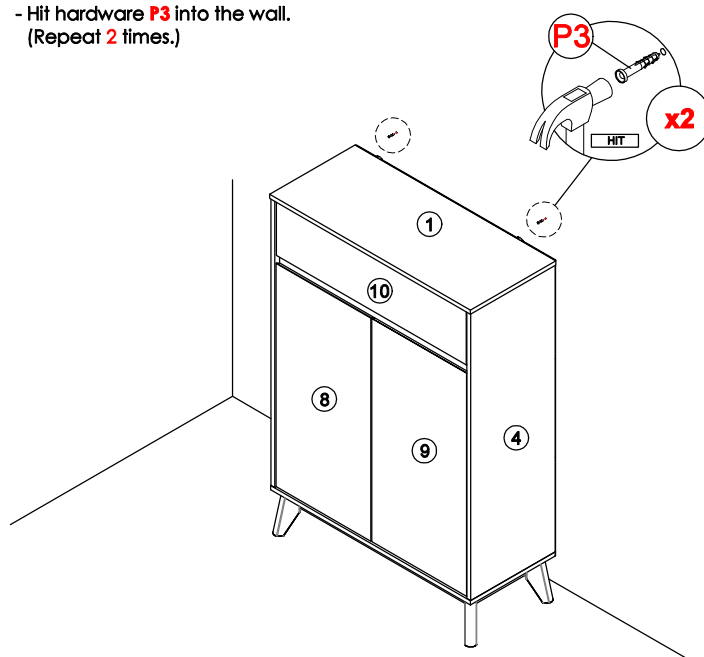

STEP 20

Assemble hardware **P1** to **P3** by using hardware **P4**.
(Repeat **2** times.)

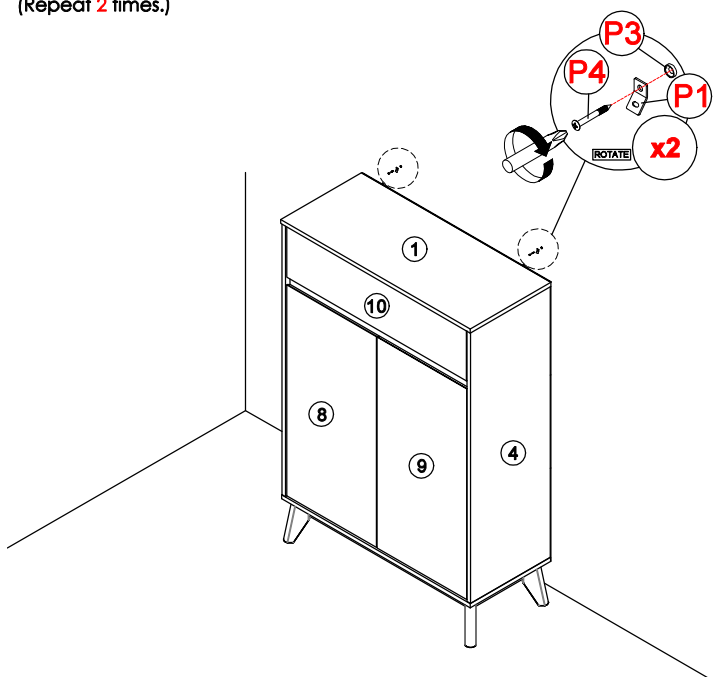

STEP 21

- Connect both of the hardware **P1** by using hardware **P5**.
- Tighten the hardware **P5**.
(Repeat **2** times.)

