


CODING

- 511052
- 511053

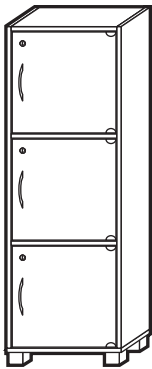

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN’S REACH.

ITEM	HARDWARE LIST		QTY
①		M4 x 38mm Chipboard Screw	16
②		M4 x 25mm Chipboard Screw	6
③		M3.5 x 16mm Chipboard Screw	9
④		M3x 12mm Chipboard Screw	22
⑤		Nail	30
⑥		Wood Dowel 6 x 25mm	16
⑦		Door Support 15mm	6
⑧		Plastic Leg	4
⑨		Handle(1009)	3
⑩		Cam Lock 28mm	3
⑪		Door Stopper	3


ITEM	PART LIST		QTY
Ⓐ	Side Panel		2
Ⓑ	Top Panel		1
Ⓒ	Shelf		2
Ⓓ	Bottom Panel		1
Ⓔ	Back Panel		1
Ⓕ	Door Panel		3

CODING
- 511052
- 511053

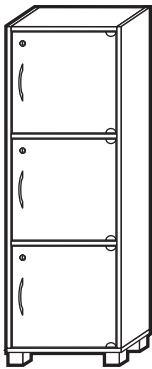


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


Step 1

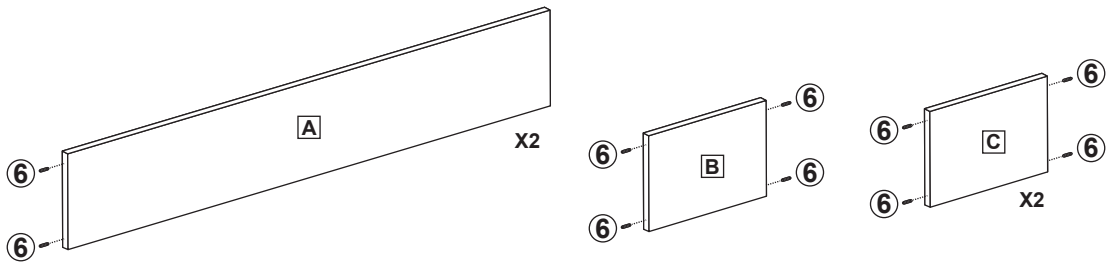

Step 2

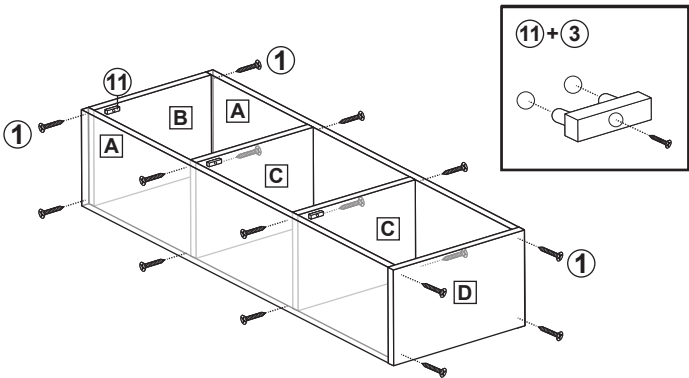

Step 3

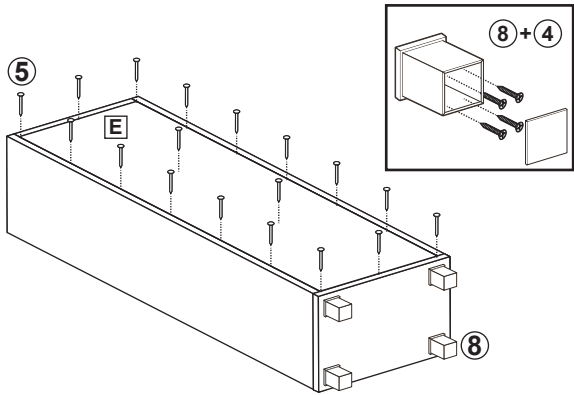

Step 4

