

SHARD

ASSEMBLY GUIDE

CODING

-511068
-511071

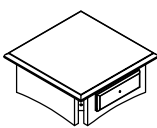

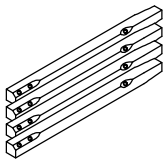


ISO 9001:2015
Reg. No. 00005-1-MY-1-QM0

Read the instruction carefully. Remove all the wrapping material staples and straps from the carton.Refer to the hardware and furniture part list for guidance.Be sure you have all parts before you start assembling.Place all the wooden furniture part on a clean and flat surface,such as carpet or rubbermat to prevent scratches.

Caution
KEEP ALL PARTS OUT OF REACH OF CHILDREN.

ITEM	PHOTO	HARDWARE NAME	QTY
①		JCBC BOLT M6 X 45MM	12
②		SPRING WASHER M6	12
③		FLAT WASHER 1/4"	12
④		ALLEN KEY M4	1
⑤		M.SCREW M4 x 20MM	1
⑥		HANDLE	1

ITEM	PHOTO	PARTS NAME	QTY
Ⓐ		TOP	1
Ⓑ		SHELVE	1
Ⓒ		LEGS	4

CODING

-511068
-511071



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

