

CODING
-514013





ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.


ITEM	HARDWARE LIST		QTY
①		M4 x 45mm Chipboard Screw	16
②		M4 x 25mm Chipboard Screw	16
③		M3.5 x 16mm Chipboard Screw	28
④		M3 x 12mm Chipboard Screw	24
⑤		Wood Dowel 6 x 25mm	44
⑥		Nail	27
⑦		Minifix Pin	4
⑧		Minifix Cam	4
⑨		Door Spring (AC75 L)	16
⑩		L Bracket (Bottom)	4
⑪		L Bracket (Center)	2
⑫		L Bracket	2
⑬		Magnet	8
⑭		Magnet Plate	8
⑮		Handle AC81 (160mm)	8

ITEM	PART LIST		QTY
Ⓐ	Left Side Panel		1
Ⓑ	Left Side Panel		1
Ⓒ	Top Panel		1
Ⓓ	Bottom Panel		1
Ⓔ	Shelf Panel		3
Ⓕ	Bracel Panel		4
Ⓖ	Bottom Bracel Panel		2
Ⓕ	Back Panel		1
Ⓘ	Left Door Panel		4
Ⓙ	Right Door Panel		4


CODING
-514013




Step 1

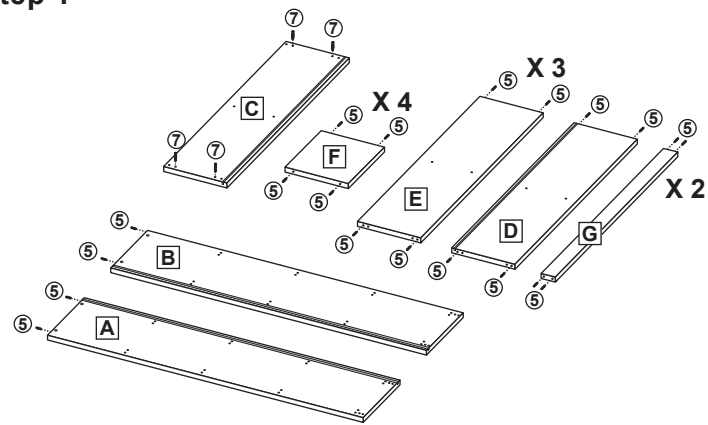


Step 2

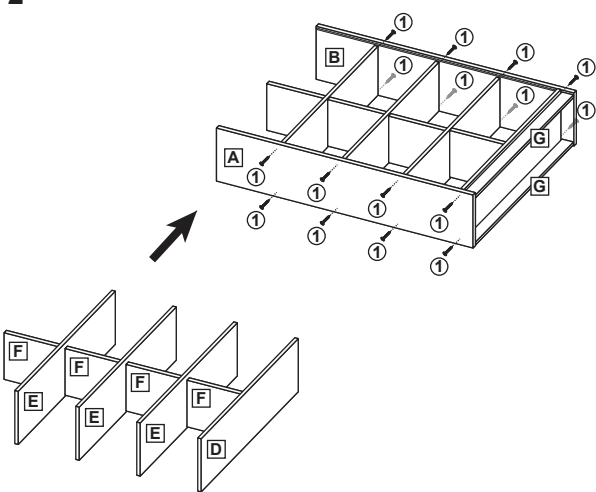



Step 3

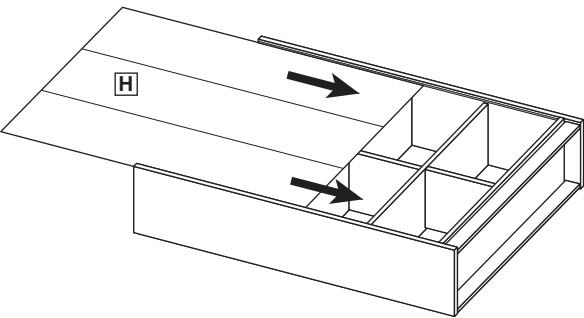

Step 4

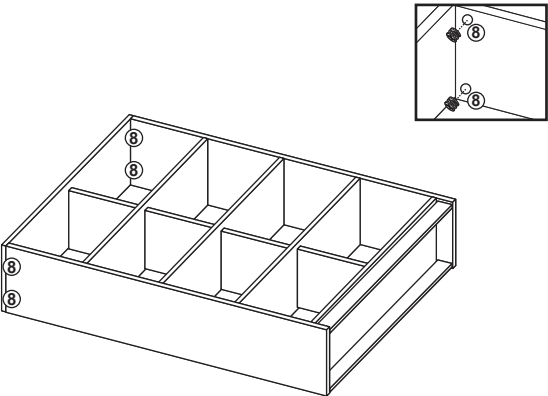

Step 5

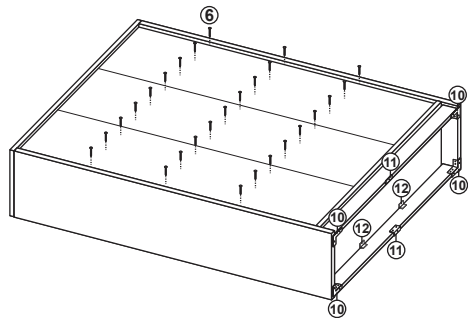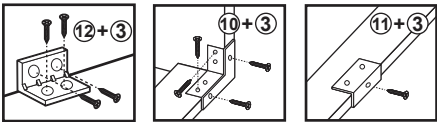

Step 6

