

CODING

- 522006



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		Screw(1/4 x 15 mm)	20
(B)		Allen Key #4	1
(C)		Caps M8	4
(D)		Screw (M4 x 35)	2
(E)		Wall Strap (200 x 20 mm)	2
(F)		Anchor	2


ITEM	PHOTO	PARTS NAME	QTY
(1)		Shelf	5
(2)		Frame	4

CODING
- 522006




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

1

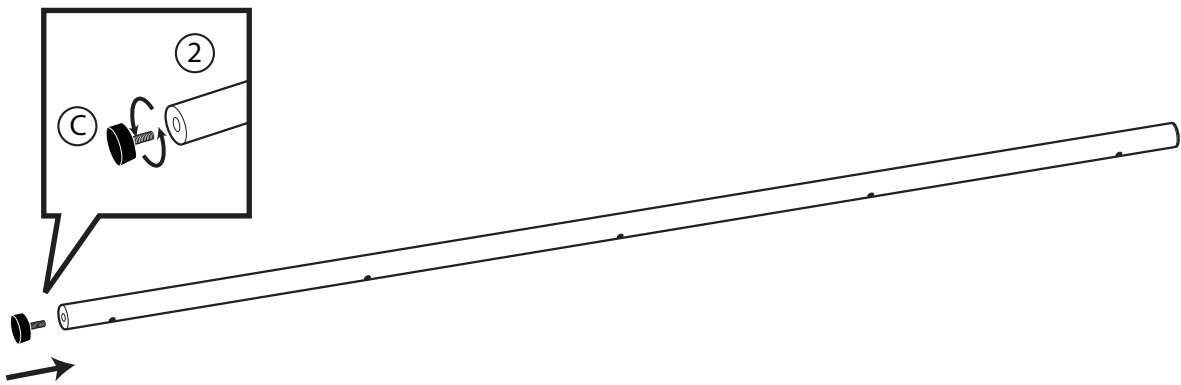

2

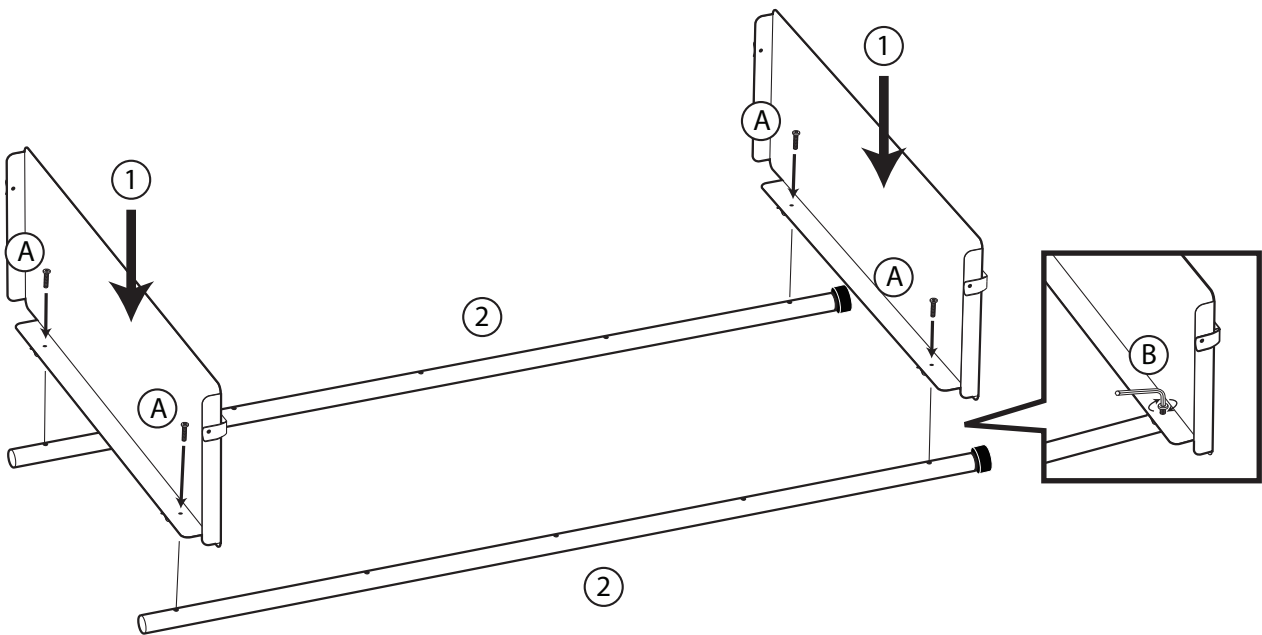


CODING
- 522006




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

3

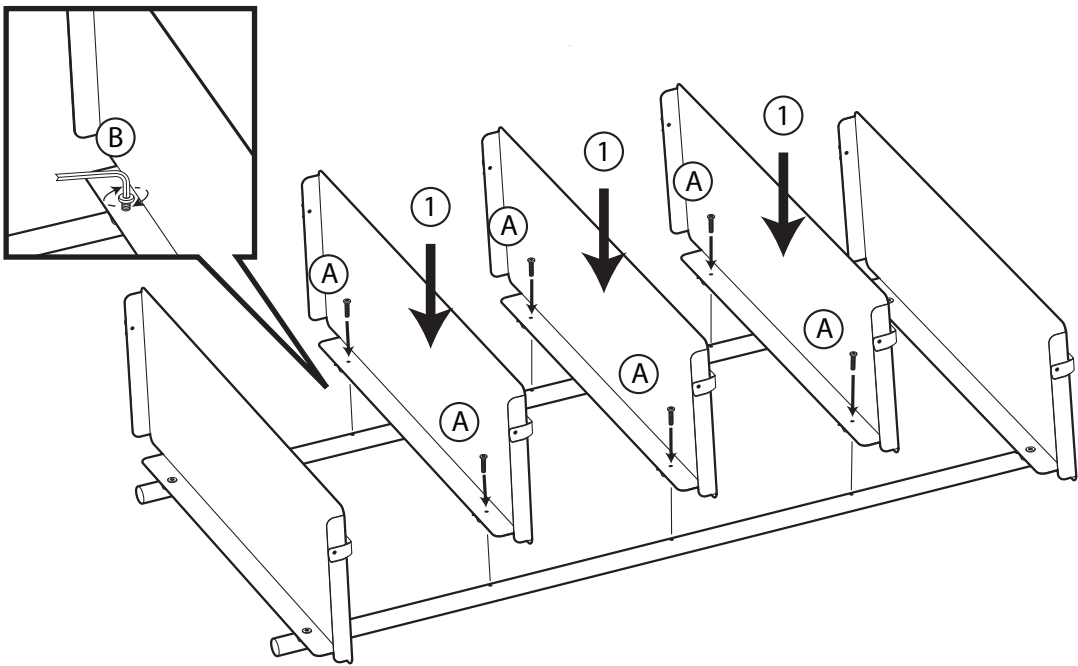

4

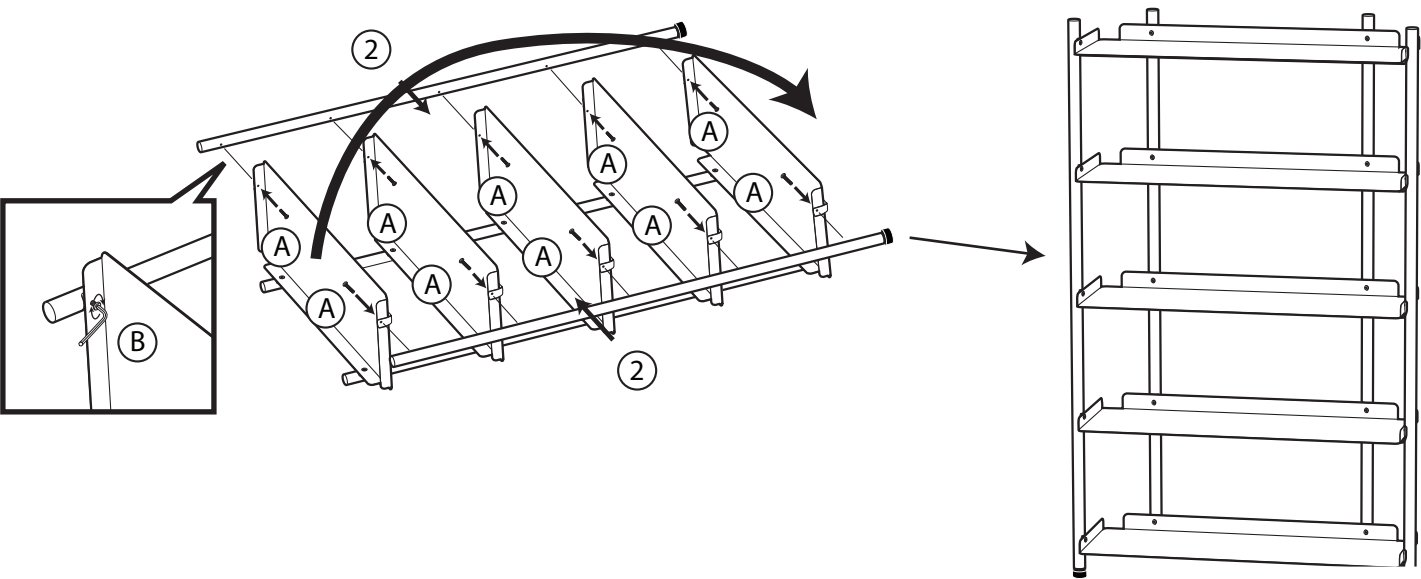

CODING
- 522006



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

5

