


CODING
- 523039



ISO 9001:2015
Reg. No. 000455-1-2017-1-QMS


Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

HARDWARE			
A	MINI FIX	A1  A2  A3 	15 SETS
B	M8 X 30MM WOOD DOWEL		22 PCS
C	5/8 NAIL		30 PCS
D	ALLEN KEY M4		1 PC
E	5/8 PVC NAIL LEG		4 PCS
F	METAL SHELF SUPPORT		12 PCS
TIPPING PACK WITH AI 			2 SETS

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
 SCREWDRIVER	 HAMMER

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	MIDDLE PANEL	1 PC
6	FRONT RAIL TOP	1 PC
7	FRONT RAIL BOTTOM	1 PC
8	BACK PANEL	1 PC
9	SHELF PANEL	3 PCS

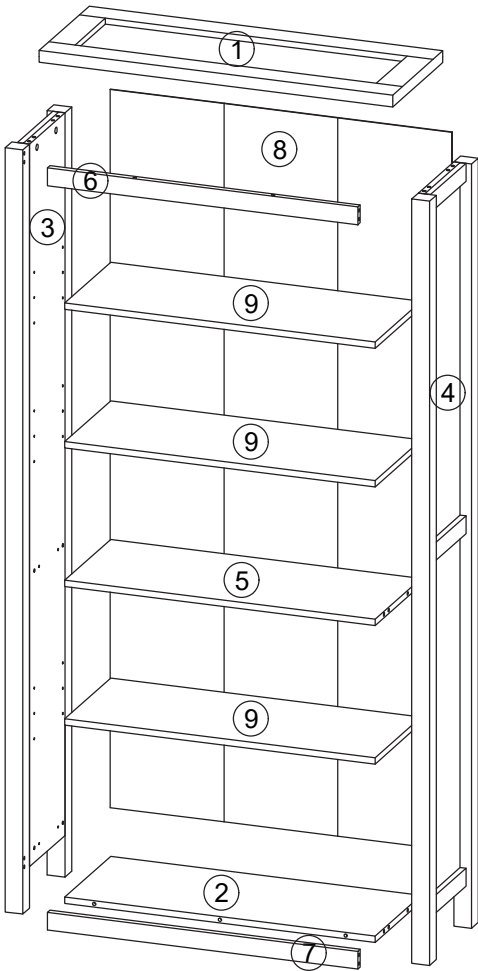


CODING
- 523039



ISO 9001:2015
Reg. No. 000455-1-MIT-1-QMS


STEP 1

- Insert hardware **A1** onto panel (2).
(Repeat 7 times.)
- Insert hardware **A2** onto panel (1) and (7).
(Repeat 7 times.)
- Insert hardware **B** onto panel (2), (6) and (7).
(Repeat 14 times.)

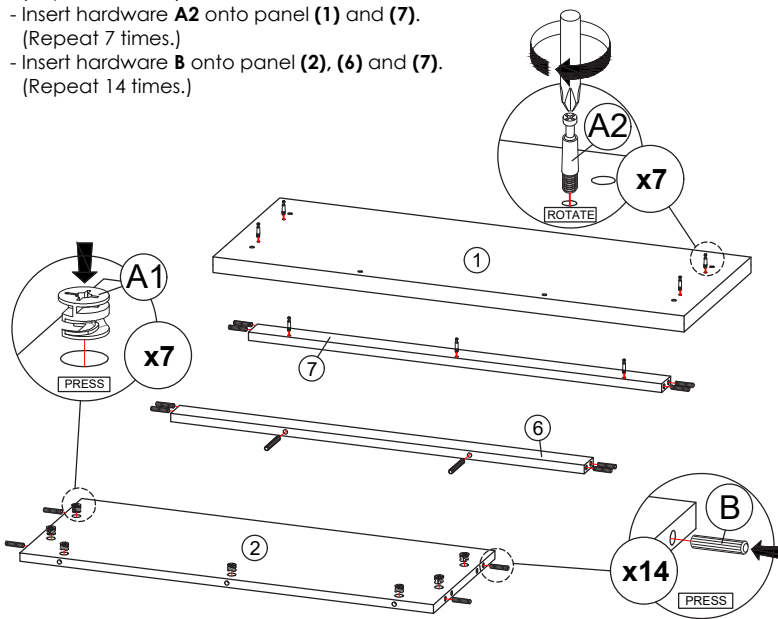

STEP 2

- Insert hardware **A1** onto panel (3), (4) and (5).
(Repeat 8 times.)
- Insert hardware **A2** onto panel (3) and (4).
(Repeat 8 times.)
- Insert hardware **B** onto panel (3), (4) and (5).
(Repeat 8 times.)

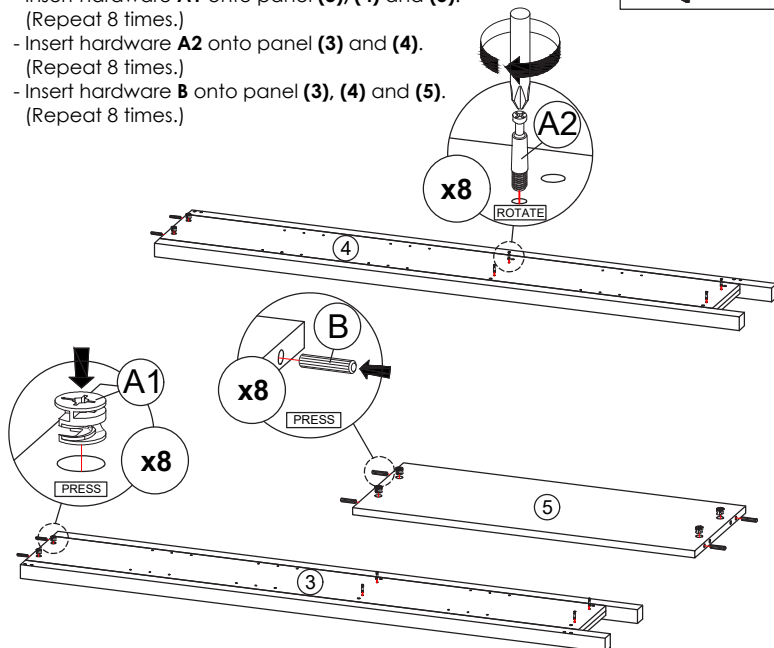


* Ensure the arrows on hardware **A1** point towards mounting positions.

STEP 3

- Attach panel (7) to panel (2).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 3 times.)



OR

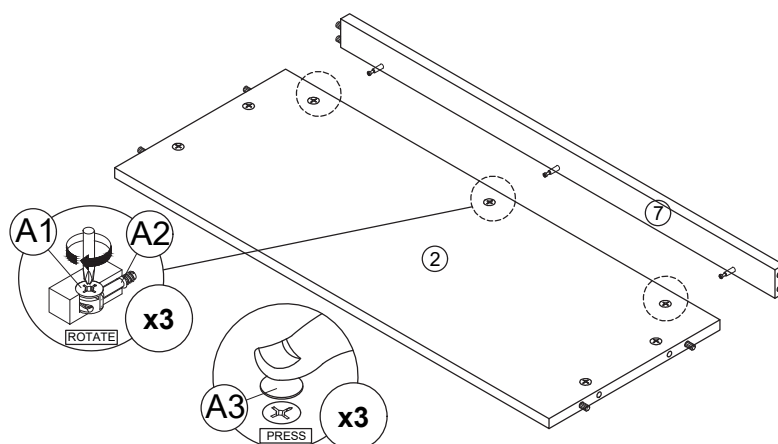


STEP 4

- Attach panel (3) and (4) to panel (2), (5), (6) and (7).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 8 times.)



OR

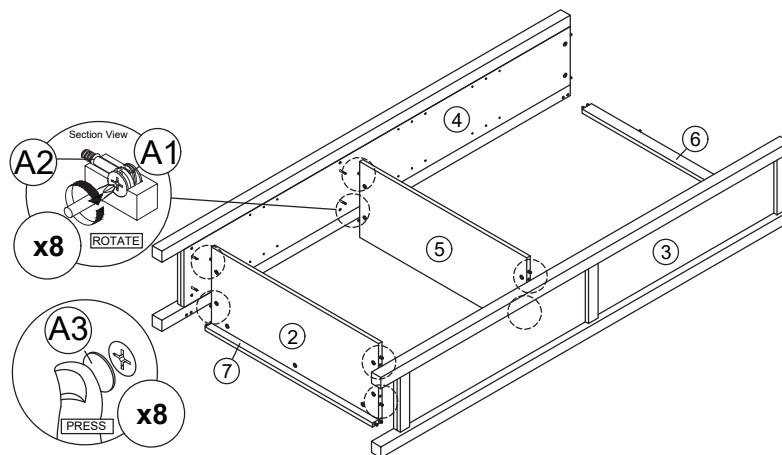

* In this step hardware **A1**, **A2** and **B** are pre-inserted.

* In this step hardware **A1**, **A2** and **B** are pre-inserted.



CODING
- 523039



ISO 9001:2015
Reg. No. 00005-1-2017-1-QMS


STEP 5

- Attach panel (1) to panel (3), (4) and (6).
 - Insert all hardware A2 into A1.
 - Rotate all A1 until tight.
 - Apply A3 onto all A1.
- (Repeat 4 times.)

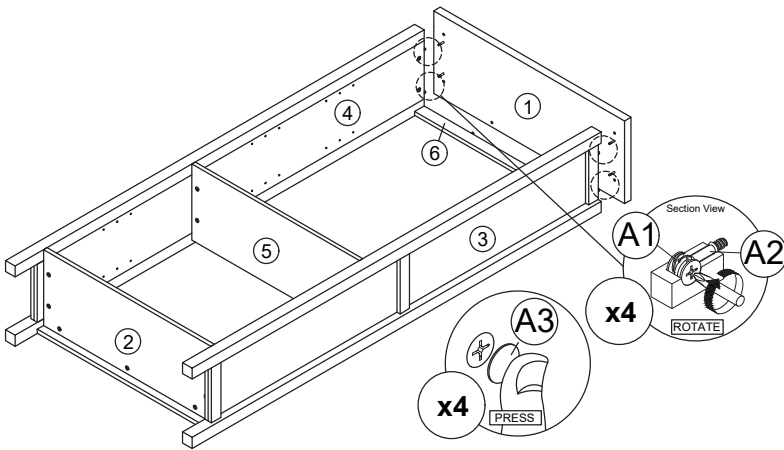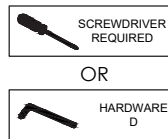

STEP 6


- Assemble panel (8) to entire body with hardware C.
- (Repeat 30 times.)
- Hit hardware E into bottom of panel (3) and (4).
- (Repeat 4 times.)

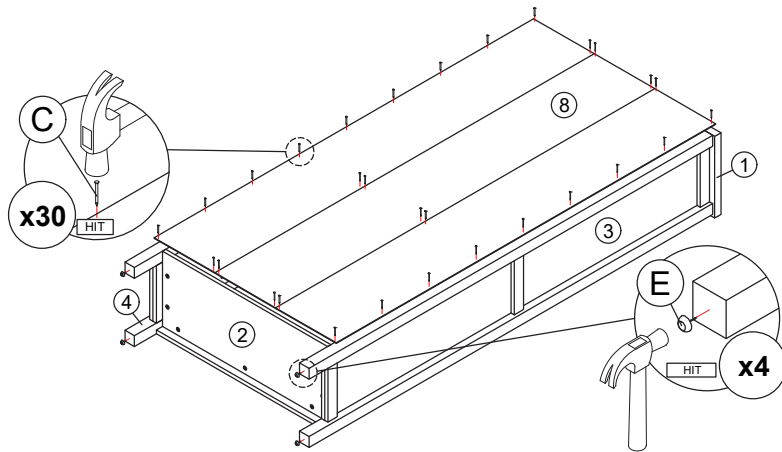

* In this step hardware A1, A2 and B are pre-inserted.


STEP 7

- Insert hardware F into mounting positions on panel (3) and (4) by hand.
- (Repeat 12 times.)

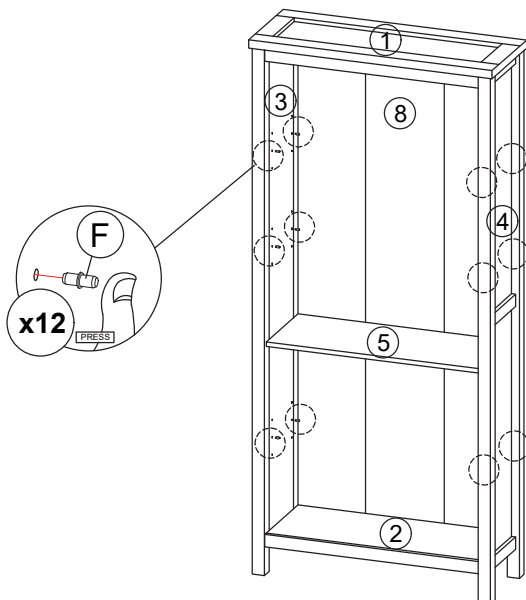

STEP 8

- Assemble panel (9) into between panel (3) and (4).
- (Repeat 3 times.)

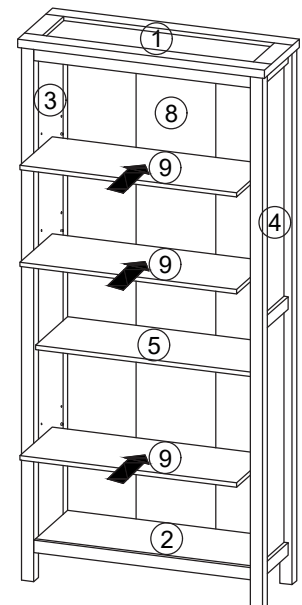

*In this step hardware F are pre-inserted.

*Hardware F can fix to another up and down hole on panel (3) and (4) for adjust panel (9) to high or lower.