

PLEASE FOLLOW
THOSE NUMBERS AS
STATED BELOW FOR
EASY ASSEMBLE.

EXAMPLE : STEP ASM. HARDWARE PART

1

A

12

523021, 523045, 523046

MODEL: ECO

HARDWARE

A



JCBC
40mm
x48

B



x1

C



16mm
x8

D



25mm
x68

PART

1

x1

2

x1

3

x3

4

x1

5

x1

E



x5

F



x120

G



x2

H



20mm
x10

6

x1

7

x10

8

x1

13


x2

14


x1

1


INSERT THE 4 PCS DOWEL TO
THE 3, 4, 5, 6, 7, 8 PANEL

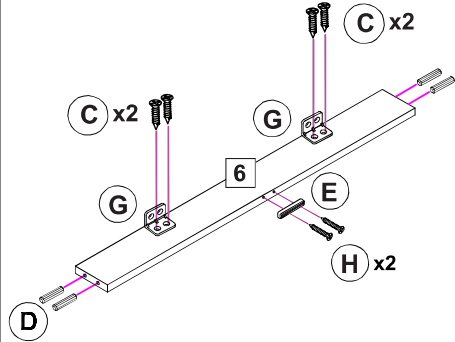


2

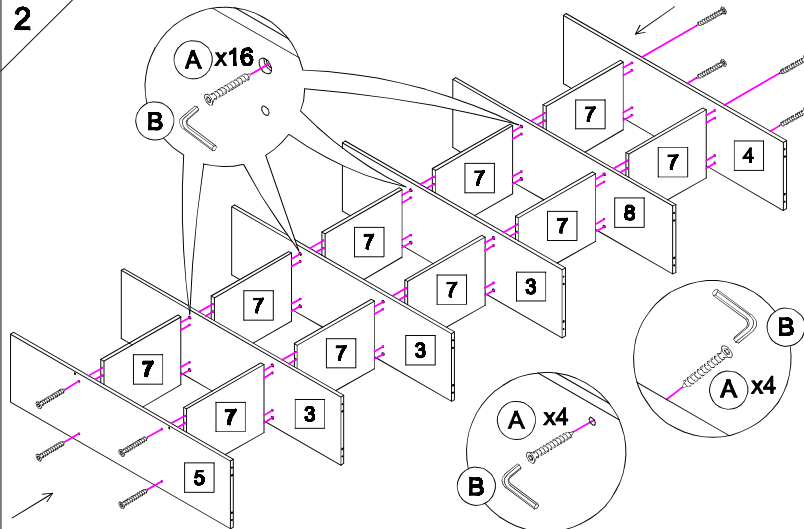


3

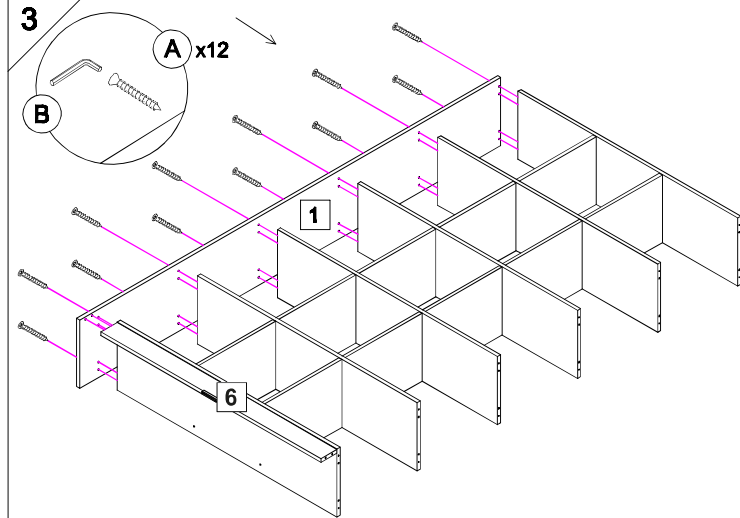

4

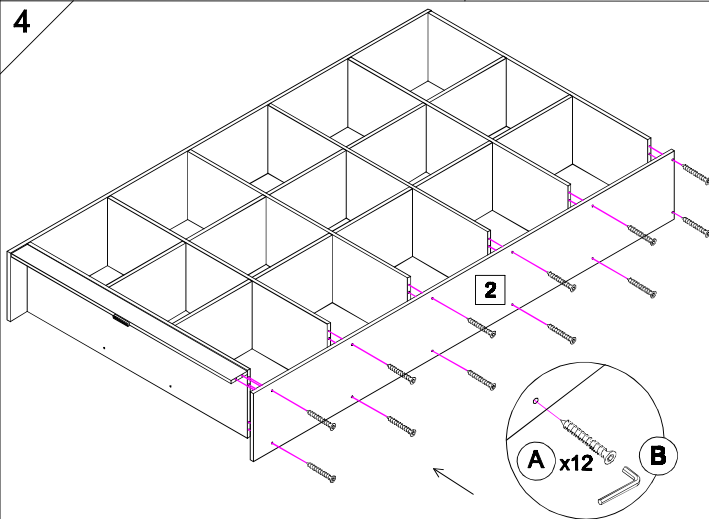

5

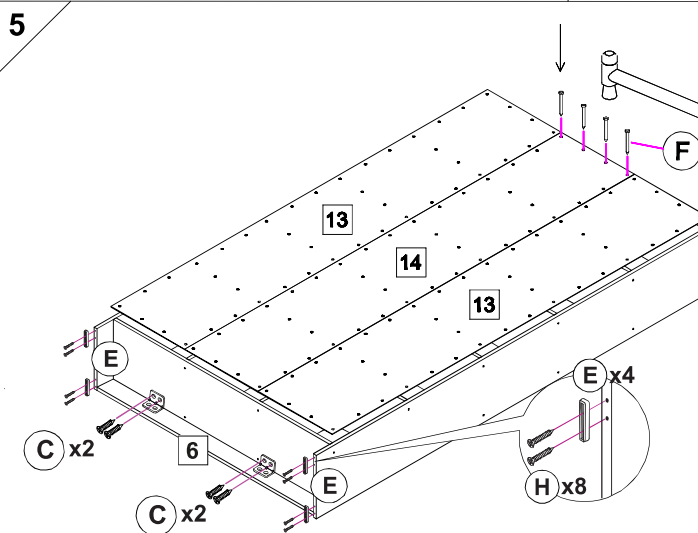

6

