

CODING
-525004
-525005





ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST		QTY
Ⓐ		M6 x 60mm JCBCW Screw	28
Ⓑ		M3.5 x 16mm Chipboard Screw	8
Ⓒ		Nail	170
Ⓓ		Wood Dowel 6 x 25mm	60
Ⓔ		Leg Nail	5
Ⓕ		L Bracket	2
Ⓖ		Allen Key	1


ITEM	PART LIST		QTY
①	Side Panel 		2
②	Shelf Panel (Top/Bottom Screw) 		2
③	Shelf Panel (Screw) 		2
④	Shelf Panel 		2
⑤	Brace Panel (Top) 		3
⑥	Brace Panel (Bottom) 		3
⑦	Brace Panel (Center) 		9
⑧	Bottom Brace Panel 		1
⑨	Back Panel 		1

CODING
-525004
-525005




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


Step 1

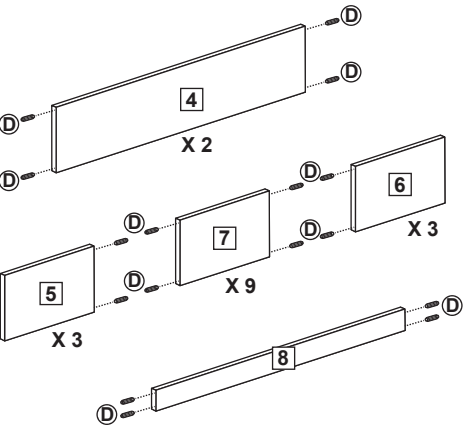


Step 2

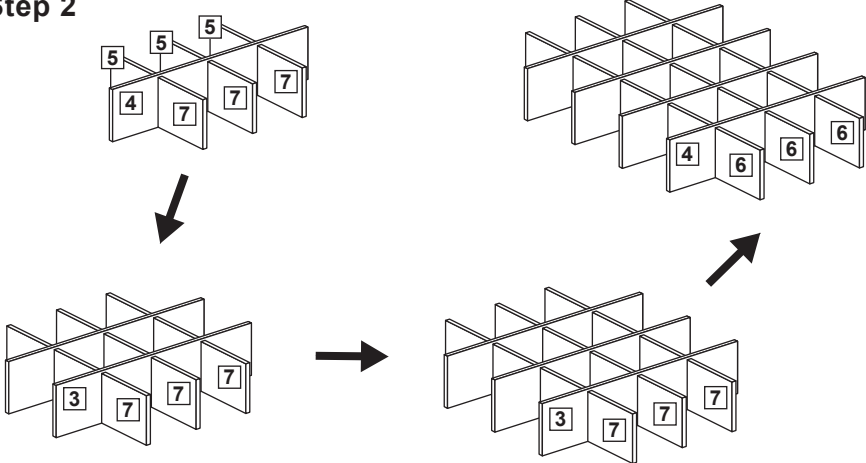


Step 3

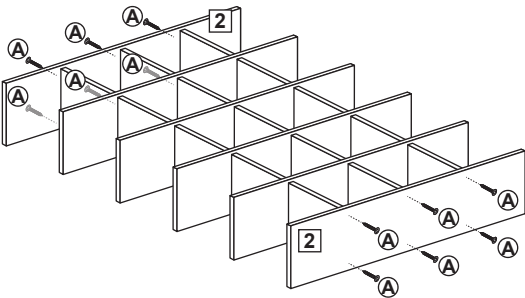

Step 4

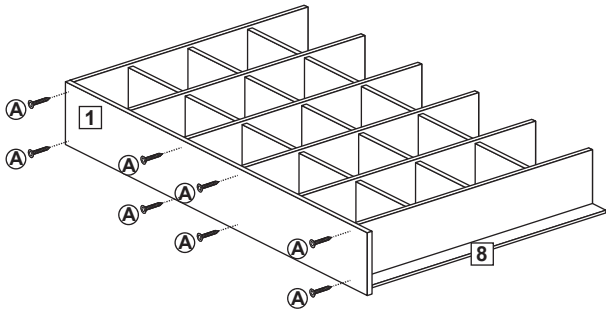

Step 5

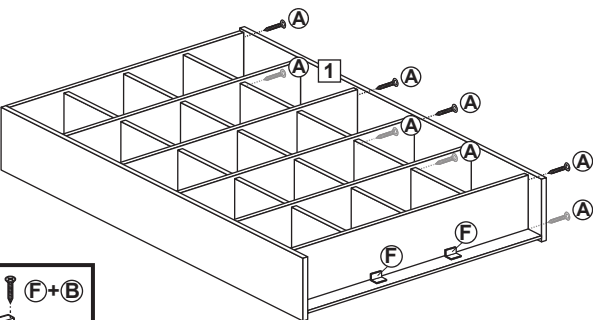

Step 6

