


**CODING**  
- 5513013



ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS


Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

**CAUTION**  
KEEP ALL THE PARTS OUT OF CHILDREN’S REACH.

| ITEM | HARDWARE LIST                                                                       |                             | QTY |
|------|-------------------------------------------------------------------------------------|-----------------------------|-----|
| ①    |  | M4 x 38mm Chipboard Screw   | 24  |
| ②    |  | M4 x 25mm Chipboard Screw   | 10  |
| ③    |  | M3.5 x 12mm Chipboard Screw | 15  |
| ④    |  | Nail                        | 50  |
| ⑤    |  | Door Support 15mm           | 10  |
| ⑥    |  | Leg Nail                    | 4   |
| ⑦    |  | Handle(1009)                | 5   |
| ⑧    |  | Magnet Plate                | 5   |
| ⑨    |  | Magnet                      | 5   |


| ITEM | PART LIST                |                                                                                       | QTY |
|------|--------------------------|---------------------------------------------------------------------------------------|-----|
| Ⓐ    | Side Panel               |  | 2   |
| Ⓑ    | Top Panel                |  | 1   |
| Ⓒ    | Shelf Panel              |  | 4   |
| Ⓓ    | Bottom Panel             |  | 1   |
| Ⓔ    | Back Panel               |  | 1   |
| Ⓕ    | Door Panel (Azure Blue)  |  | 1   |
| Ⓖ    | Door Panel (Pink)        |  | 1   |
| Ⓗ    | Door Panel (Apple Green) |  | 1   |
| Ⓘ    | Door Panel (Orange)      |  | 1   |
| Ⓙ    | Door Panel (Red)         |  | 1   |

CODING  
- 5513013




ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

Step 1

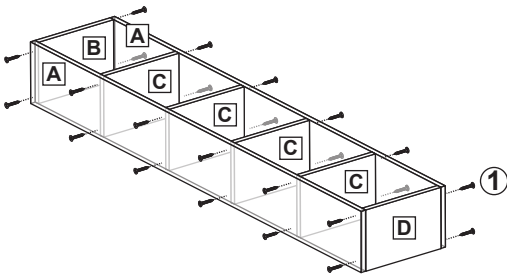

Step 2

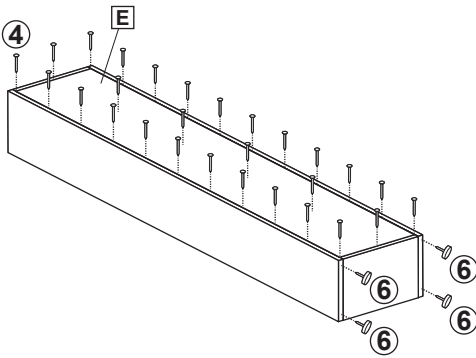

Step 3

