

CODING  
-5607007



ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

CAUTION  
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.


| ITEM | PART LIST    | QTY |
|------|--------------|-----|
| ①    | METAL LEG    | 2   |
| ②    | LADDER       | 1   |
| ③    | TRAY NET     | 2   |
| ④    | 4/8" STOPPER | 4   |

CODING  
-5607007



ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

1

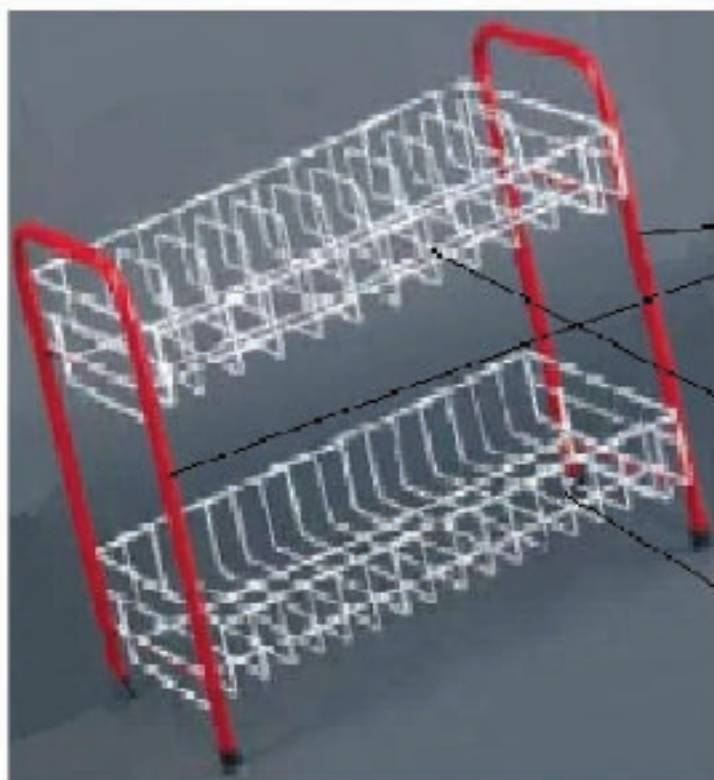

**METAL LEG**

**LADDER**

**TRAY NET**