

CODING
-572006



ISO 9001:2015
Reg.No. 000435-1-MY-1-QMS

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.



ITEM	PHOTO	HARDWARE NAME	QTY
(A)		Bolt M6x12	12
(B)		Allen key 4 mm	1
(C)		Foot cap Ø12x5	6

ITEM	PHOTO	PARTS NAME	QTY
①		Shelf	2
②		Side frame	2
③		Rail (L=670mm)	2

CODING
-572006





ISO 9001:2015
Reg.No. 000435-1-MY-1-QMS

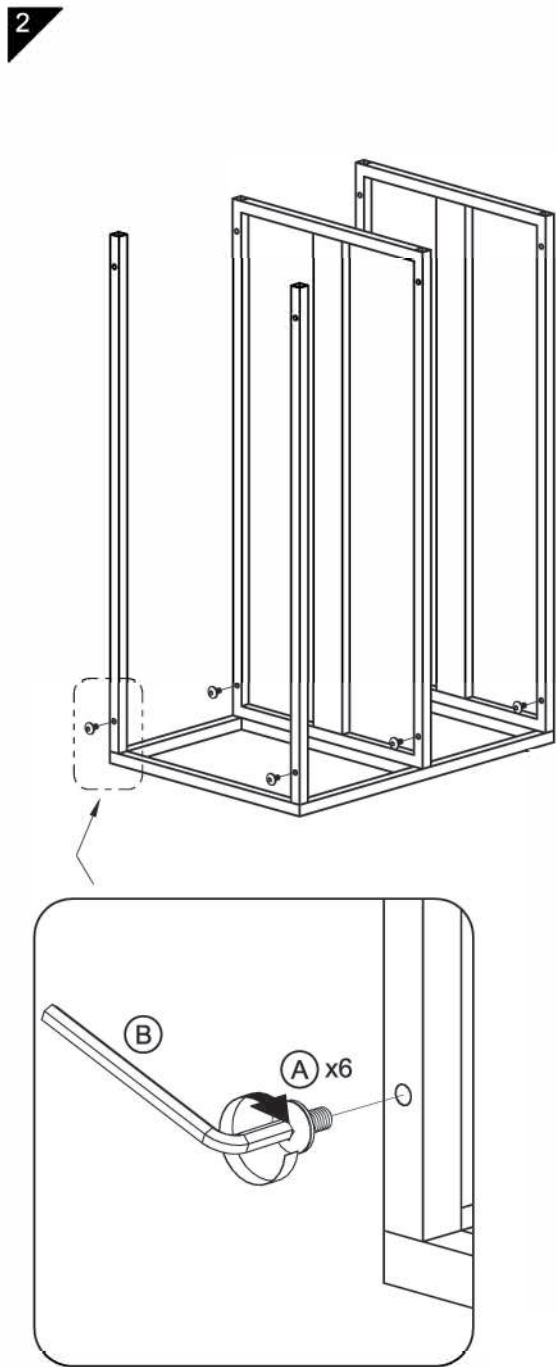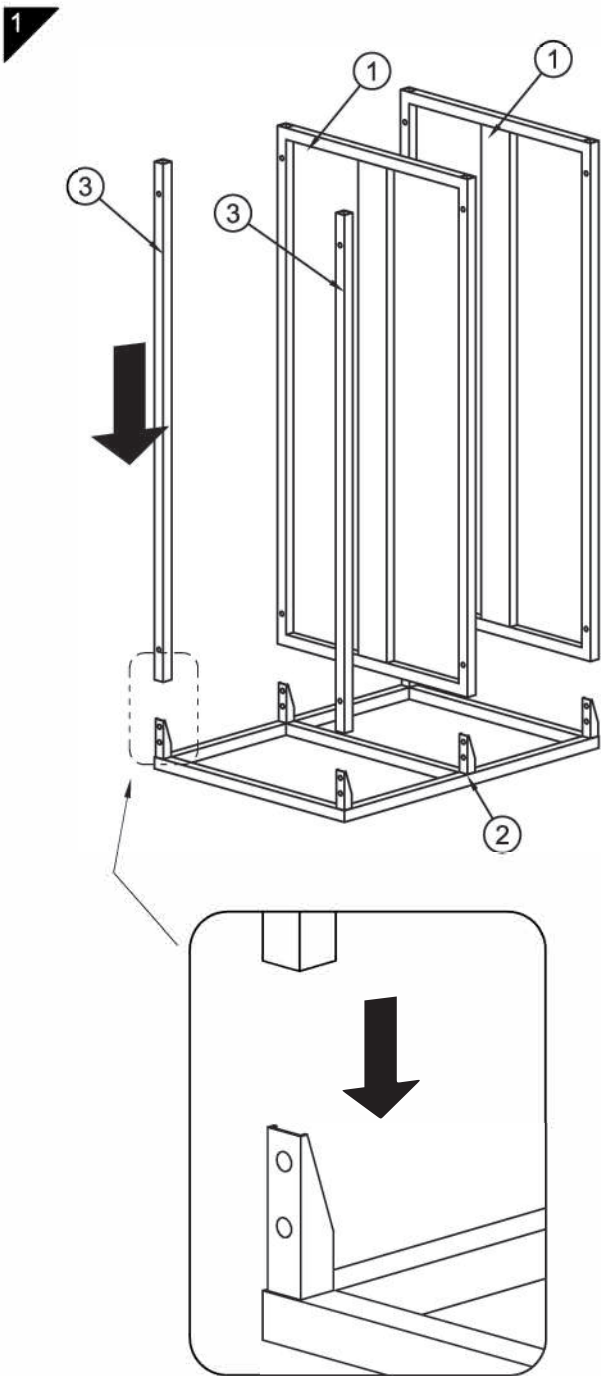

CODING
-572006



ISO 9001:2015
Reg.No. 000435-1-MY-1-QMS

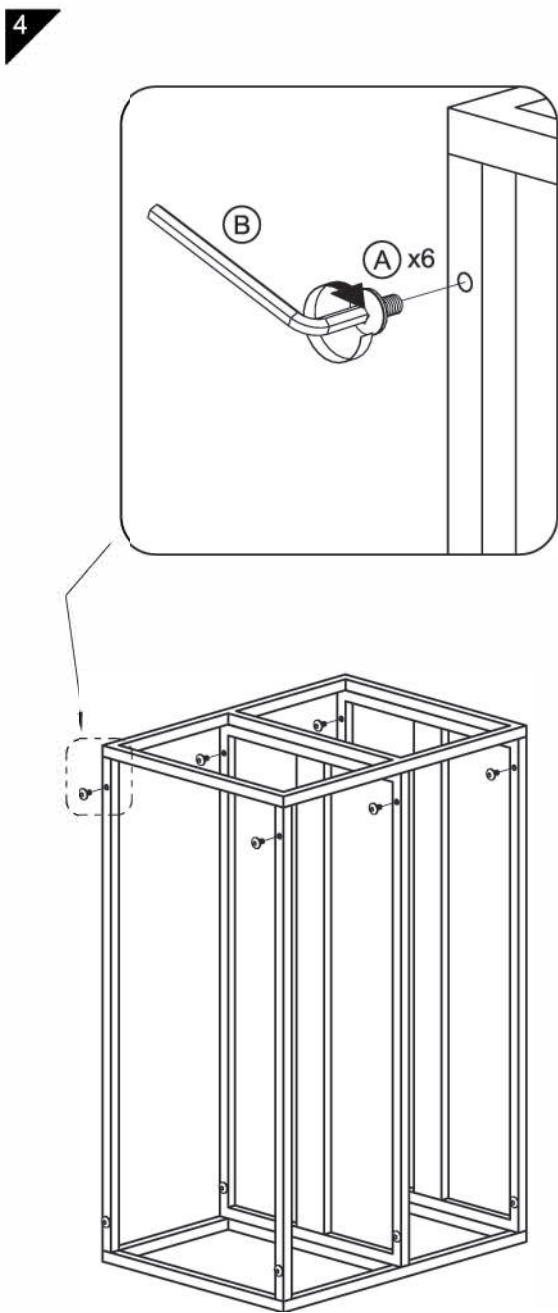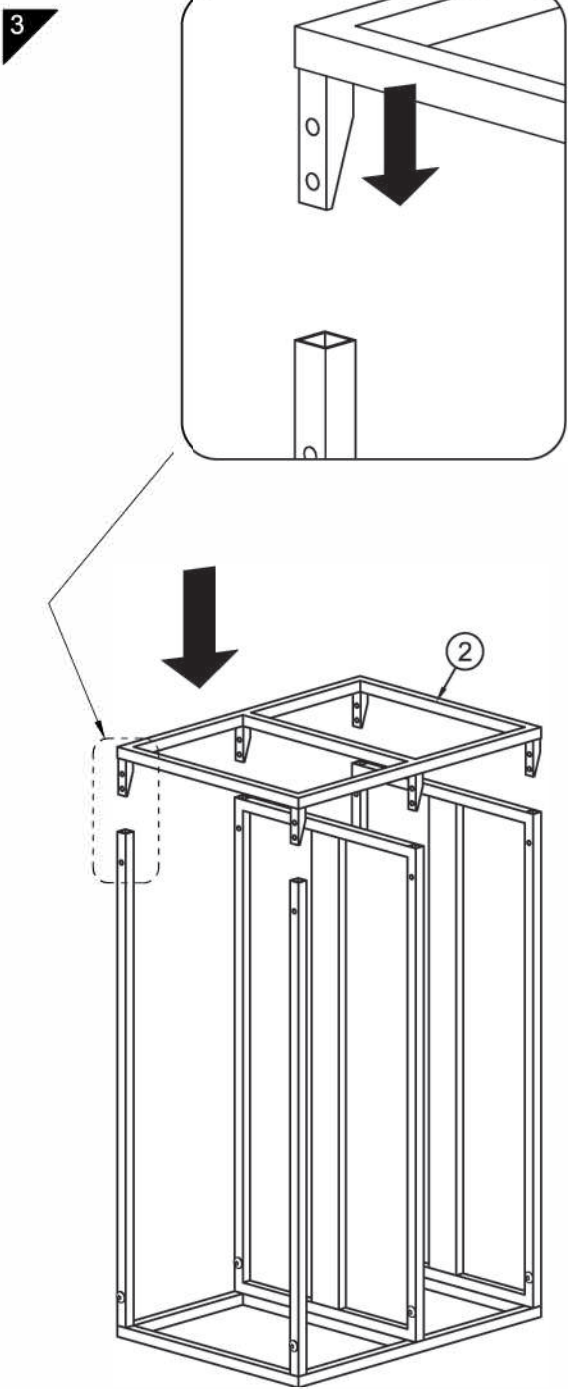


CODING
-572006



ISO 9001:2015
Reg.No. 000435-1-MY-1-QMS

5

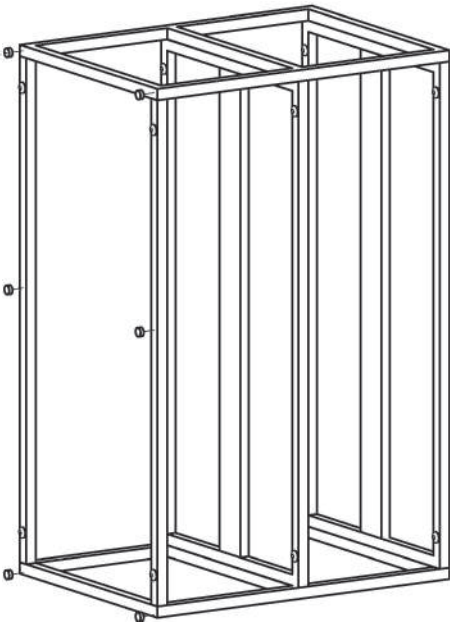

6

