

## CODING

-653019



ISO 9001:2015  
Reg. No. 000435-1-HDY-1-QMS

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

### CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

| ITEM | PHOTO                                                                               | HAREWARE NAME         | QTY |
|------|-------------------------------------------------------------------------------------|-----------------------|-----|
| ①    |  | JCBC SCREW M6 x 60MM  | 8   |
| ②    |  | BARREL NUT M6         | 8   |
| ③    |  | CSK SCREW M4 x 32MM   | 8   |
| ④    |  | WOOD DOWEL M10 X 30MM | 4   |
| ⑤    |  | M4 ALLEN KEY          | 1   |



| ITEM | PARTS NAME | QTY |
|------|------------|-----|
| Ⓐ    | HEAD BOARD | 1   |
| Ⓑ    | FOOT BOARD | 1   |
| Ⓒ    | SIDE PANEL | 2   |
| Ⓓ    | BED SLAT   | 12  |

**CODING**  
-653019



ISO 9001:2015  
Reg. No. 000435-1-HDY-1-QM&S

1

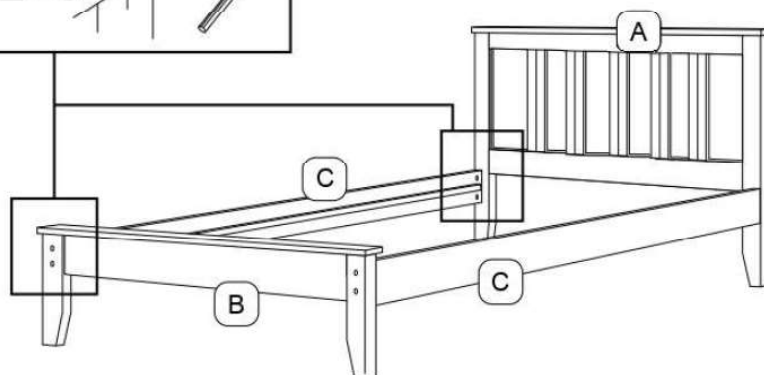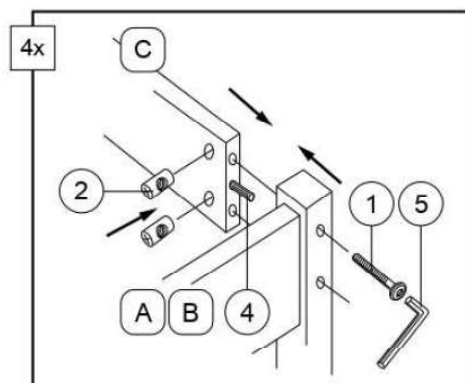

2

