


CODING
- 653027

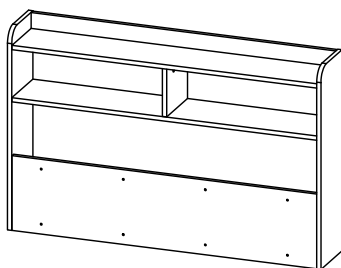

ISO 9001:2015
Reg. No. 009435-1-3-ET-1-QMS

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

PART LIST		QTY
1	TOP PANEL	1 PC
2	TOP BONE	1 PC
3	MIDDLE PANEL	1 PC
4	CENTER PANEL	1 PC
5	SIDE PANEL (L)	1 PC
6	SIDE PANEL (R)	1 PC
7	FRONT PANEL	1 PC
8	BACK PANEL	1 PC

SELF-PREPARED TOOLS: Tools below are NOT included in package.




SCREWDRIVER




HAMMER

HARDWARE			
A	MINI FIX	A1 A2 A3	16 SETS
B	M8 X 30MM WOOD DOWEL		18 PCS
C	M6 X 50MM CSK CAP WOOD SCREW		6 PCS
D	ALLEN KEY M4		1 PC
E	M4 X 25MM C.B SCREW		8 PCS
F	5/8 NAIL		15 PCS
G	5/8 PVC NAIL LEG		4 PCS

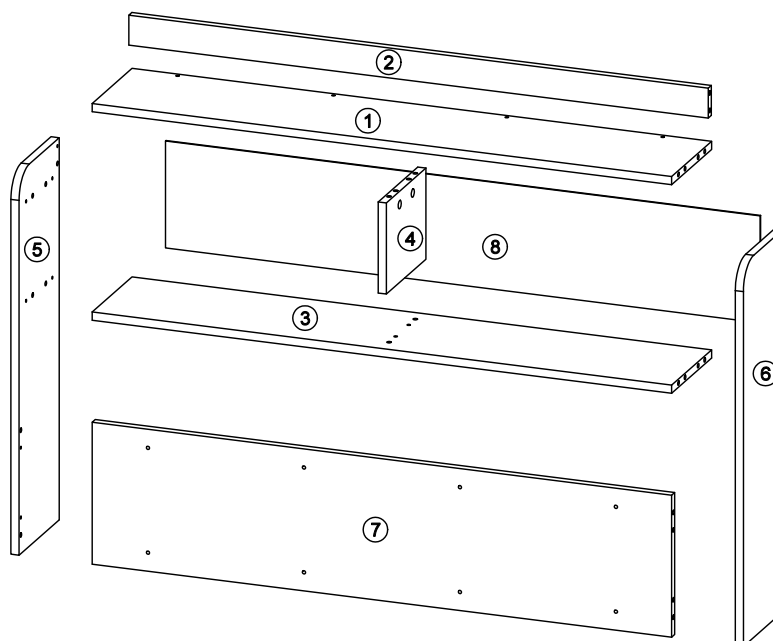

CODING
- 653027

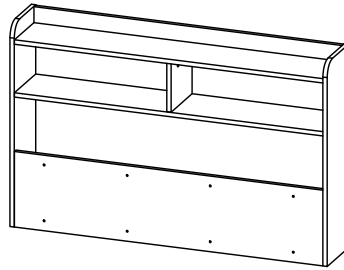


ISO 9001:2015
Reg. No. 000-GS-1-2017-1-Q008

STEP 1

- Insert hardware **A1** onto panel (1), (2), (3), (4) and (7).
(Repeat 16 times.)
- Insert hardware **A2** onto panel (1), (5) and (6).
(Repeat 16 times.)
- Insert hardware **B** onto panel (1), (2), (3), (4) and (7).
(Repeat 18 times.)


SCREWDRIVER
REQUIRED

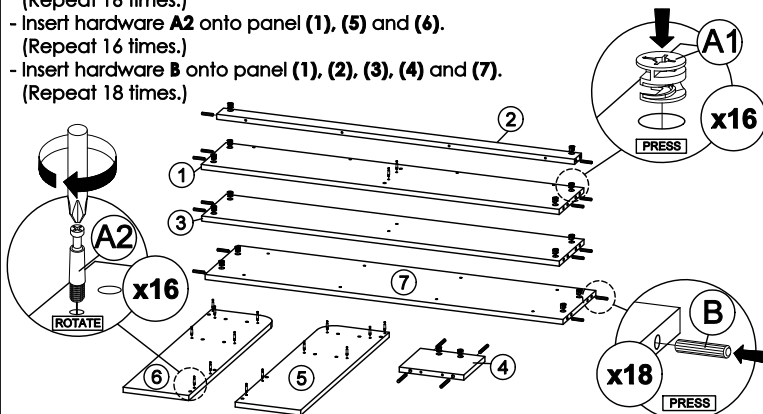

STEP 2

- Connect panel (2) to panel (1) by using hardware **C** and **D**.
(Repeat 4 times.)

HARDWARE
D

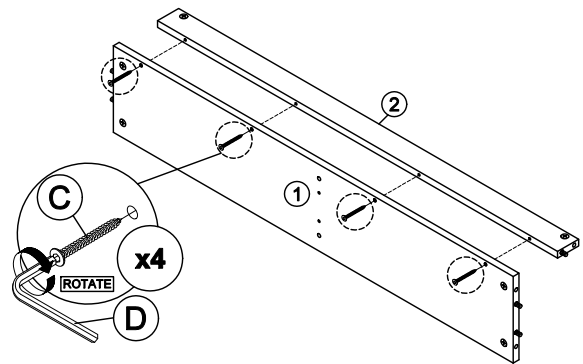

STEP 3

- Attach panel (4) to panel (1).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 2 times.)
- Connect panel (3) to panel (4)
by using hardware **C** and **D**.
(Repeat 2 times.)


SCREWDRIVER
REQUIRED

AND

HARDWARE
D

A3
PRESS
x2

C
ROTATE
x2
D

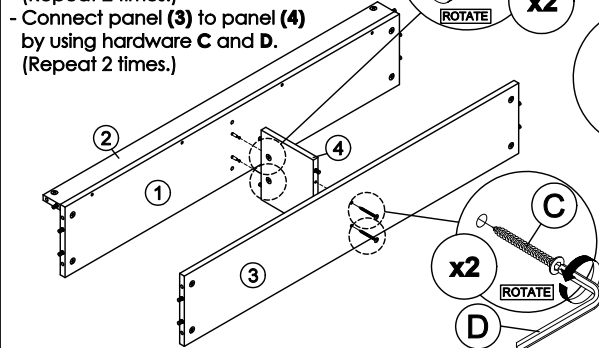

STEP 4


- Attach panel (1), (2), (3) and (7) to panel (5) and (6).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 14 times.)

SCREWDRIVER
REQUIRED

OR

HARDWARE
D


A2
ROTATE
x14
A3
PRESS
x14

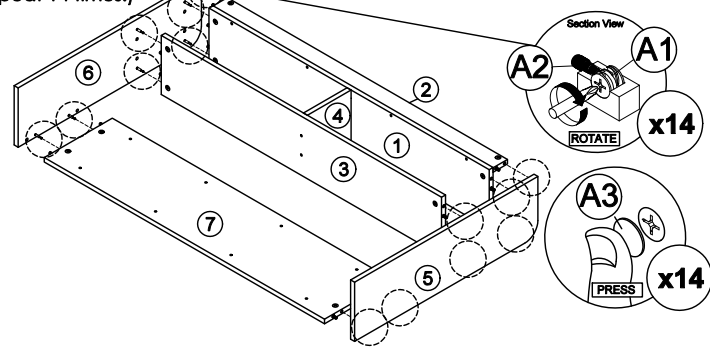

STEP 5

- Assemble panel (8) to entire body with hardware **F**.
(Repeat 15 times.)


HAMMER
REQUIRED

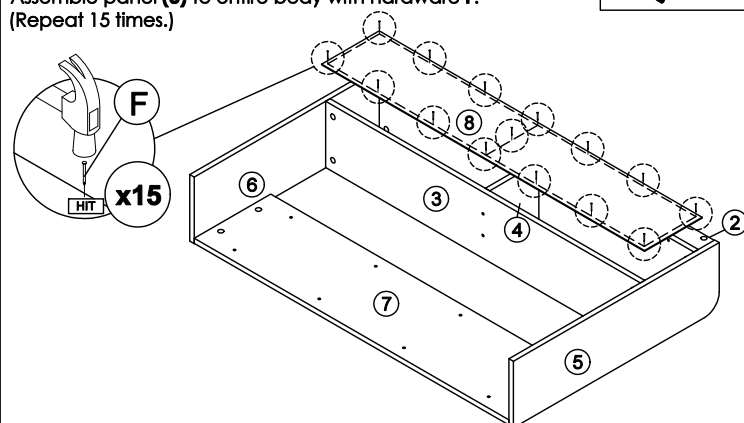


STEP 6

- Hit hardware **G** into bottom of panel (5) and (6).
(Repeat 4 times.)

HAMMER
REQUIRED

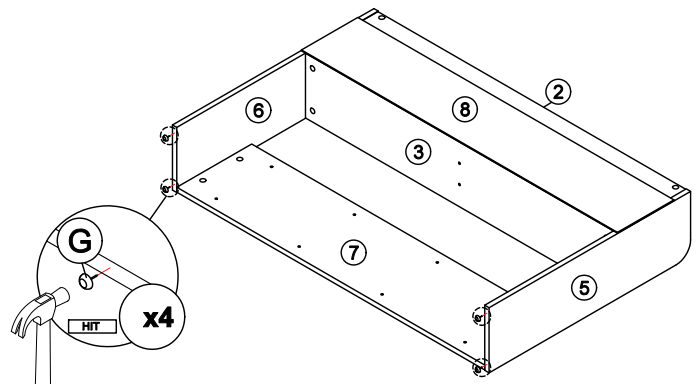

CODING
- 653027

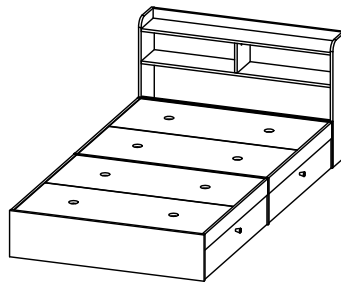


ISO 9001:2015
Reg. No. 000435-1-3-ET-1-QMS

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

HARDWARE

A	MINI FIX	A1 	A2 	A3 	32 SETS
B	M8 X 30MM WOOD DOWEL				20 PCS
C	M3.5 X 16MM C.B SCREW				36 PCS
D	M4 X 25MM C.B SCREW				10 PCS
E	M4 X 38MM C.B SCREW				8 PCS
F	5/8 PVC NAIL LEG				10 PCS
G	ONE HOLE L BRACKET (2MM)				4 PCS
H	311 KNOB				2 PCS
I	18" DRAWER SLIDE		I1 (L/R)	I2 (L/R)	2 SET

SELF-PREPARED TOOLS: Tools below are NOT included in package.




SCREWDRIVER




HAMMER

PART LIST		QTY
1	HEADBOARD	1 PC
2	FOOTBOARD - 1	1 PC
3	FOOTBOARD - 2	1 PC
4	SIDE PANEL (L1)	1 PC
5	SIDE PANEL (L2)	1 PC
6	SIDE PANEL (R1)	1 PC
7	SIDE PANEL (R2)	1 PC
8	CENTER PANEL	1 PC
9	CENTER SUPPORT	1 PC
10	CENTER SUPPORT	1 PC
11	BUNKIE BOARD	4 PCS
12	DRAWER FRONT	2 PCS
13	DRAWER BACK	2 PCS
14	DRAWER SIDE (L)	2 PCS
15	DRAWER SIDE (R)	2 PCS
16	DRAWER BOTTOM	2 PCS
17	DRAWER BONE	4 PCS


CODING
- 653027

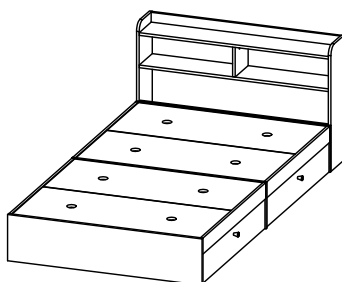

ISO 9001:2015
Reg. No. 009435-1-3-MY-1-QMS

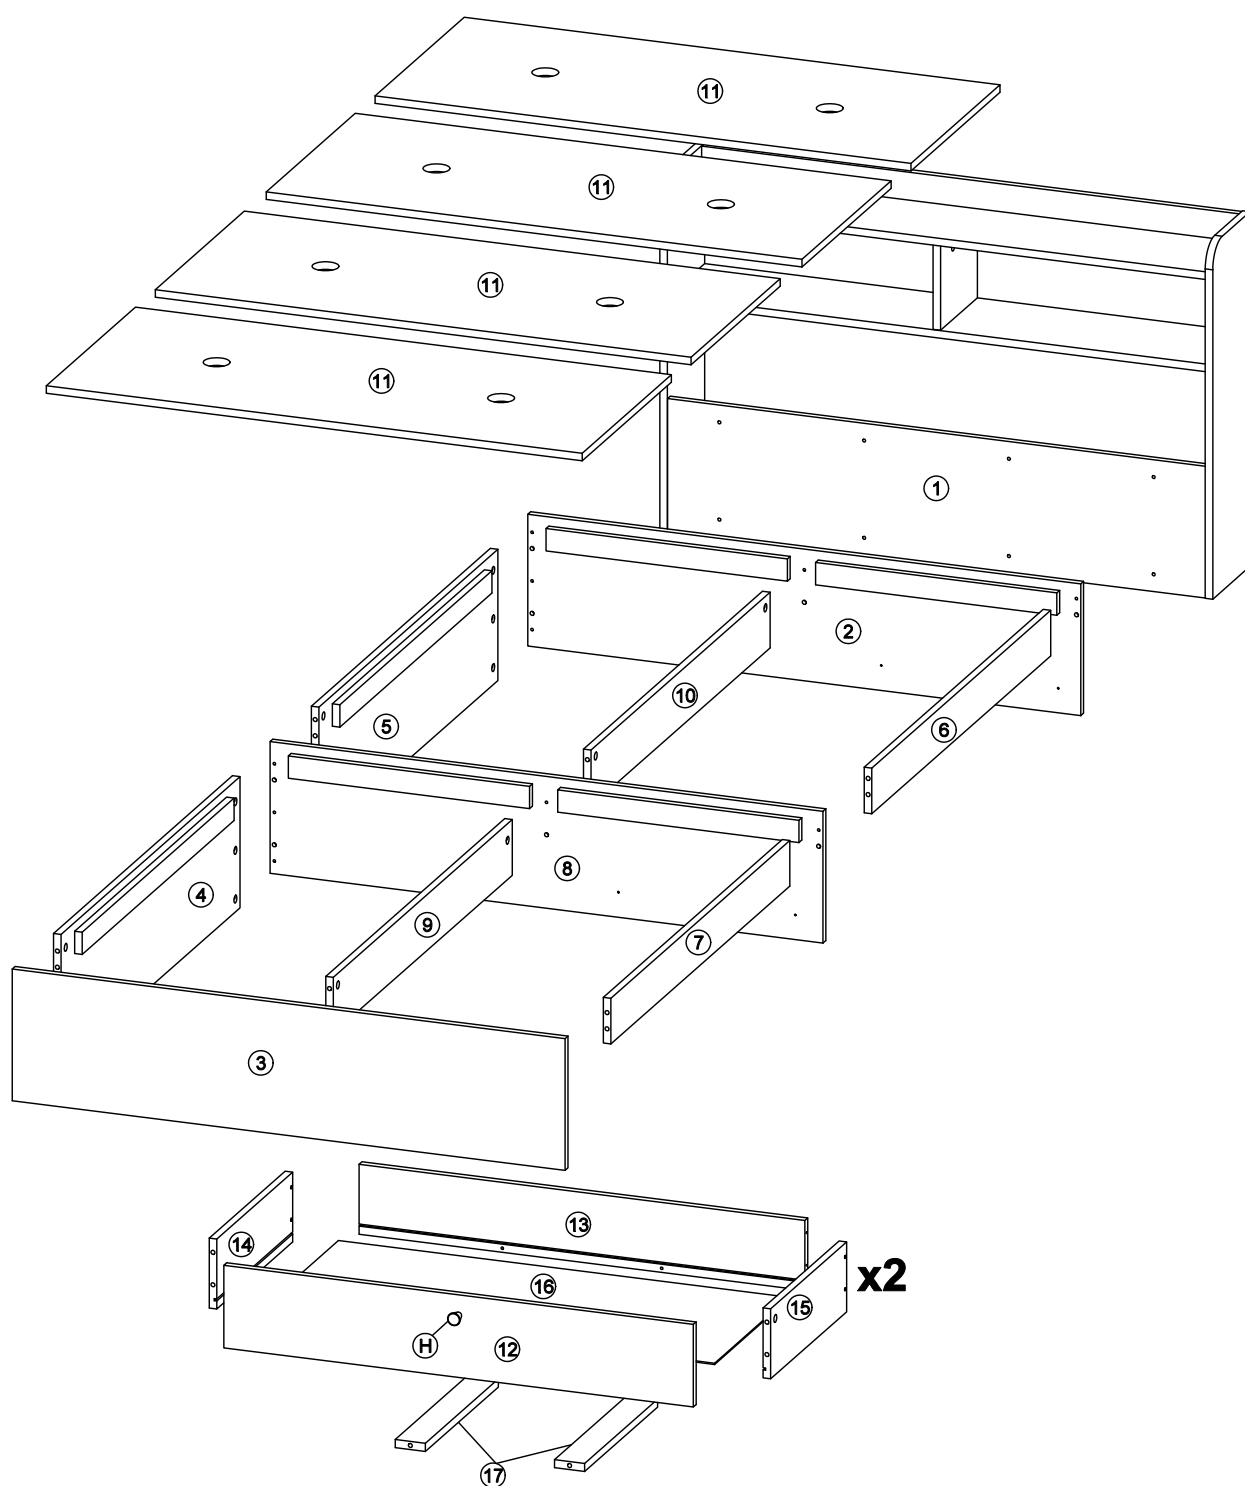


CODING
- 653027

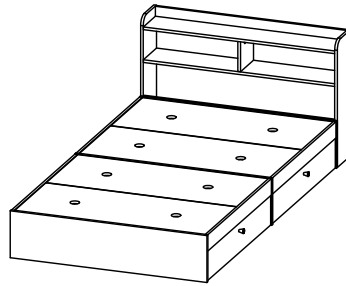

ISO 9001:2015
Reg. No. 00005-1-2017-1-Q008


STEP 1

- Hit hardware **F** into bottom of **(2)**, **(3)** and **(8)** using a hammer. (Repeat 6 times.)
- Insert hardware **A2** onto panel **(2)**, **(3)** and **(8)**. (Repeat 20 times.)

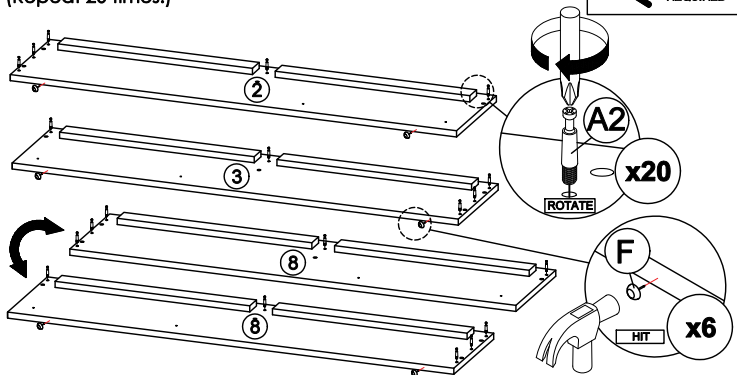


STEP 3

- Fix hardware **I1 (L/R)** into panel **(2)**, **(3)** and **(8)** with hardware **C**. (Repeat 4 times for each hardware.)

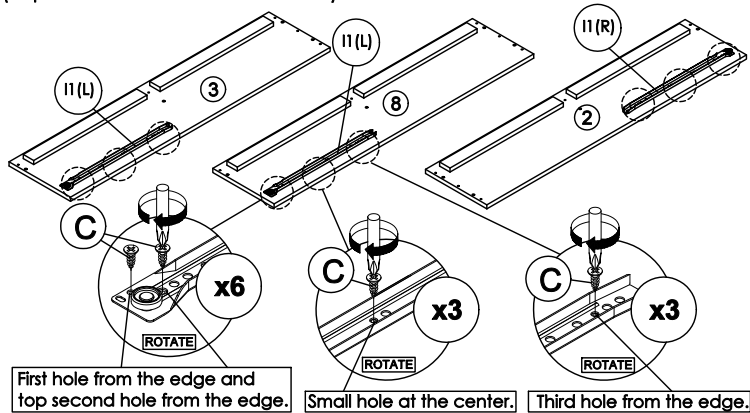

STEP 5


- Attach panel **(2)** and **(8)** to panel **(5)**, **(6)** and **(10)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**. (Repeat 10 times.)

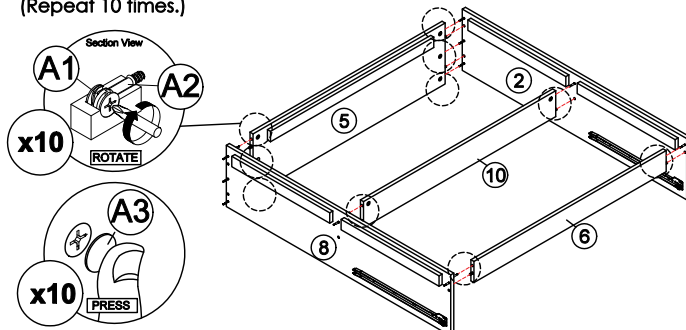

* In this step hardware **A1**, **A2** and **B** are pre-inserted.


STEP 2

- Hit hardware **F** into bottom of **(4)** and **(5)** by using a hammer. (Repeat 4 times.)
- Insert hardware **A1** onto panel **(4)**, **(5)**, **(6)**, **(7)**, **(9)**, and **(10)**. (Repeat 20 times.)
- Insert hardware **B** onto panel **(4)**, **(5)**, **(6)**, **(7)**, **(9)**, and **(10)**. (Repeat 16 times.)

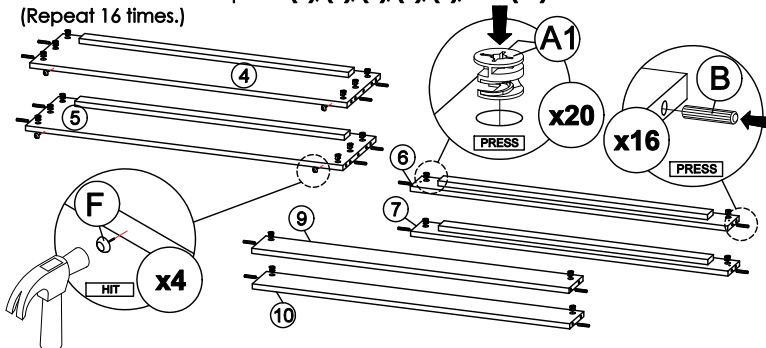


STEP 4

- Fix hardware **I1 (R)** into panel **(8)** with hardware **C**. (Repeat 4 times for each hardware.)

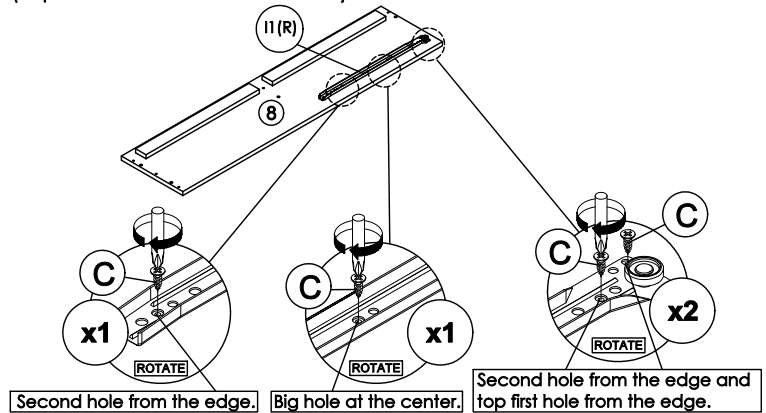


STEP 6

- Attach panel **(3)** and **(8)** to panel **(4)**, **(7)** and **(9)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**. (Repeat 10 times.)

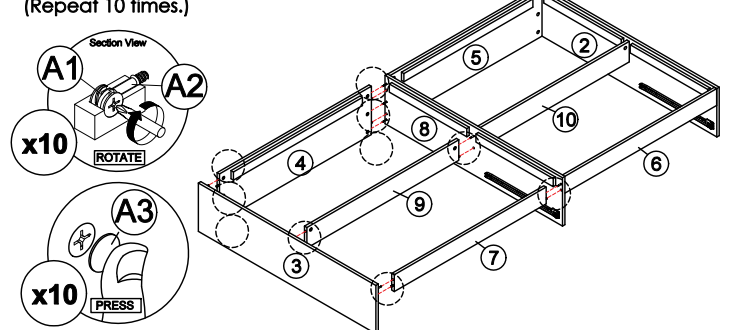

* In this step hardware **A1**, **A2** and **B** are pre-inserted.


CODING
- 653027

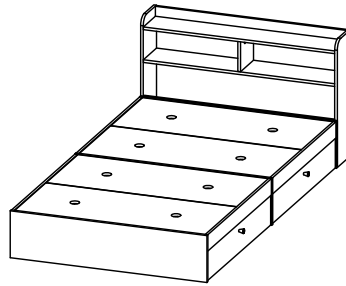

ISO 9001:2015
Reg. No. 00035-1-2017-1-Q008


STEP 7

- Assemble hardware **G** to panel (2), (3), (6), (7) and (8) with hardware **C**. (Repeat 8 times.)

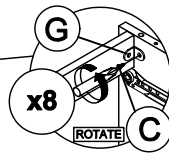


STEP 8

- Connect headboard (1) to panel (2) by using hardware **D**. (Repeat 8 times.)

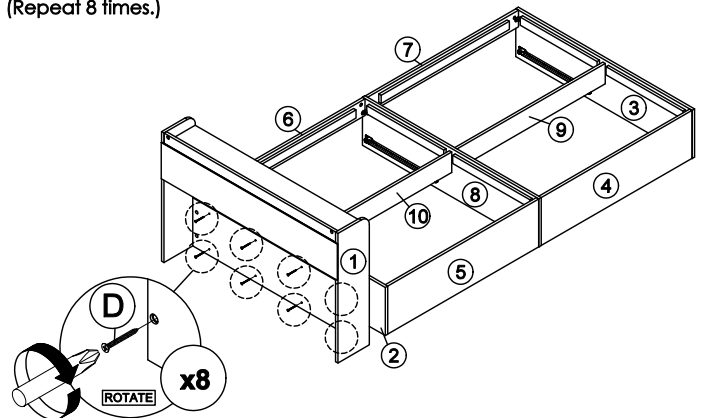


STEP 9

- Assemble panel (11) into between panel (4), (5) and (6), (7). (Repeat 4 times)

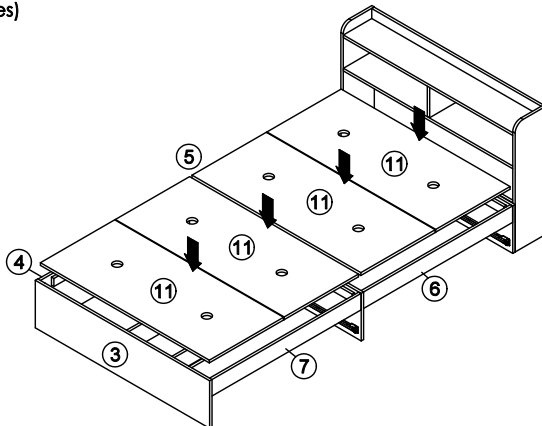


STEP 10

- Insert hardware **A1** onto panel (14), (15) and (17). (Repeat 12 times.)
- Insert hardware **A2** onto panel (12) and (13). (Repeat 12 times.)
- Insert hardware **B** onto panel (14) and (15). (Repeat 4 times.)

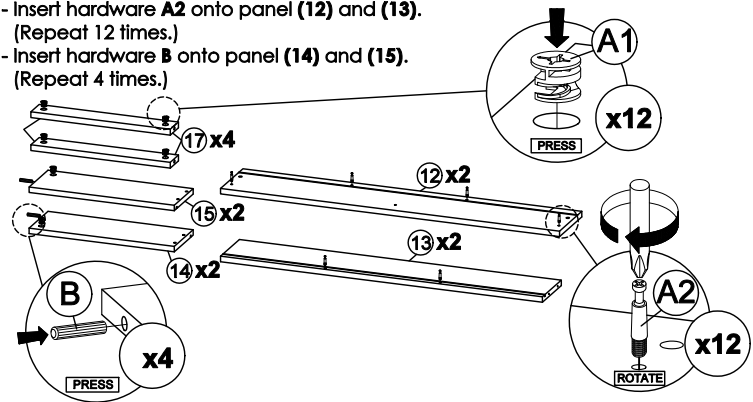


STEP 11

- Fix hardware **H** onto panel (12) by using hardware **D**. (Repeat 2 times.)

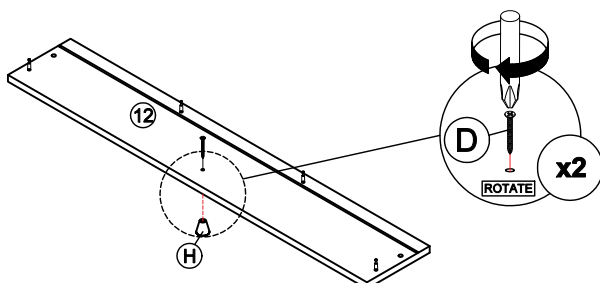

STEP 12


- Assemble panel (13) with panel (14) and (15) by using hardware **E**. (Repeat 8 times.)

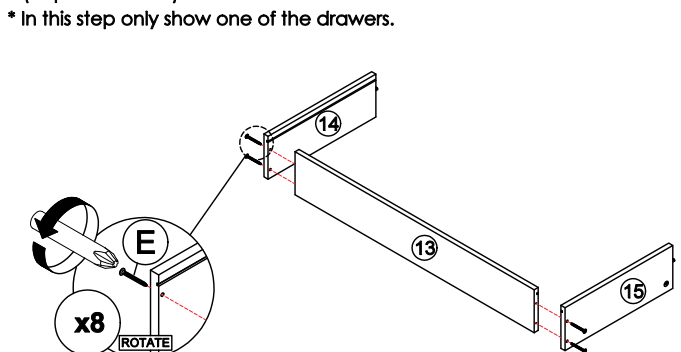

* In this step only show one of the drawers.

* In this step only show one of the drawers.

CODING
- 653027

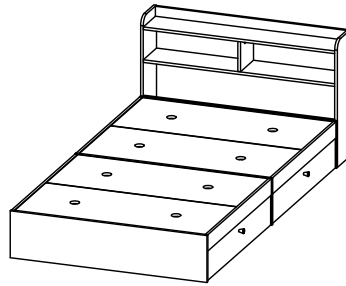


ISO 9001:2015
Reg. No. 000-GS-1-INT-1-QMS

STEP 13

Insert the panel (16) along the slot.
(Repeat 2 times.)

* In this step only show one of the drawers.

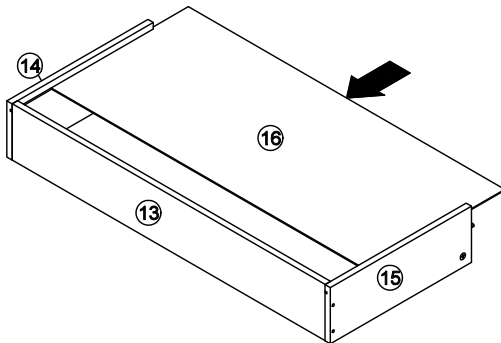

STEP 14

- Attach panel (17) to panel (13) then attach panel (12) to panel (14), (15) and (17).


- Insert all hardware A2 into A1.

- Rotate all A1 until tight.

- Apply A3 onto all A1.

(Repeat 12 times.)

* In this step only show one of the drawers.

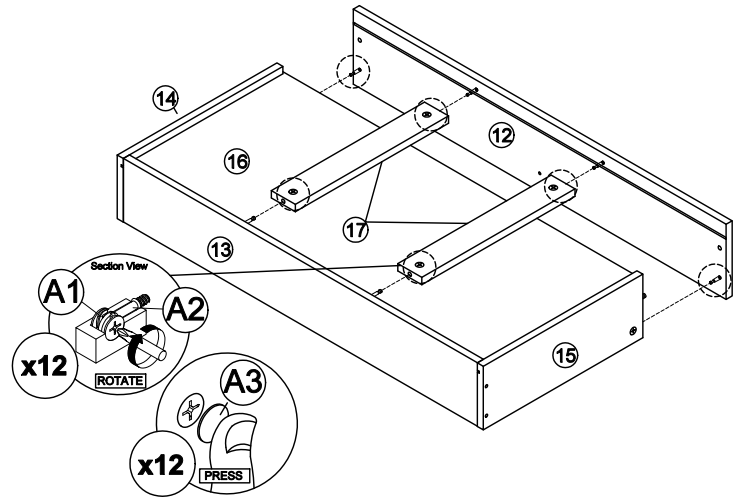

SCREWDRIVER
REQUIRED


STEP 15

- Assemble hardware I2 (L/R) to panel (14) and (15) by using hardware C.

(Repeat 3 times for each hardware.)

* In this step only show one of the drawers.

SCREWDRIVER
REQUIRED

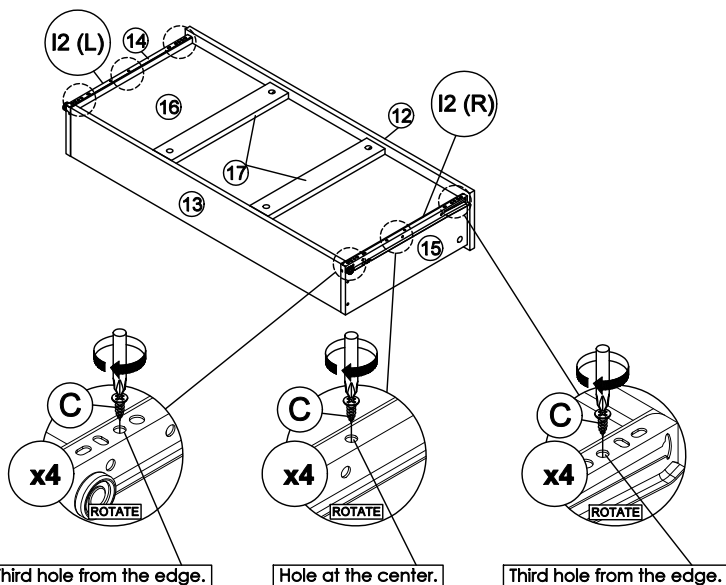

Third hole from the edge.

Hole at the center.

Third hole from the edge.

*Hardware I2 (L/R) shall be leaning against panel (12) when assembling.

* In this step hardware A1, A2 and B are pre-inserted.

STEP 16

- Put all the drawer in place along the drawer slides.

