

CODING
-655033ISO 9001:2015
Reg. No. 000495-I-MY-I-QMS

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		Bolts M6x45	16
(B)		Washers M6 x 22	32
(C)		Lock washer M6 x 11	32
(D)		Bolts M6x20	16
(E)		Allen key K4	1
(F)		Allen key K5	1
(G)		Bolts M6x12	8
(H)		Screw M4x30	2
(I)		Felt	4


ITEM	PHOTO	PARTS NAME	QTY
(1)		Headboard	1
(2)		Foot board	1
(3)		Side rail L+R	2
(4)		Center rail	1
(5)		Slat	13
(6)		Latch	4
(7)		Leg	2

CODING
-655033




ISO 9001:2015
Reg. No. 000495-I-MY-I-QMS

1

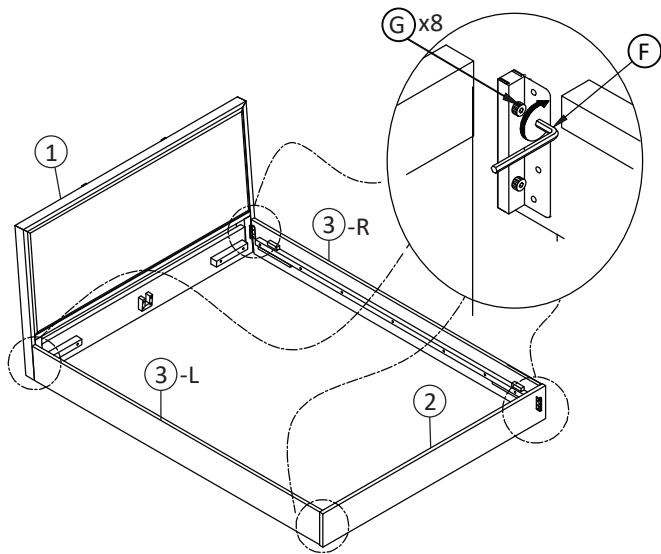

2

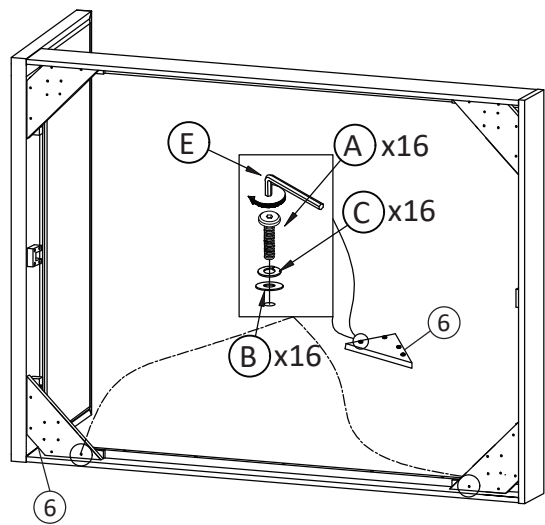

CODING
-655033



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

3

4

