

CODING

- 655068

- 655067



ISO 9001:2015
Reg.No.000435-1-MY-1-QMS

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a to prevent from scratches

CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN

ITEM	PHOTO	HARDWARE NAME	KING	QUEEN	FULL
1		JCBC M8x25mm	8	8	8
2		JCBC M6x25mm	8	8	8
3		JCBC M6x60mm	8	4	4
4		CSK M4x32mm	8	8	8
5		Flat Washer M6	8	8	8
6		Spring Washer M6	8	8	8
7		Allen Key M5	1	1	1
8		Allen Key M4	1	1	1

ITEM	PHOTO	HARDWARE NAME	KING	QUEEN	FULL
A		Headboard	1	1	1
B		Footboard	1	1	1
C		Left Side Rail	2	2	2
D		Right Side Rail	2	2	2
E		Center Support Rail	4	2	2
F		Slats	2 sets (8 Holes)	2 sets	2 sets
G		Slats Support	8	4	4
H		Side Rail Leg	2	2	2
I		Leg	4	4	4

CODING


- 655068

- 655067




ISO 9001:2015
Reg.No.000435-1-MY-1-QMS


1

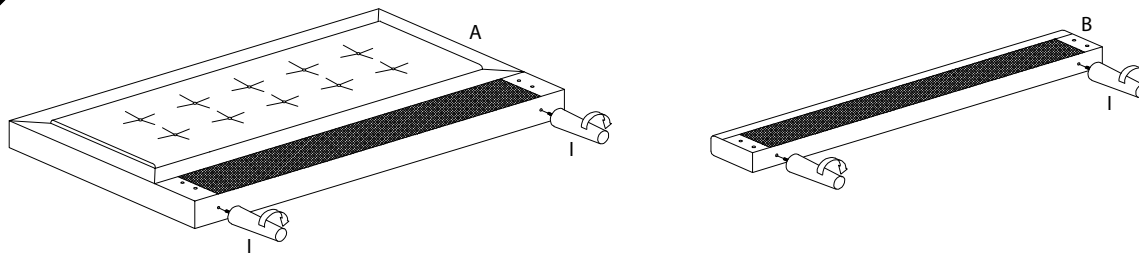

2

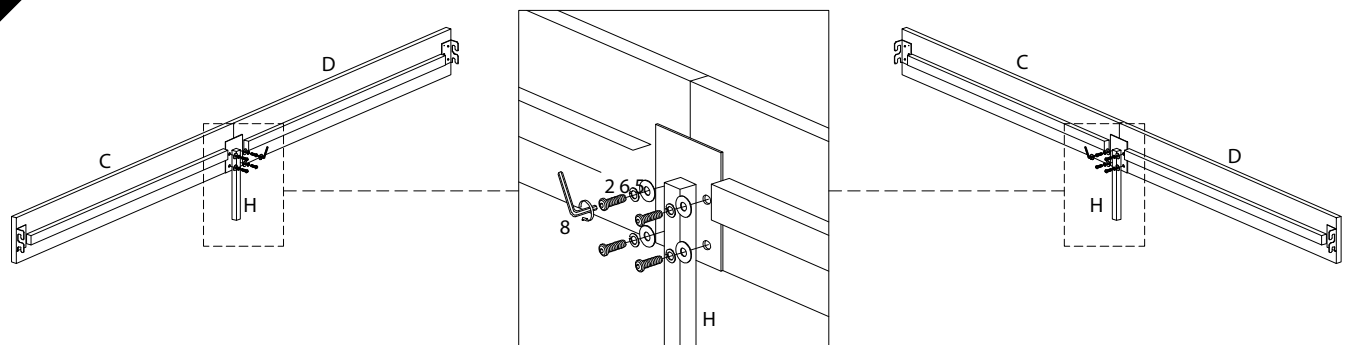

3

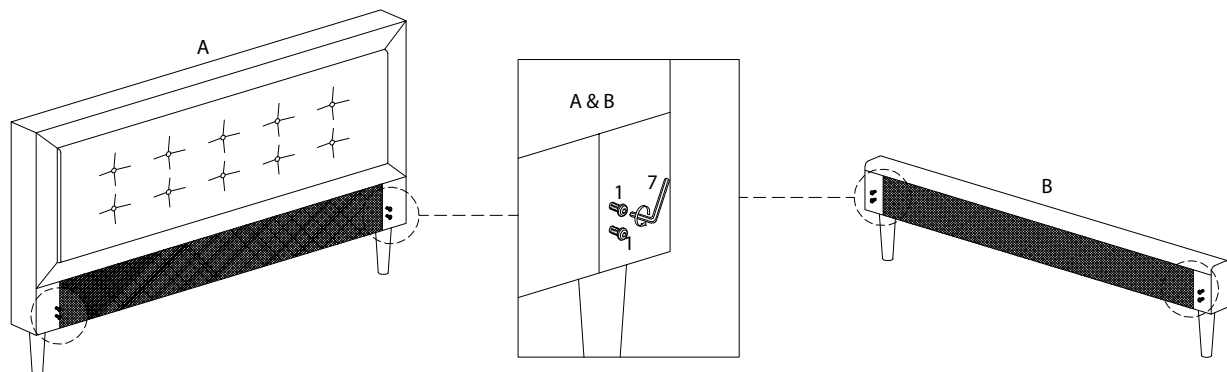


CODING

- 655068
- 655067
- 655078
- 655079
- 656075
- 656076
- 656068
- 656069




ISO 9001:2015
Reg.No.000435-1-MY-1-QMS

4

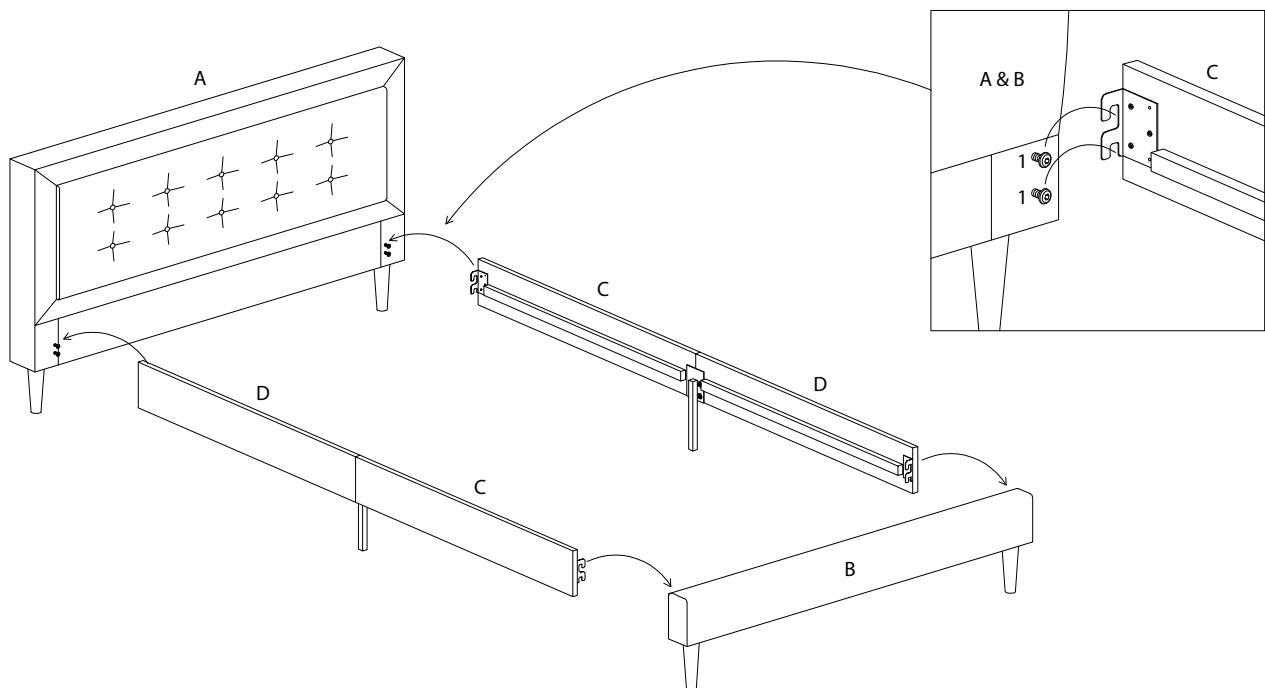

5

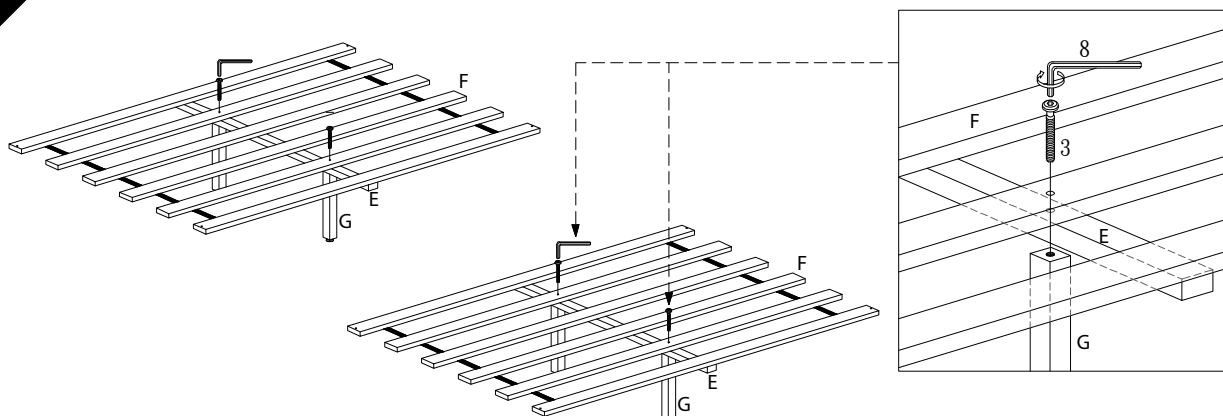


CODING

- 655068
- 655067
- 655078
- 655079
- 656075
- 656076
- 656068
- 656069



ISO 9001:2015
Reg.No.000435-1-MY-1-QMS

6

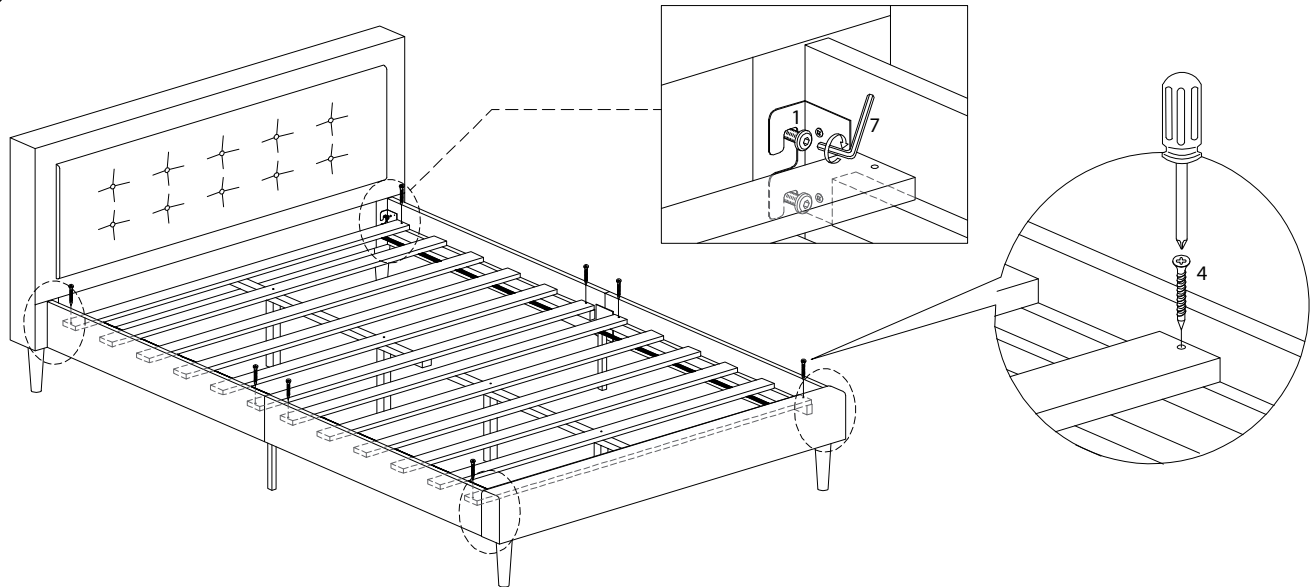

7

