


CODING

- 655103

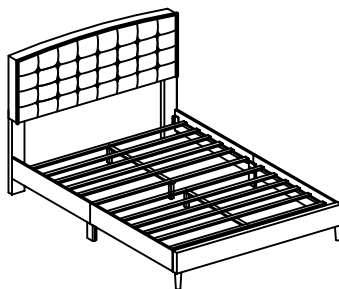

ISO 9001:2015

Reg.No. 000435-1-MY-QMS

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		ALLEN KEY M4 x 65mm	1
(B)		ALLEN KEY M5 x 70mm	1
(C)		JCB B M8 x 20	8
(D)		JCB C M6 x 30	8
(E)		JCB C M6 x 50	6
(F)		JCB C M6 x 60	4
(G)		CSK SCREW 32MM	24
(H)		SPRING WASHER	6
(I)		FLAT WASHER	8
(J)		SMALL ADJUSTER	4


ITEM	PHOTO	PARTS NAME	QTY
(1)		HEADBOARD	1
(2)		FOOTBOARD	1
(3)		SIDE RAIL	4
(4)		HEADBOARD LEGS	2
(5)		LEGS	2
(6)		SIDE RAIL LEGS	2
(7)		CENTER RAIL	2
(8)		SLAT	2
(9)		SUPPORT LEGS	4

CODING
- 655103

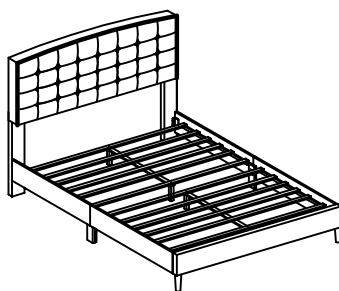

ISO 9001:2015
Reg.No. 000435-1-MY-QMS


1

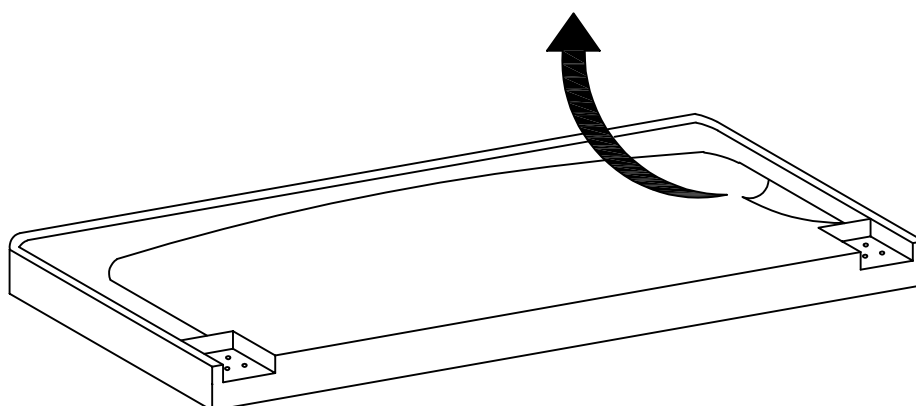

Attention: Zip the black non-woven fabric after take out the parts !!


BACK VIEW

2

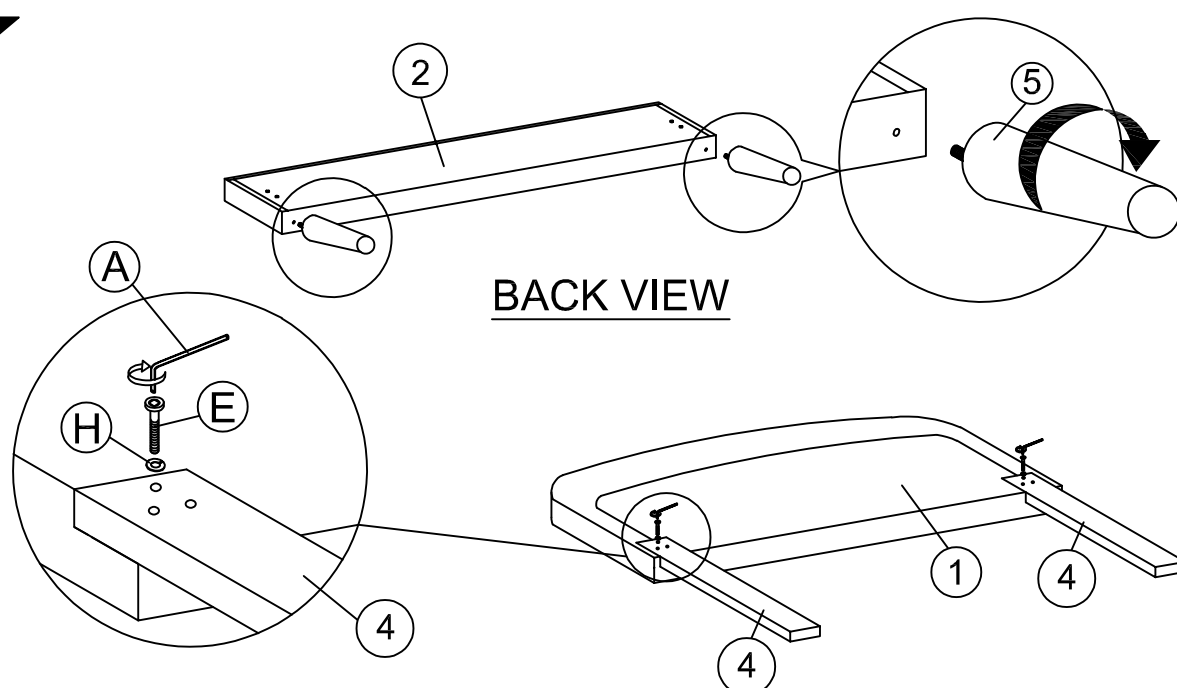


BACK VIEW

CODING
- 655103

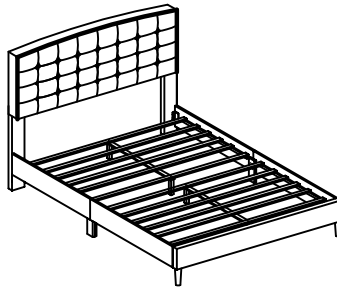


ISO 9001:2015
Reg.No. 000435-1-MY-QMS

3

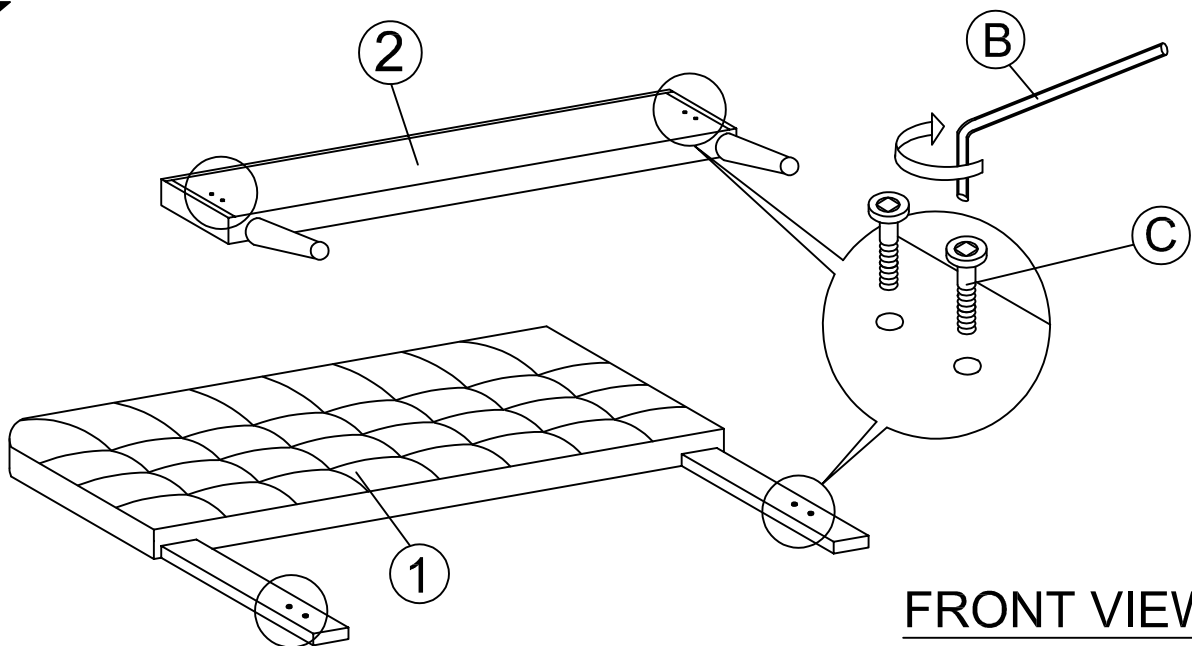


FRONT VIEW

4

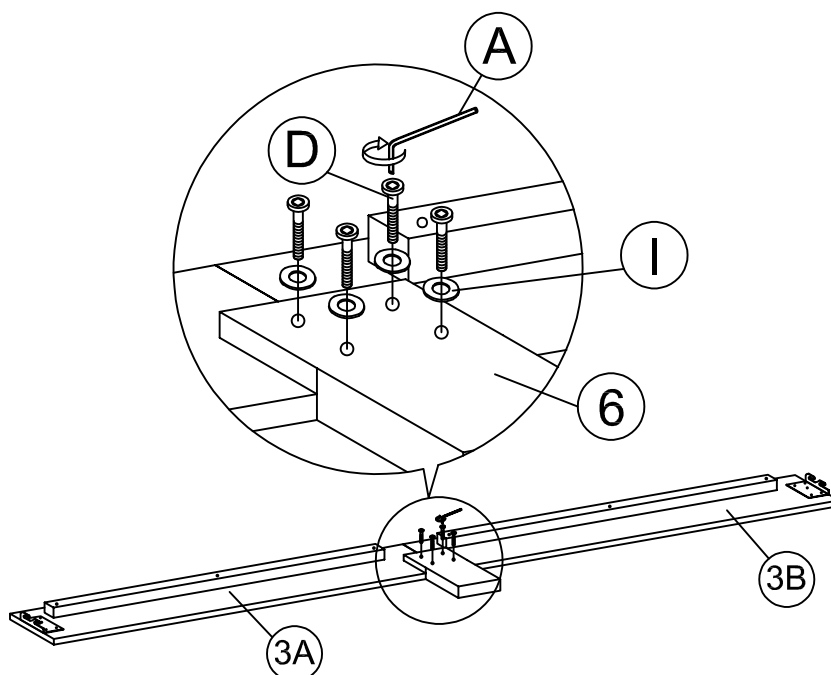


CODING
- 655103

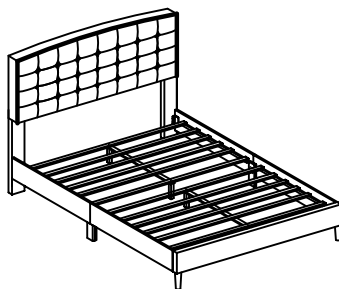


ISO 9001:2015
Reg.No. 000435-1-MY-QMS


5

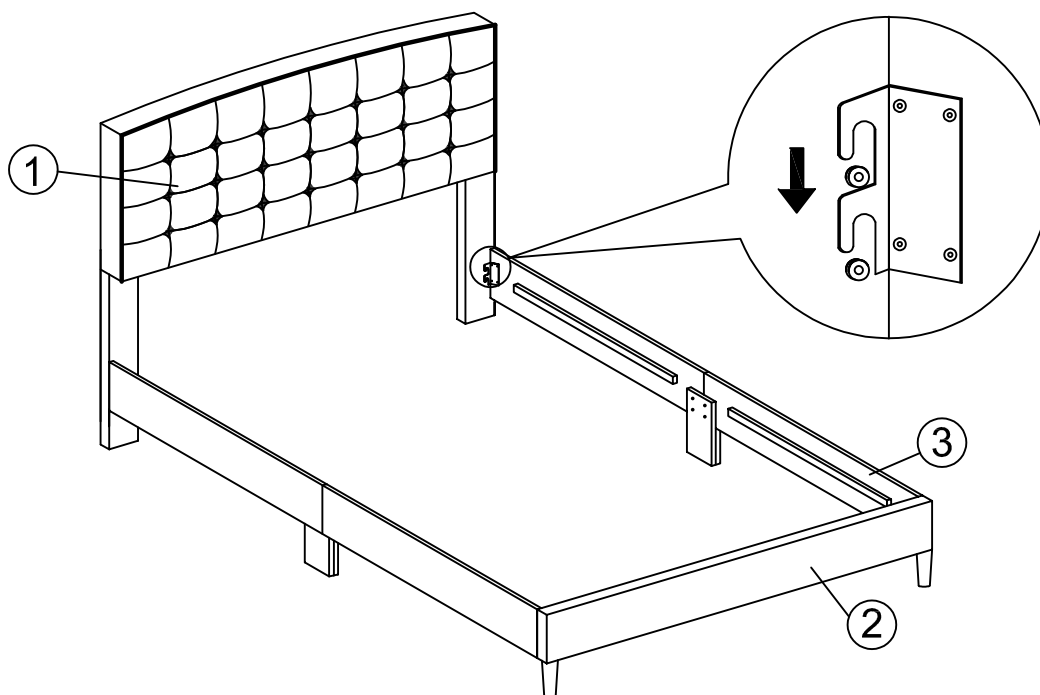

6

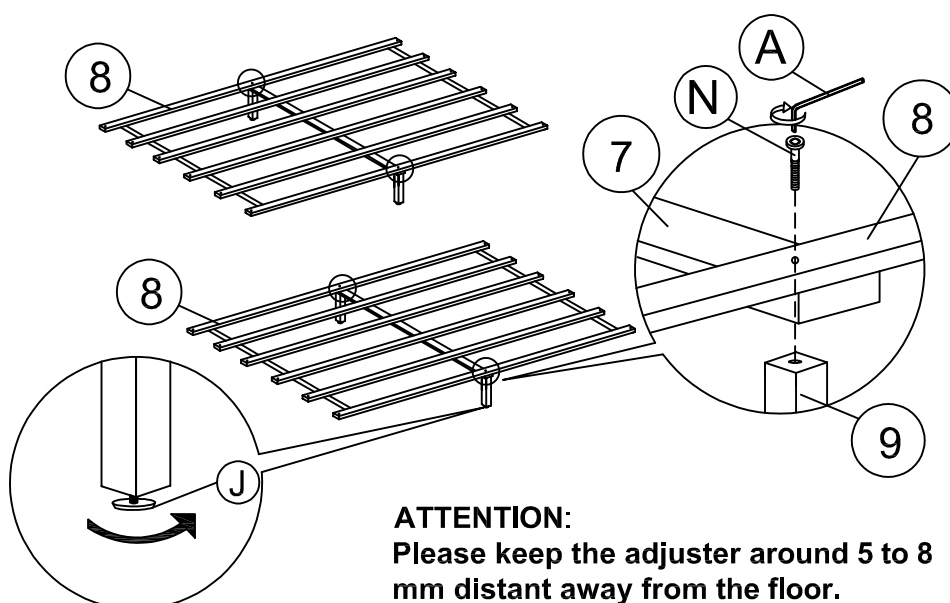

CODING
- 655103

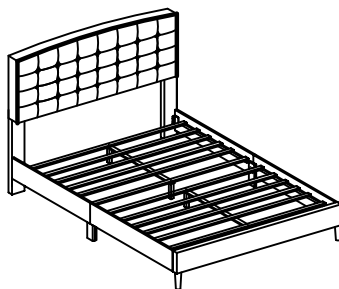

ISO 9001:2015
Reg.No. 000435-1-MY-QMS

7

