

CODING
- 655131
- 644132











ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS



Read the instruction carefully . Remove all the wrapping material staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure you have all part before you start assembling. Place all the wooden furniture part on a clean and flat surface, such as carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

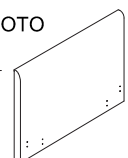
ITEM	PHOTO	HARDWARE NAME	QTY
A		JCBC M6 x 50 mm	16
B		JCBC M6 x 35 mm	46
C		JCBC M6 x 15 mm	8
D		FLAT WASHER M6	54
E		WOOD DOWEL 8 x 30 mm	10
F		ALLEN KEY M4	1

ITEM	PHOTO	PARTS NAME	QTY
①		HEADBOARD	1
②		INSIDE RAIL	2
③		INSIDE FOOTBOARD	1
④		OUTSIDE RAIL	2
⑤		OUTSIDE FOOTBOARD	1
⑥		MDF BOARD FOR FOOTBOARD SIDE	1
⑦		MDF BOARD	4
⑧		LVL CENTER RAIL	4
⑨		SUPPORT LEG	8

CODING
- 655131
- 644132




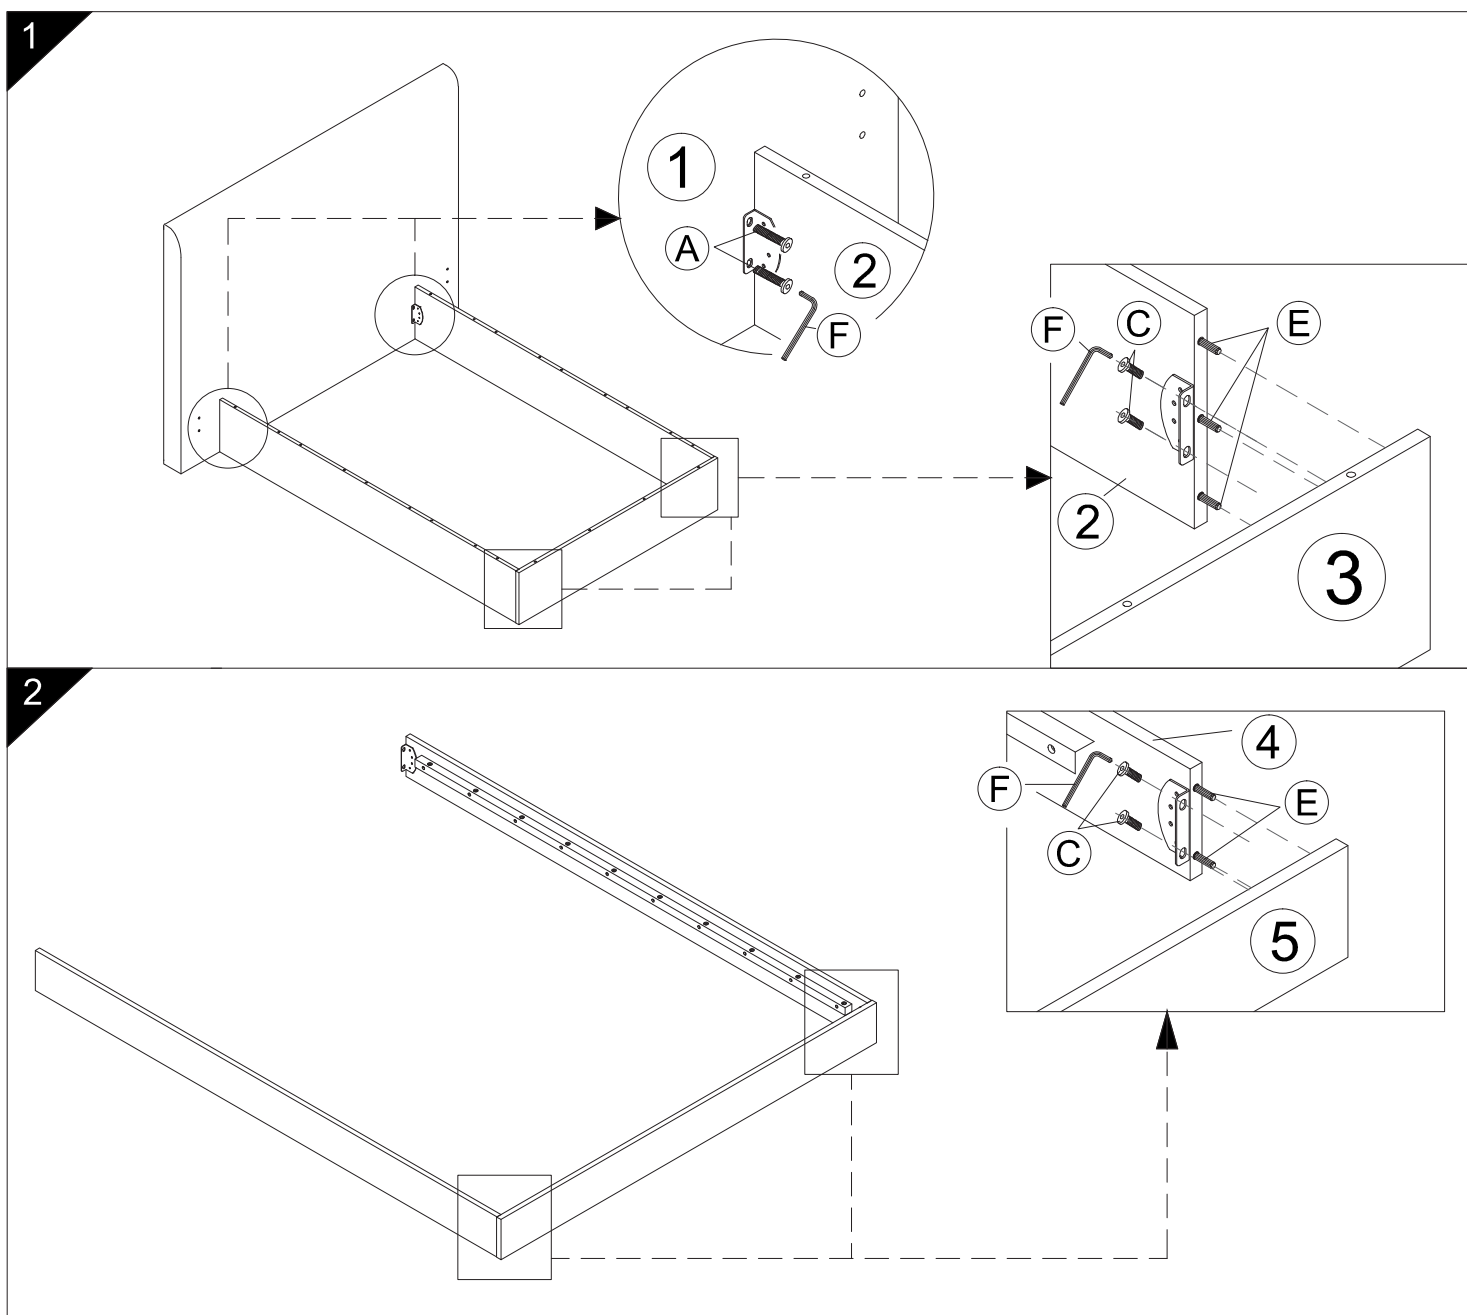
ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS



CODING
- 655131
- 644132



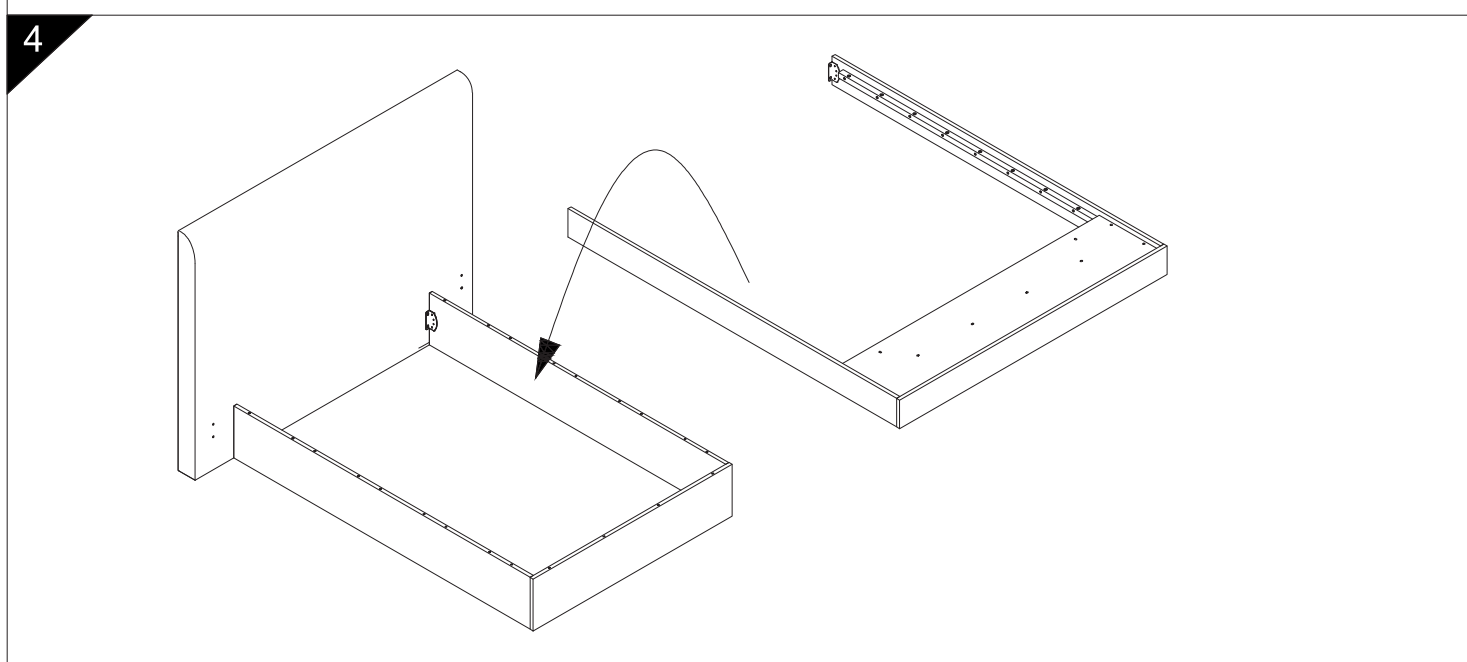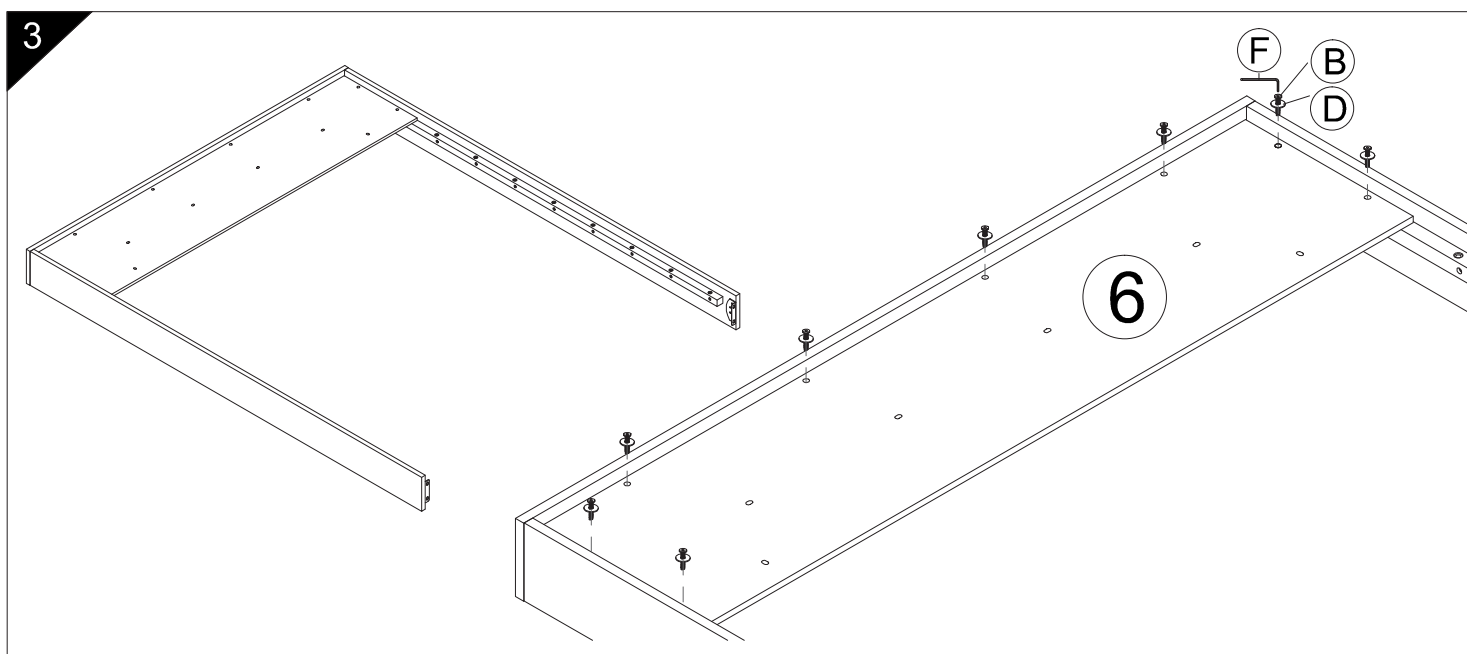
ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS



CODING
- 655131
- 644132



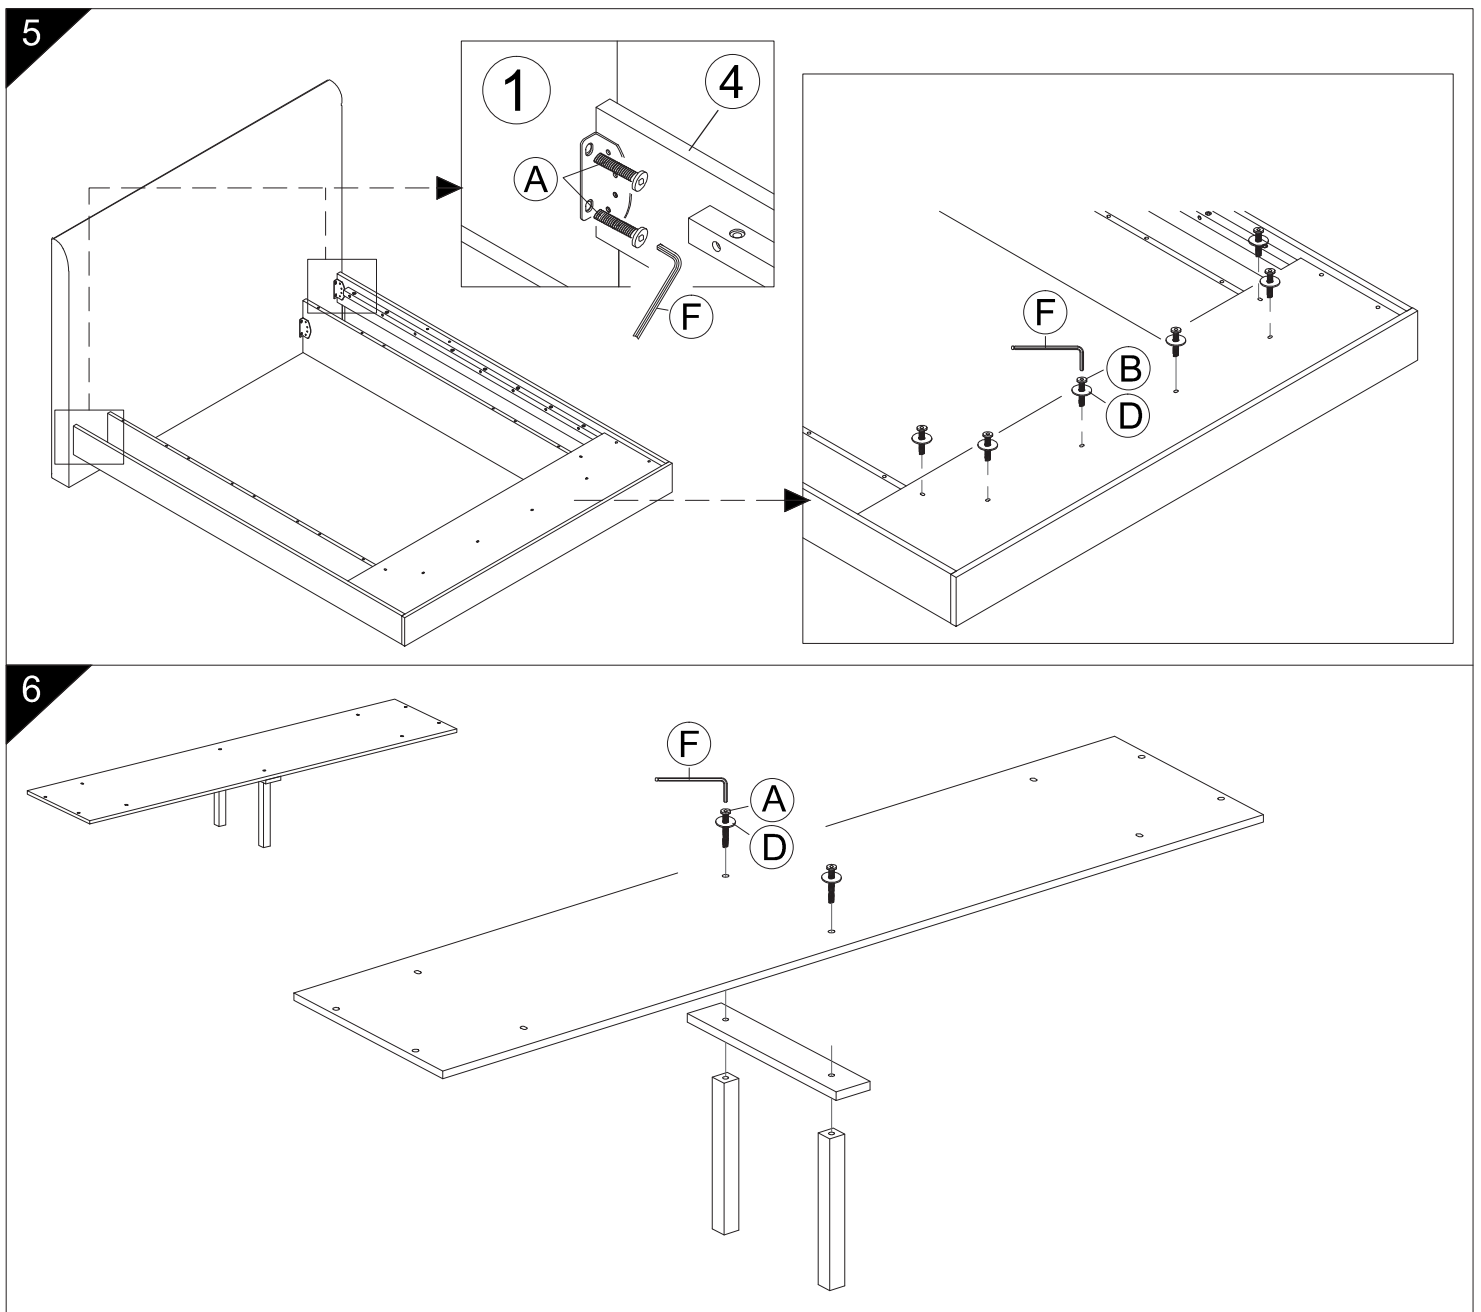ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS




CODING
- 655131
- 644132



ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS

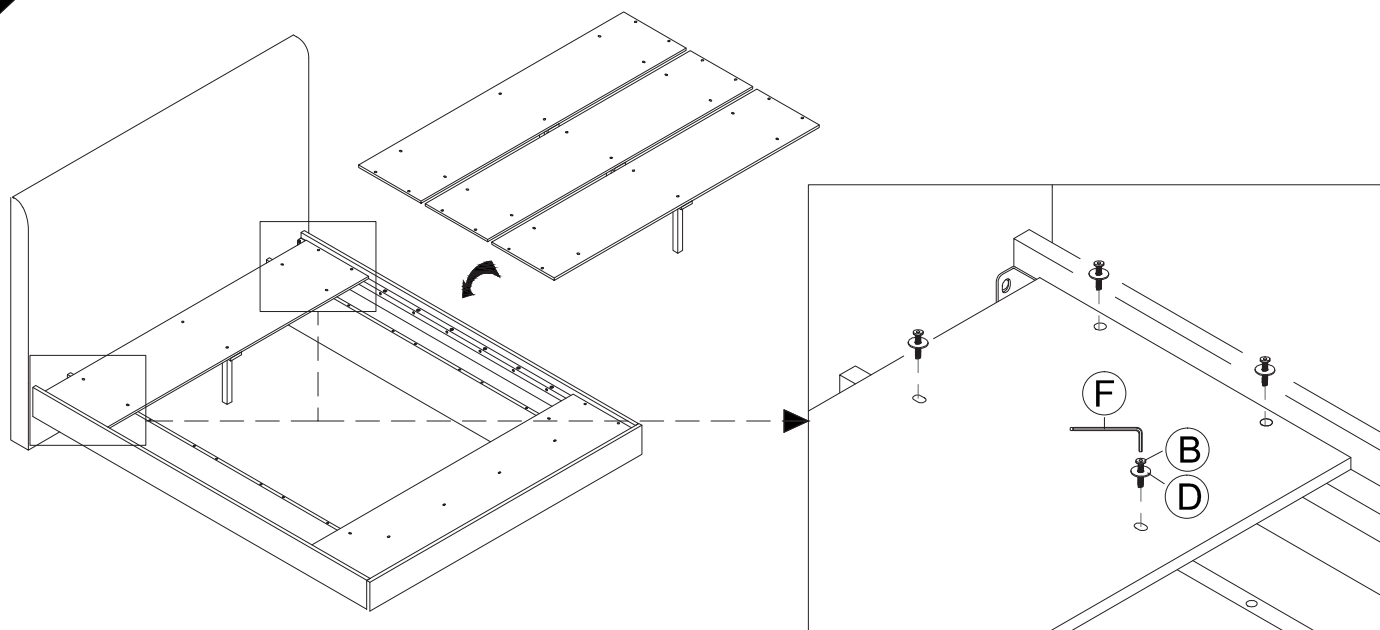7



8

