

CODING


- 655142










- 655143

ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS

Read the instruction carefully . Remove all the wrapping material staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure you have all part before you start assembling. Place all the wooden furniture part on a clean and flat surface, such as carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY
A		METAL PAD	8
B		JCBC M6 x 15 mm	16
C		WOOD DOWEL M10 X 30mm	8
D		METAL HOLE	4
E		SPRING WASHER M6	4
F		JCBC M6 x 50 mm	4
G		FLAT WASHER M6	4
H		JCBC M6 x 70 mm	20
I		ADJUSTER SCREW	12
J		CSK M4 x 32mm	12
K		ALLEN KEY M4	1

ITEM	PHOTO	PARTS NAME	QTY
1		HEADBOARD	1
2		HEADBOARD BACK RAIL	2
3		HEADBOARD RAIL	1
4		FOOTBOARD RAIL	1
5		SIDE RAIL	2
6		LEG	4
7		MDF BOARD	3
8		CENTER RAIL	6
9		SUPPORT LEG	12


CODING

- 655142

- 655143



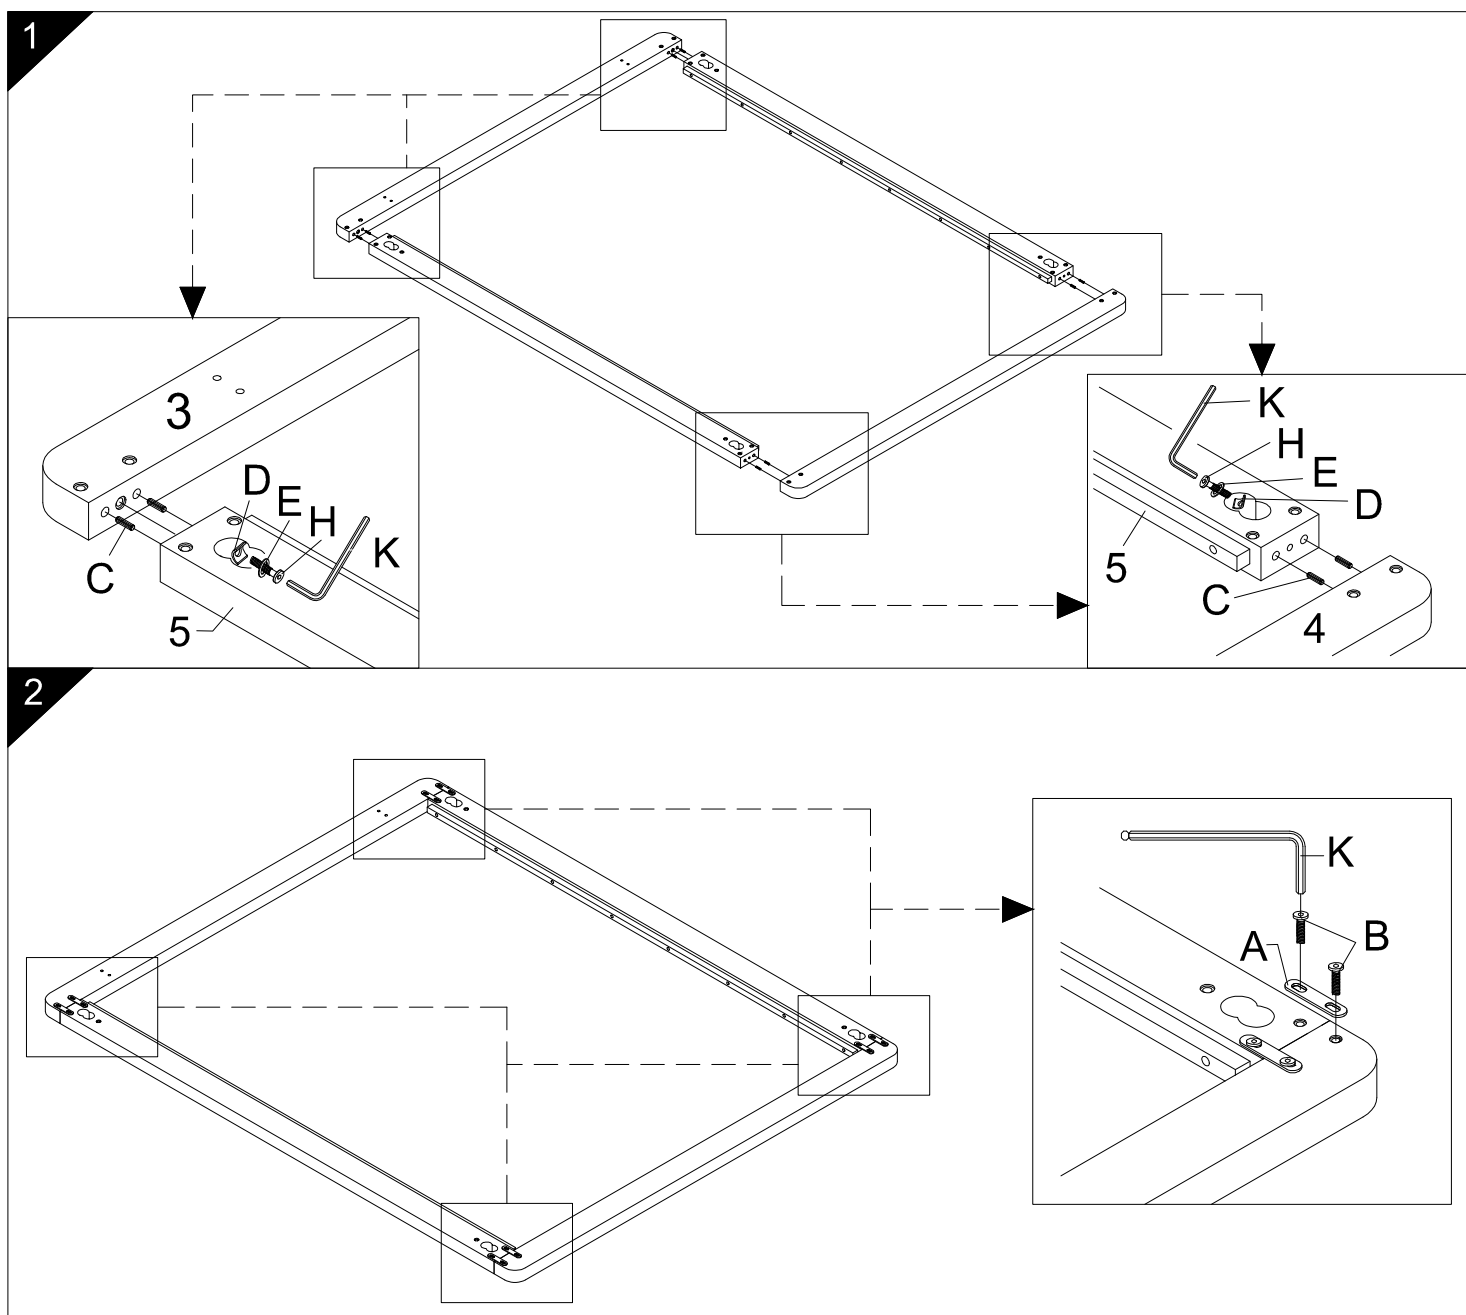
ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS



CODING
- 655142
- 655143



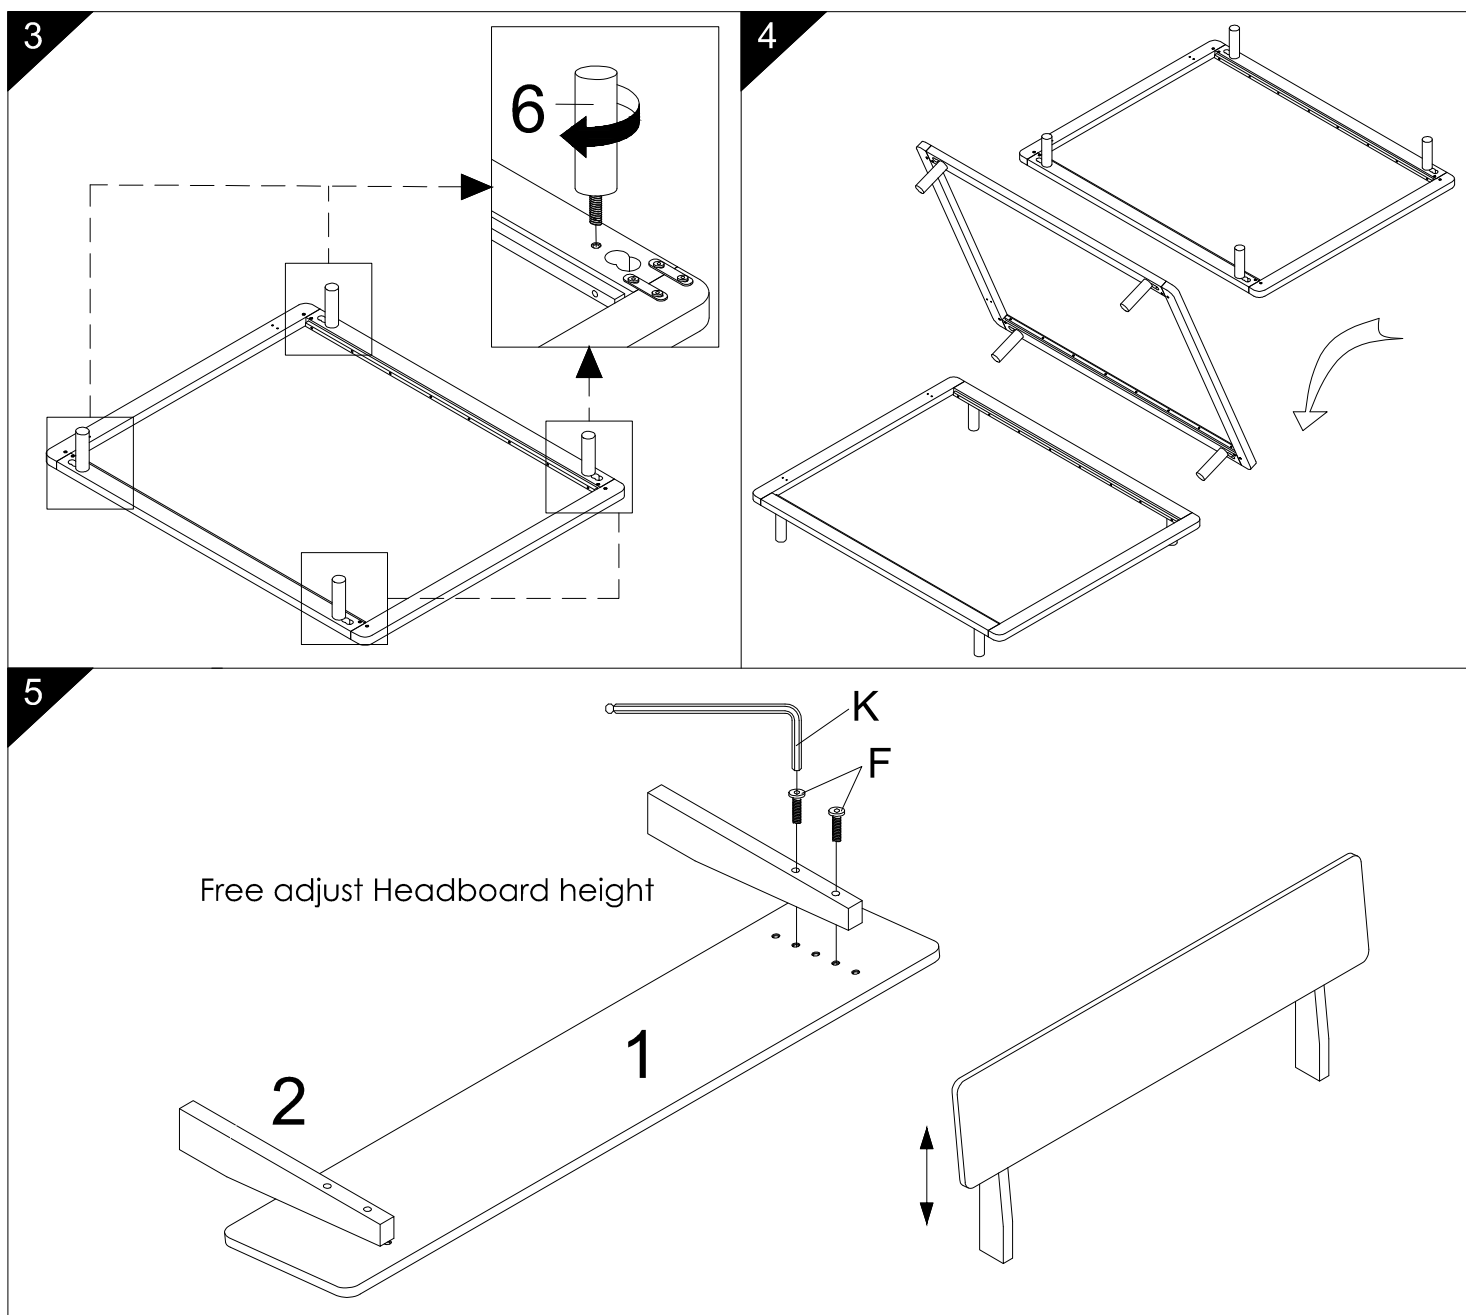
ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS



CODING
- 655142
- 655143



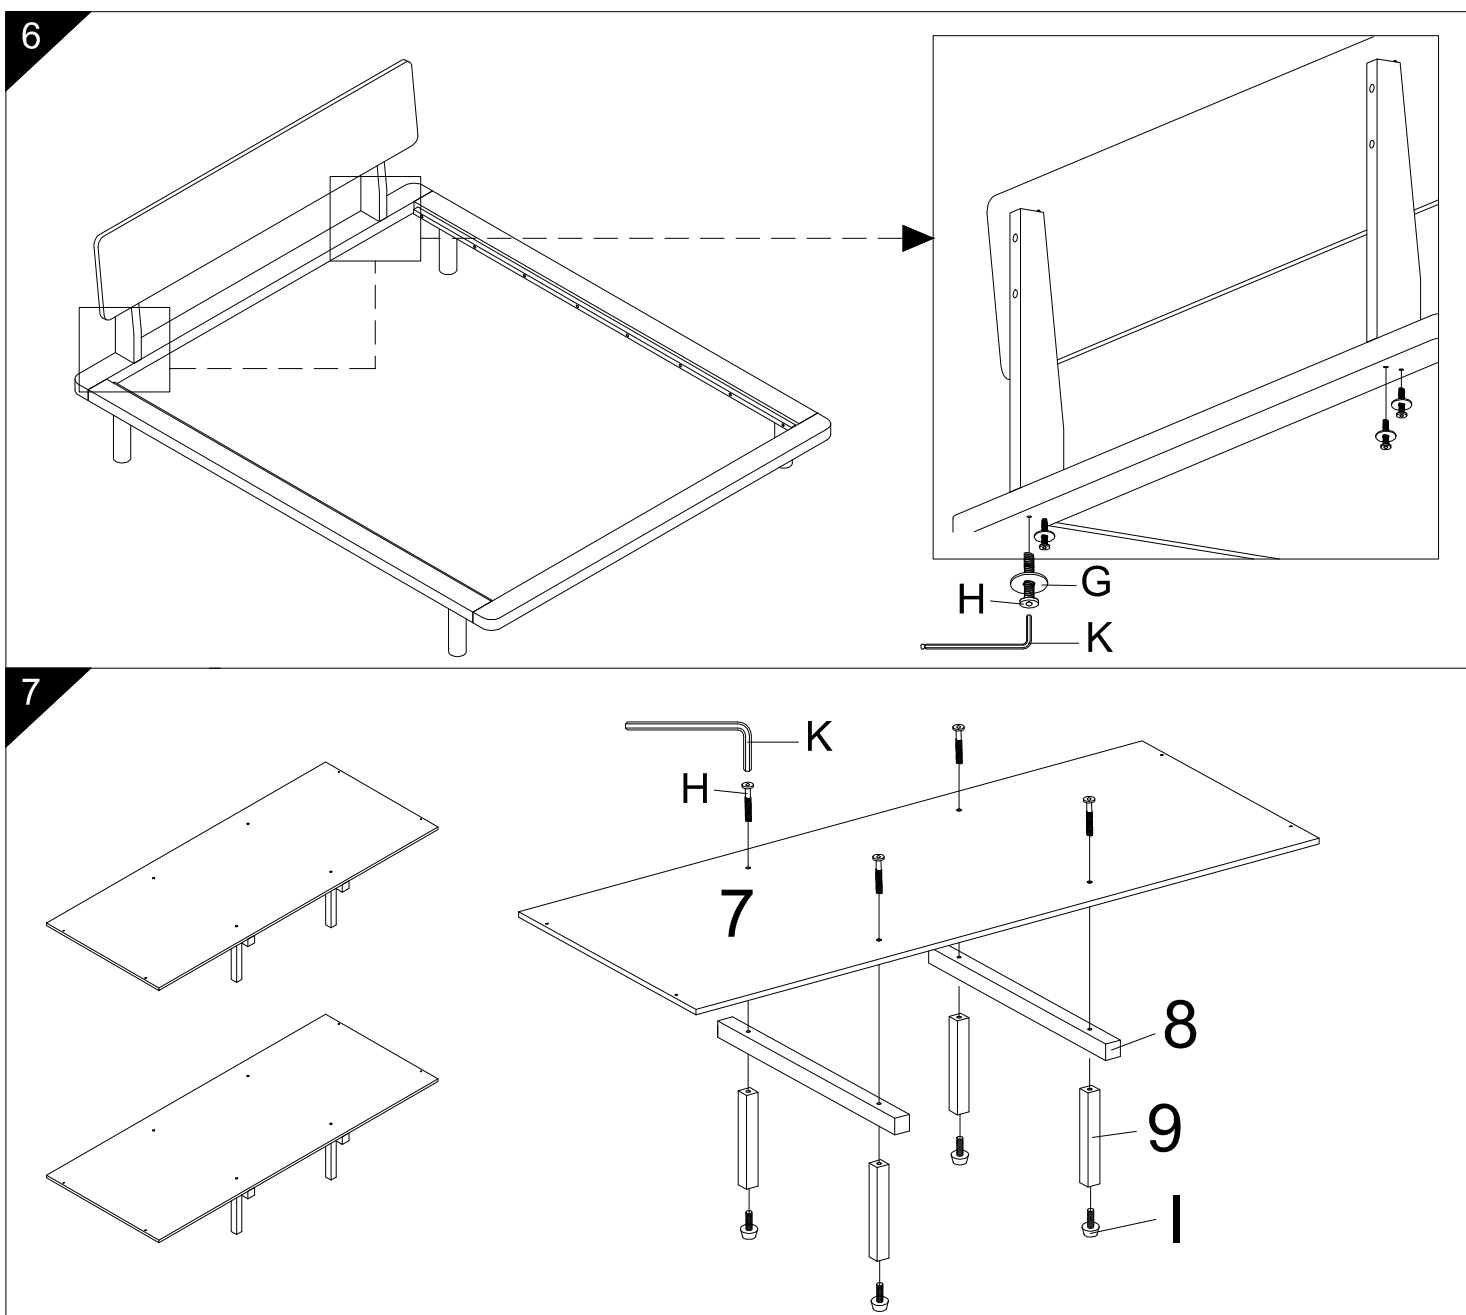ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS



CODING
- 655142
- 655143



ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS

