

**CODING**  
-655148




**ISO 9001:2015**  
Reg. No. 000435-I-MY-I-QMS

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches .

**Caution**  
**KEEP ALL PARTS OUT OF REACH OF CHILDREN.**




| ITEM | HARDWARE LIST                                                                                            | QTY |
|------|----------------------------------------------------------------------------------------------------------|-----|
| Ⓐ    | JCBC SCREW M8 X 45MM  | 24  |
| Ⓑ    | JCBC SCREW M6 X 15MM  | 4   |
| Ⓒ    | SPRING WASHER 5/16"   | 28  |
| Ⓓ    | FLAT WASHER 5/16"     | 28  |
| Ⓔ    | ALLEN KEY M8          | 1   |
| Ⓕ    | ALLEN KEY M6          | 1   |
| Ⓖ    | SCREW 4X25MM          | 18  |
| Ⓗ    | JCBC SCREW M8 X 16MM  | 8   |

| ITEM | PART LIST                                                                                                     | QTY |
|------|---------------------------------------------------------------------------------------------------------------|-----|
| ①    | HEADBOARD                | 1   |
| ②    | FOOTBOARD                | 1   |
| ③    | SIDE RAIL (R)            | 1   |
| ④    | SIDE RAIL (L)            | 1   |
| ⑤    | LEG                      | 4   |
| ⑥    | METAL CENTER             | 1   |
| ⑦    | CENTER SUPPORT PANEL     | 3   |
| ⑧    | WOOD BAR CONNECT TO LEG  | 4   |
| ⑨    | SUPPORT LEG              | 2   |

**CODING**  
-655148



**ISO 9001:2015**  
Reg. No. 000435-1-MY-1-QMS

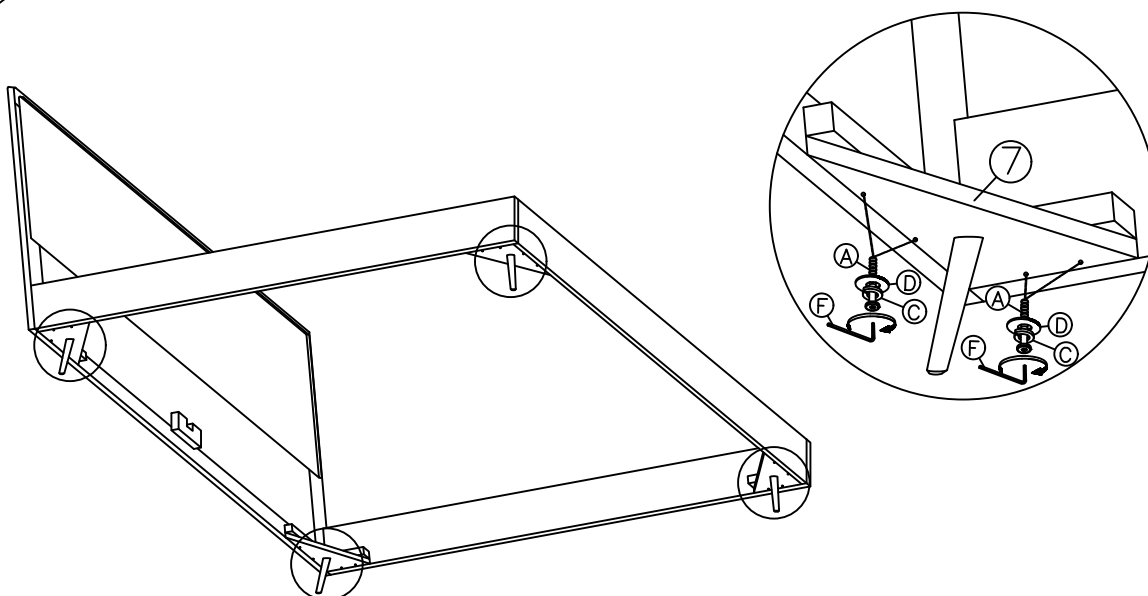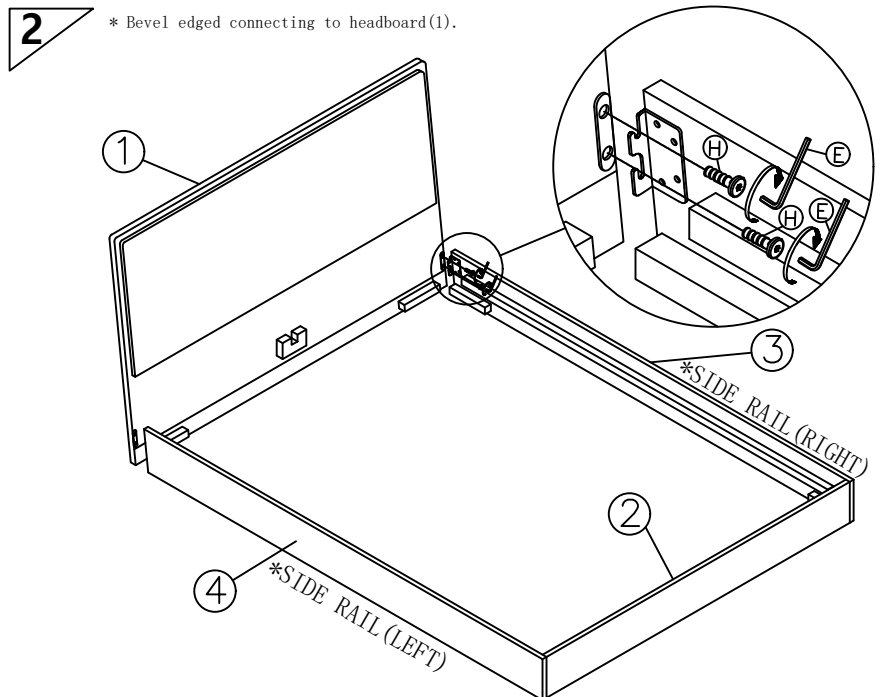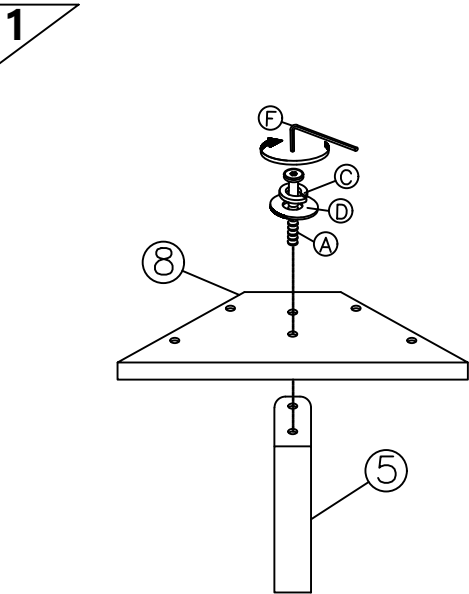


**CODING**  
-655148




**ISO 9001:2015**  
Reg. No. 000435-1-MY-1-QMS

4

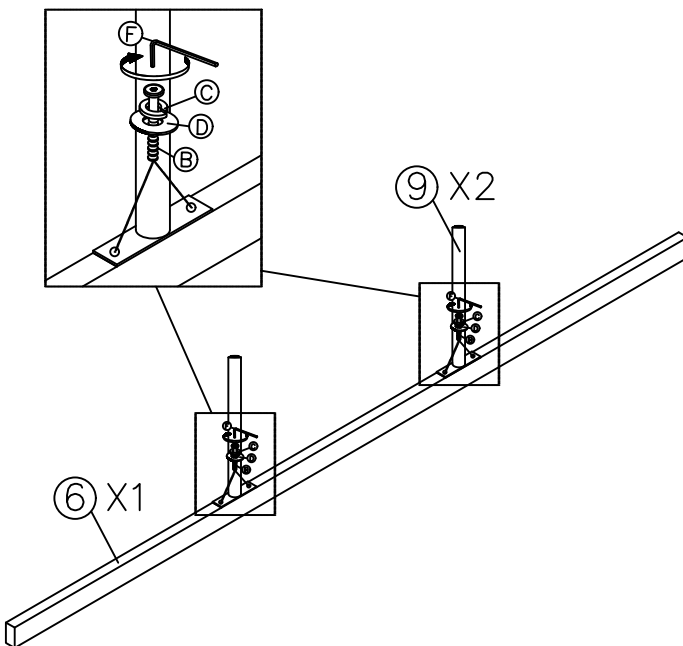

5

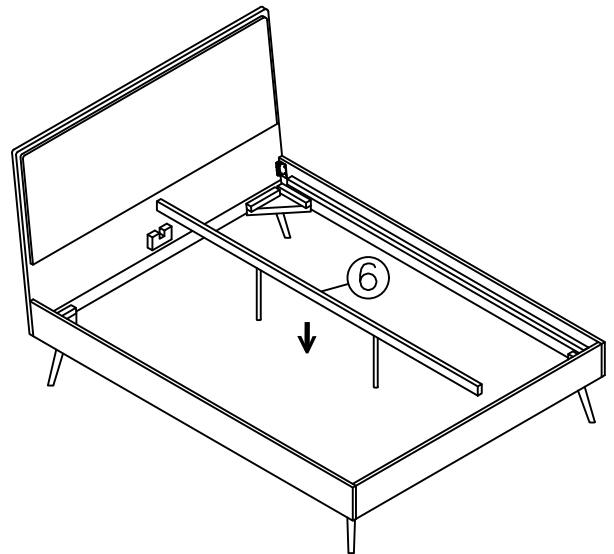

5

