

CODING
- 655151
- 655152








ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS



Read the instruction carefully . Remove all the wrapping material staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure you have all part before you start assembling. Place all the wooden furniture part on a clean and flat surface, such as carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN ' S REACH.

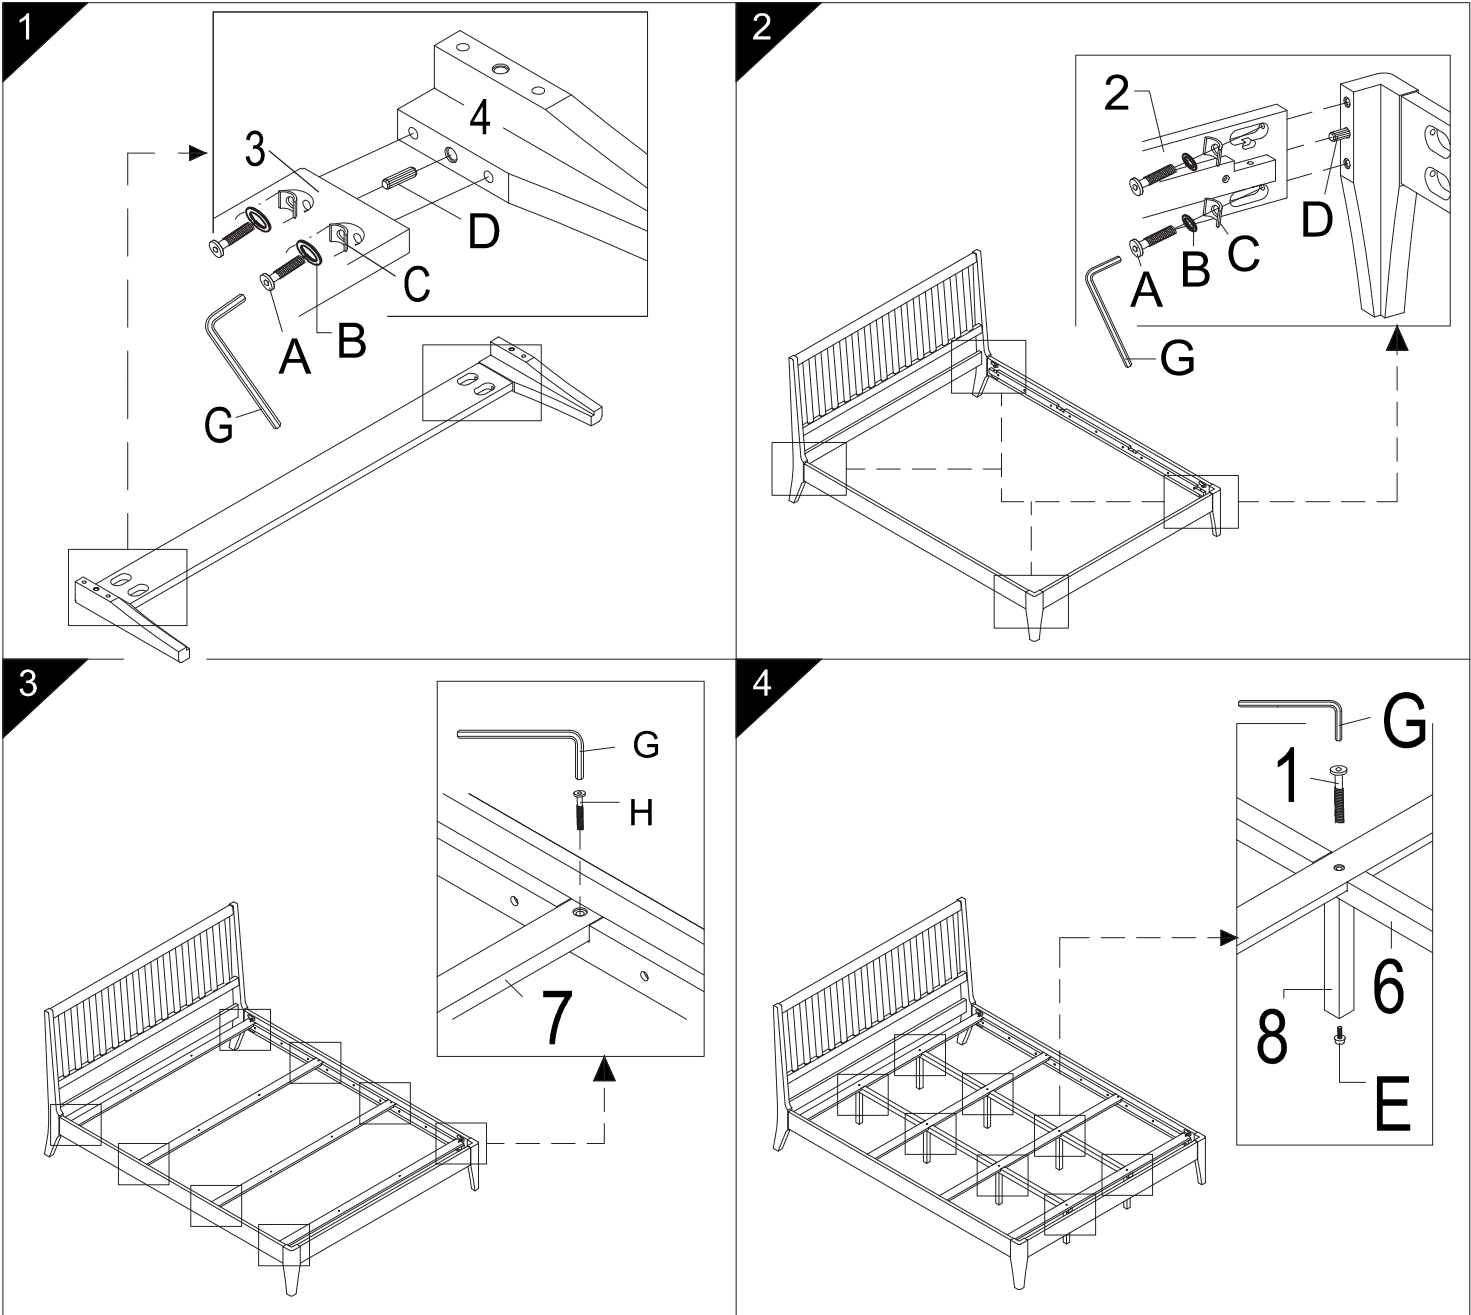
ITEM	PHOTO	HARDWARE NAME	QTY
A		JCBC M6 x 60 mm	20
B		SPRING WASHER	12
C		METAL HOLE	12
D		WOOD DOWEL M10 X 30mm	6
E		ADJUSTER SCREW	8
F		CSK M4 x 25mm	24
G		ALLEN KEY M4	1
H		JCBC M6 x 40 mm	8

ITEM	PHOTO	PARTS NAME	QTY
1		HEADBOARD	1
2		SIDE RAIL	2
3		FOOTBOARD PANEL	1
4		FOOTBOARD LEG	2
5		MDF Board	3
6		CENTER RAIL	2
7		SLAT	4
8		SUPPORT LEG	8

CODING
- 655151
- 655152



ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS



CODING
- 655151
- 655152



ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS

