

CODING

-656075

-656076

-656068

-656069



ISO 9001:2015
Reg. No. 000435-I-MET-I-QMS

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HAREWARE NAME	KING	QUEEN	FULL
1		JCBC M6x55	8pcs	4pcs	4pcs
2		JCBC M6x30	8pcs	8pcs	8pcs
3		CSK SCREW M4x32	8pcs	8pcs	8pcs
4		FLAT WASHER	8pcs	8pcs	8pcs
5		HEX WRENCH M4	1pc	1pc	1pc
6		HEX WRENCH M5	1pc	1pc	1pc

ITEM	PHOTO	PARTS NAME	KING	QUEEN	FULL
A		HEADBOARD	1pc	1pc	1pc
B		FOOTBOARD	1pc	1pc	1pc
C		LEFT SIDE RAIL	2pcs	2pcs	2pcs
D		RIGHT SIDE RAIL	2pcs	2pcs	2pcs
E		CENTER SUPPORT RAIL	4pcs	2pcs	2pcs
F		SLAT	2sets (8 holes)	2sets	2sets
G		SLAT SUPPORT	8pcs	4pcs	4pcs
H		SIDE RAIL LEG	2pcs	2pcs	2pcs
I		LEG	4pcs	4pcs	4pcs

CODING

-656075

-656076


-656068

-656069




ISO 9001:2015
Reg. No. 000435-1-001-1-Q008


1

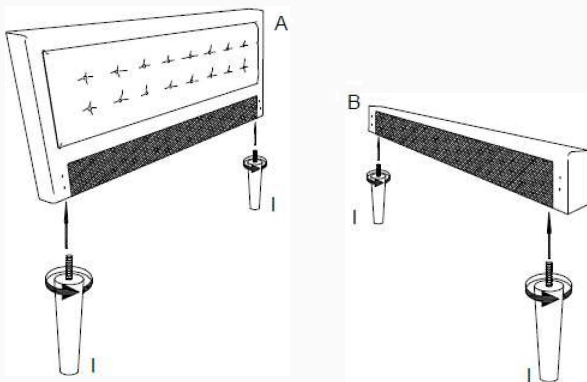


2

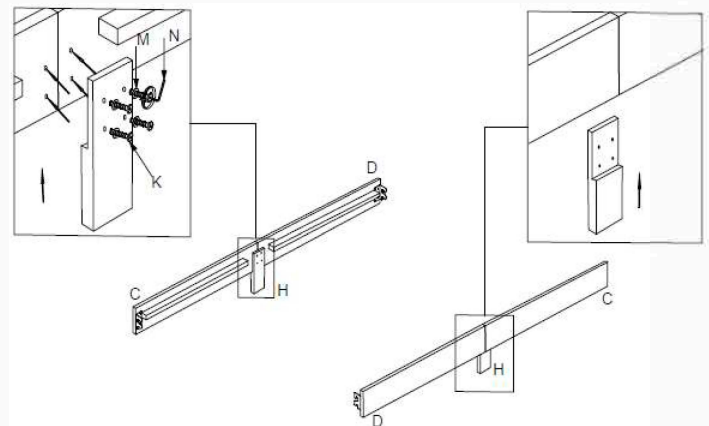

3

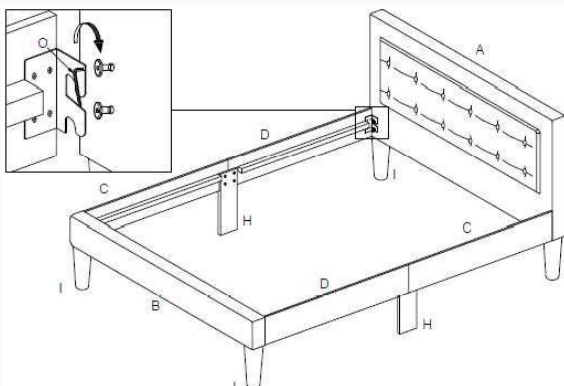

4

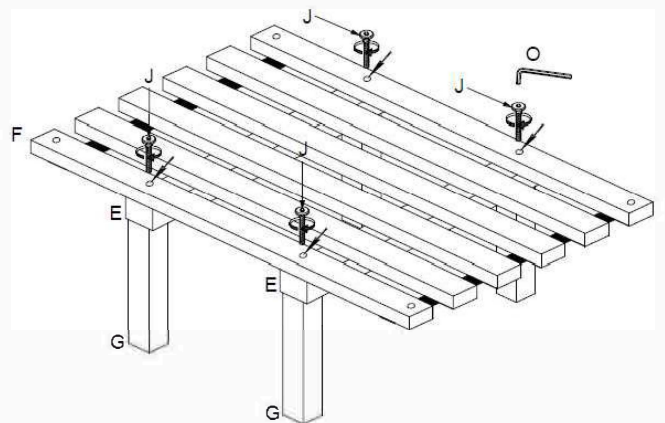

CODING

-656075

-656076


-656068

-656069



ISO 9001:2015
Reg. No. 000435-1-001-1-Q000

5

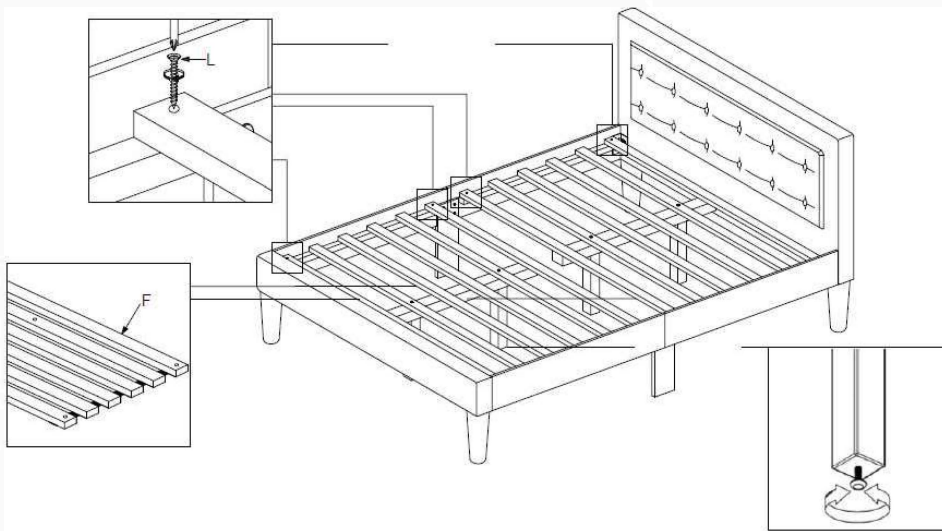

6

