



CODING
- 973009


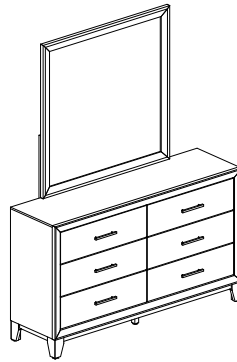


ISO 9001:2015
Reg. No. 000405-1-2017-1-Q002


Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		JCBC BOLT 1/4" x 1 9/16"	8
(B)		SPRING WASHER 1/4" x 1/2"	8
(C)		FLAT WASHER 1/4" x 3/4"	8
(D)		ALLEN KEY 1/4" x 2 3/8"	1


ITEM	PHOTO	PARTS NAME	QTY
(1)		Bravon 1000 X 1000 MIRROR 191	1
(2)		Mirror Support	2

CODING
- 973009

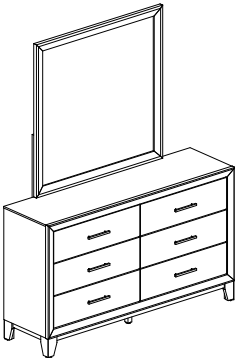

ISO 9001:2015
Reg. No. 20000000000000000000

1

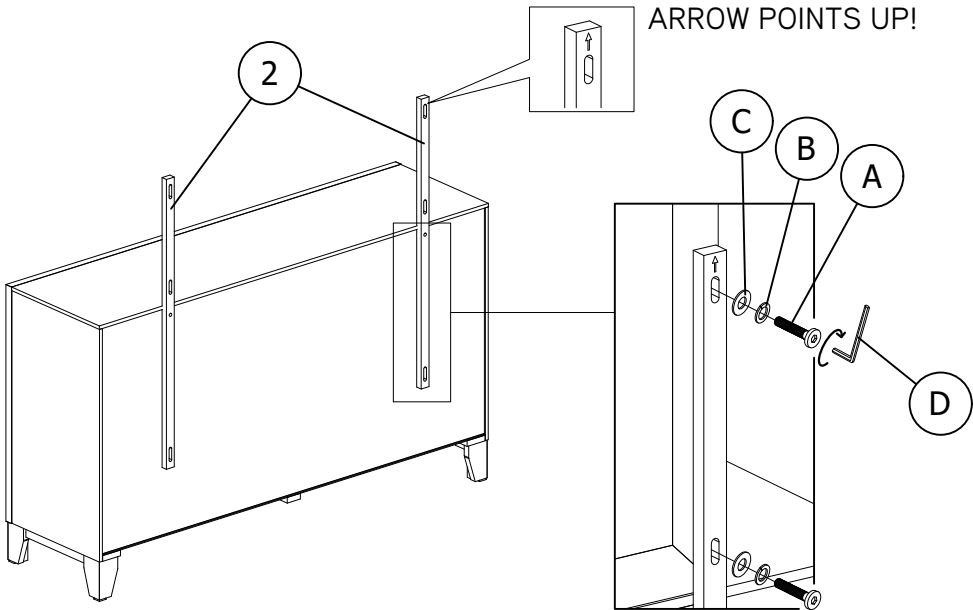

2

