DALLAS

CODING
-133132
-133135

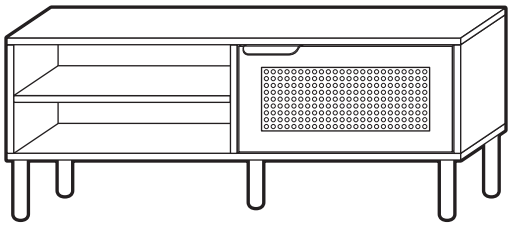

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

	HARDWARE LIST	QTY
A	M4 x 45mm Chipboard Screw	6
B	M3.5 x 16mm Chipboard Screw	31
F	Wood Dowel 6 x 25mm	16
D	Minifix Pin	6
E	Minifix Carn	6
F	Leg	5
G	Handle	1
H	Hinges Pump	2
I	Door Stoper	1

ITEM	PART LIST	QTY
1	Top Panel	1
2	Bottom Panel	1
3	Lelf Panel	1
4	Right Panel	1
5	Centre Panel	1
6	Shelf Panel	1
7	Back Panel	1
8	Door Panel	1

DALLAS

CODING
-133132
-133135

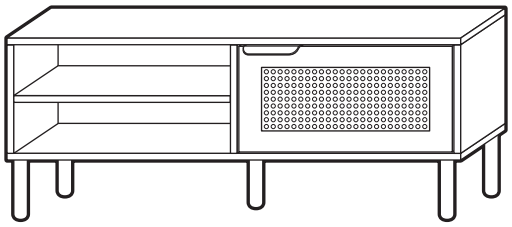

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Step 1

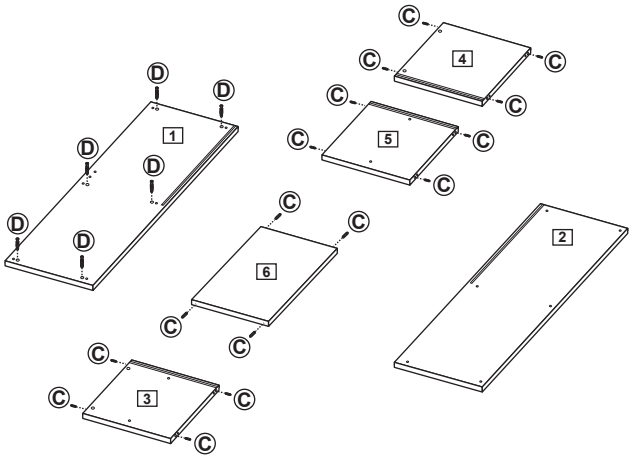

Step 2

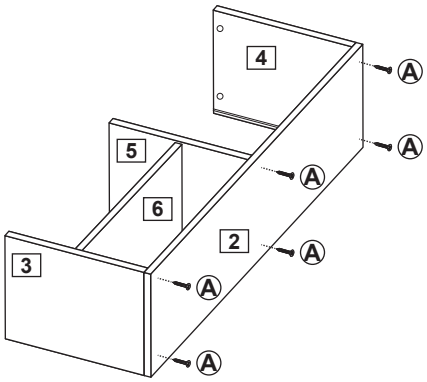

Step 3

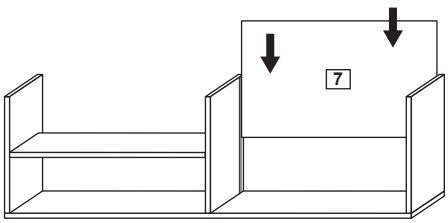

Step 4

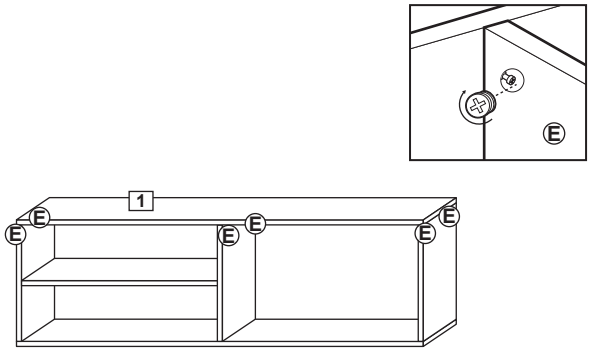

Step 5

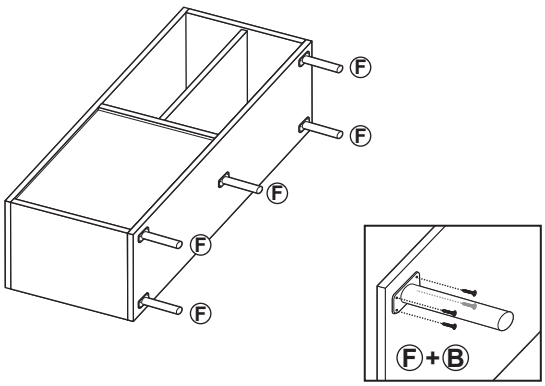
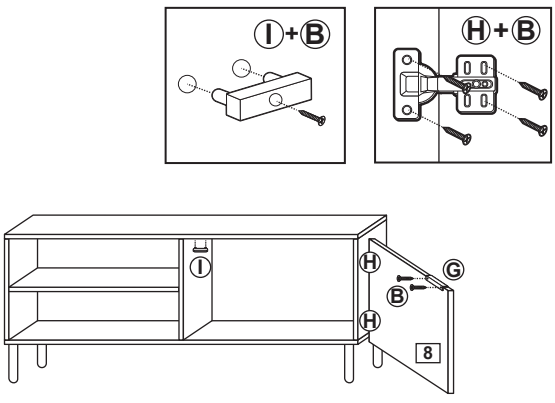
Step 6