HIRADO

CODING
- 336065

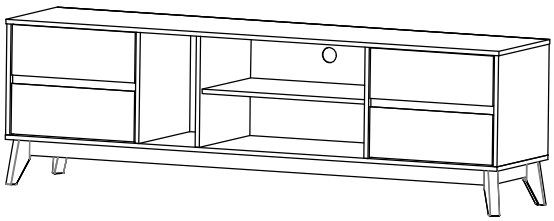

ISO 9001:2015
Reg. No. 00455-1-MY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

HARDWARE		
A	MINI FIX A1 A2 A3	10 PCS
B	M8 X 30MM WOOD DOWEL	28 PCS
C	M6 X 50MM CSK CAP WOOD SCREW	10 PCS
D	5/8 NAIL	67 PCS
E	ALLEN KEY M4	1 PC
F	ONE HOLE L BRACKET (2MM)	4 PCS
G	M3.5 X 16MM C.B SCREW	56 PCS
H	M4 X 38MM C.B SCREW	32 PCS
I	METAL SHELF SUPPORT	4 PCS
J	14" DRAWER SLIDE J1 (L/R) J2 (L/R)	4 SETS
K	JCBC Screw M6 x 70	8 PCS
L	SPRING WASHER M6	8 PCS
M	FLAT WASHER M6	8 PCS
	TIPPING PACK WITH AI	2 SETS

SELF-PREPARED TOOLS: Tools below are NOT included in package.

SCREWDRIVER | HAMMER

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	CENTER PANEL (L)	1 PC
6	CENTER PANEL (R)	1 PC
7	CENTER PANEL	1 PC
8	BONE PANEL	2 PCS
9	SHELF PANEL	1 PC
10	BACK PANEL	1 PC
11	DRAWER FRONT (UP)	2 PCS
12	DRAWER FRONT (DOWN)	2 PCS
13	DRAWER SIDE	8 PCS
14	DRAWER BACK	4 PCS
15	DRAWER BOTTOM	4 PCS
16	LEG	4 PCS

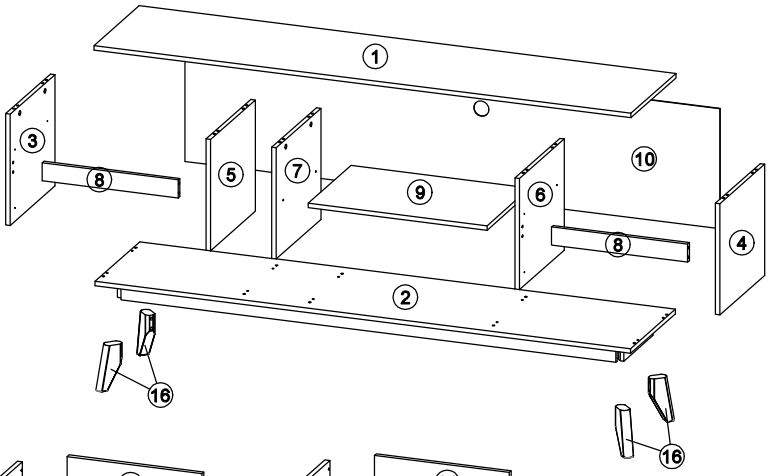

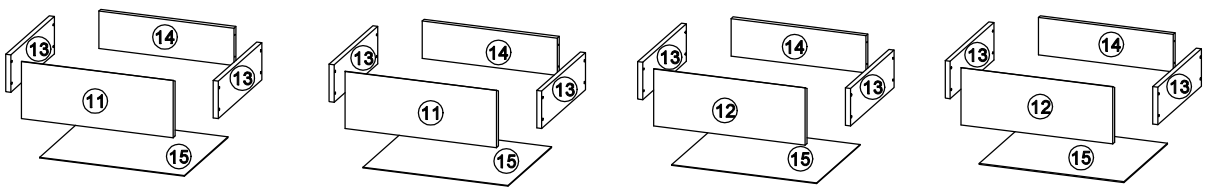

CODING
- 336065

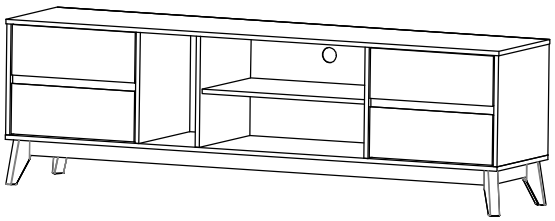

ISO 9001:2015
Reg. No. 00435-1-MY-1-QMS

nuhoom.com

STEP 1

SCREWDRIVER REQUIRED

- Insert hardware **A2** onto panel **(1)**.
  (Repeat 10 times.)
- Assemble hardware **F** to panel **(8)** with hardware **G**.
  (Repeat 2 times on each panel.)
- Insert hardware **B** onto panel **(8)**.
  (Repeat 4 times on each panel.)

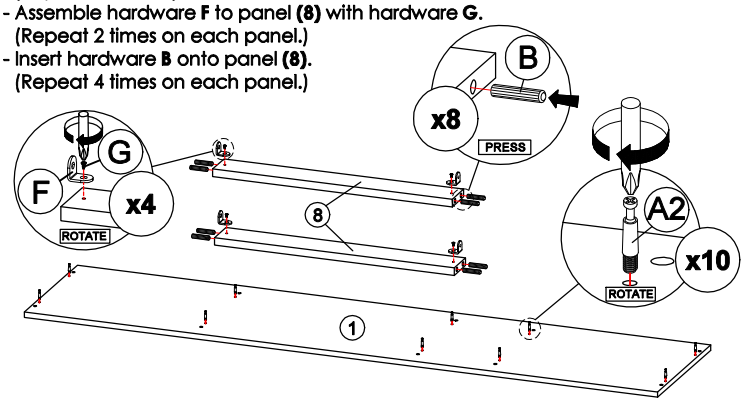

STEP 2

- Insert hardware **A1** onto panel **(3)**, **(4)**, **(5)**, **(6)** and **(7)**.
  (Repeat 2 times on each panel.)
- Insert hardware **B** onto panel **(3)**, **(4)**, **(5)**, **(6)** and **(7)**.
  (Repeat 4 times on each panel.)

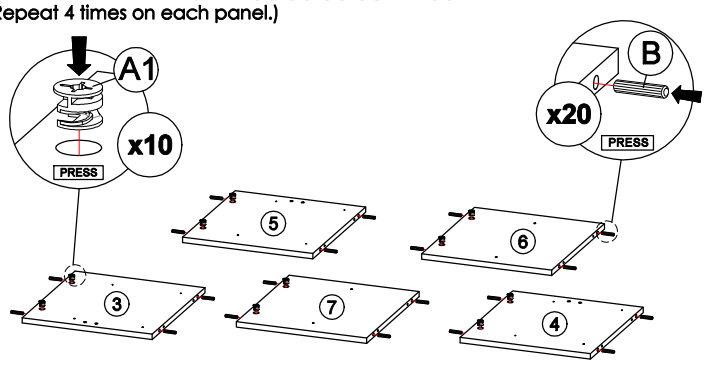

* Ensure the arrows on hardware **A1** point towards mounting positions.

STEP 3

SCREWDRIVER REQUIRED

Fix hardware **J1 (L)** into panel **(3)** and **(6)** with hardware **G**.
(Repeat 3 times for each hardware.)

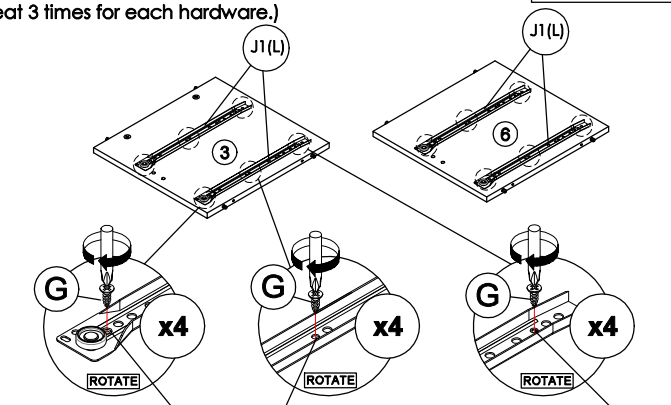

STEP 4

SCREWDRIVER REQUIRED

Fix hardware **J1 (R)** into panel **(4)** and **(5)** with hardware **G**.
(Repeat 3 times for each hardware.)

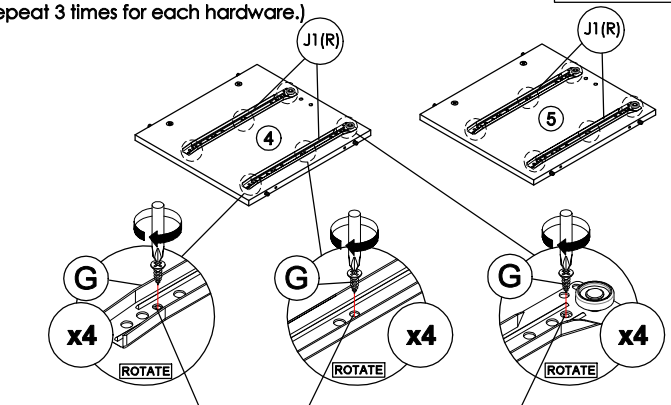

STEP 5

- Attach panel **(8)** to panel **(3)** and **(5)**.
  (Repeat 1 times.)
- Attach panel **(8)** to panel **(4)** and **(6)**.
  (Repeat 1 times.)

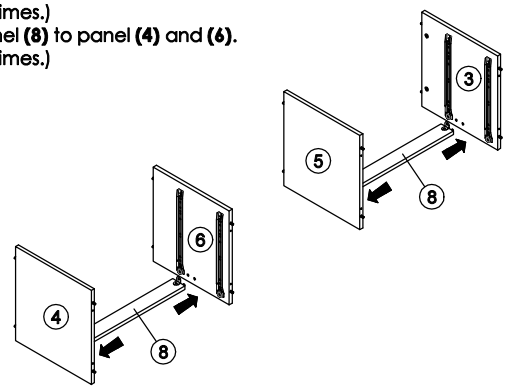

* In this step hardware **B** are pre-inserted.

STEP 6

SCREWDRIVER REQUIRED
OR
HARDWARE E

- Attach panel **(3)**, **(4)**, **(5)**, **(6)** and **(7)** to panel **(1)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
  (Repeat 10 times.)

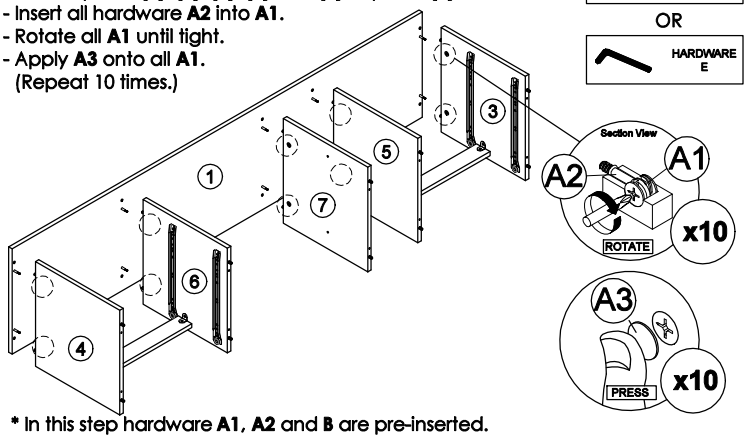

* In this step hardware **A1**, **A2** and **B** are pre-inserted.

CODING
- 336065

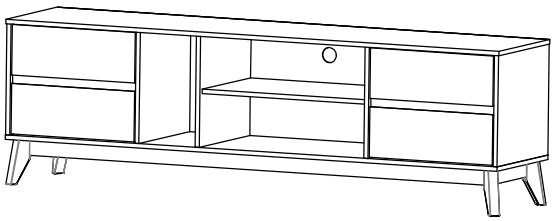

ISO 9001:2015
Reg. No. 000455-1-MY-1-QMS

nuhoom.com

STEP 7

SCREWDRIVER REQUIRED

- Assemble hardware **F** on panel **(8)** to panel **(3)** and **(5)** by using hardware **G**.
- Assemble hardware **F** on panel **(8)** to panel **(4)** and **(6)** by using hardware **G**.
  (Repeat 1 times on each side panel.)

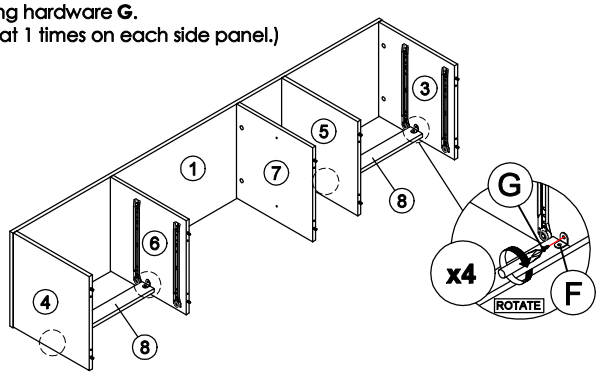

STEP 8

Connect panel **(2)** to panel **(3)**, **(4)**, **(5)**, **(6)** and **(7)** by using hardware **C** and **E**.
(Repeat 10 times.)

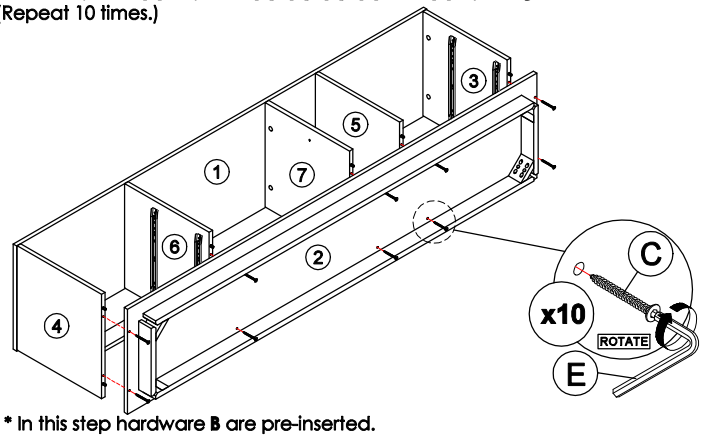

* In this step hardware **B** are pre-inserted.

STEP 9

Assemble part **16** into panel **(2)** by using hardware **E**, **K**, **L** and **M**.
(Repeat 2 times for each Leg.)

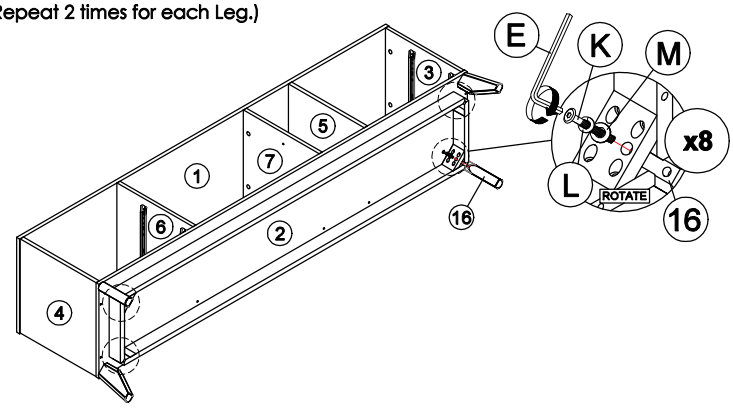

STEP 10

HAMMER REQUIRED

Assemble panel **(10)** to entire body with hardware **D**.
(Repeat 35 times.)

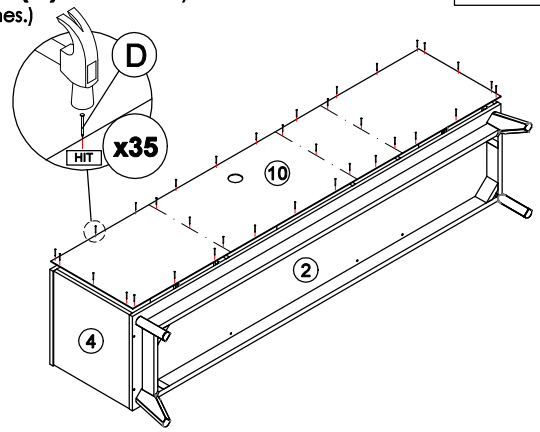

STEP 11

Insert hardware **I** into mounting positions on panel **(6)** and **(7)** by hand.
(Repeat 4 times.)

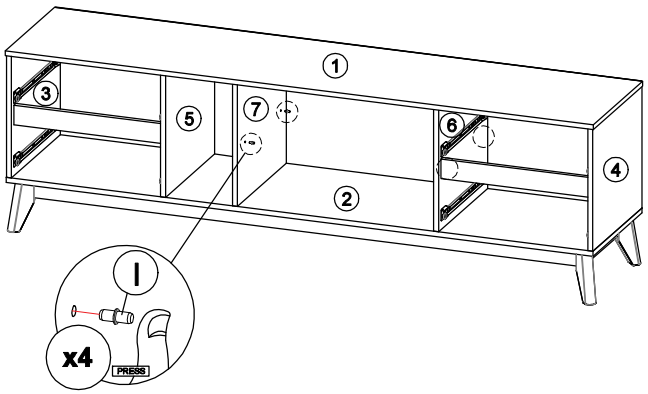

STEP 12

Assemble the panel **(9)** into between panel **(6)** and **(7)**.
(Repeat 1 times.)

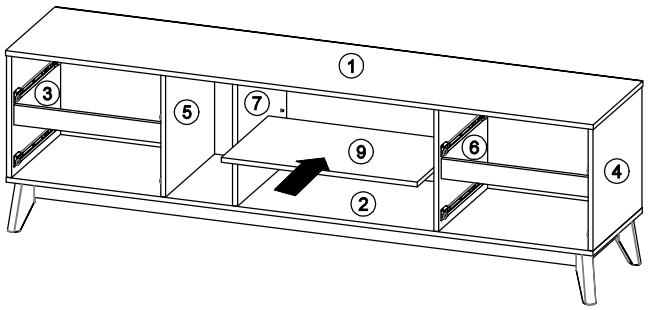

* In this step hardware **I** are pre-inserted.

CODING
- 336065

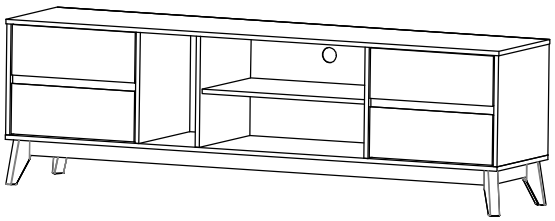

ISO 9001:2015
Reg. No. 00455-1-MY-1-QMS

nuhoom.com

STEP 13

SCREWDRIVER REQUIRED

Assemble panel **(13)** with panel **(11)** or **(12)** and **(14)** by using hardware **H**.
(Repeat 8 times for each drawer.)
* In this step only show one of the drawers.

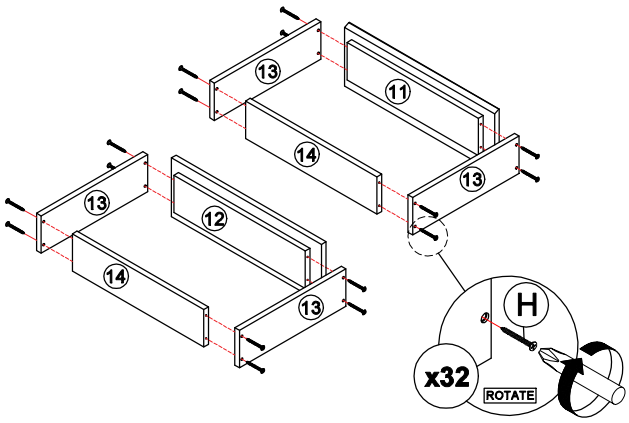

STEP 14

HAMMER REQUIRED

Assemble panel **(15)** to entire body with hardware **D**.
(Repeat 8 times for each drawer.)
* In this step only show one of the drawers.

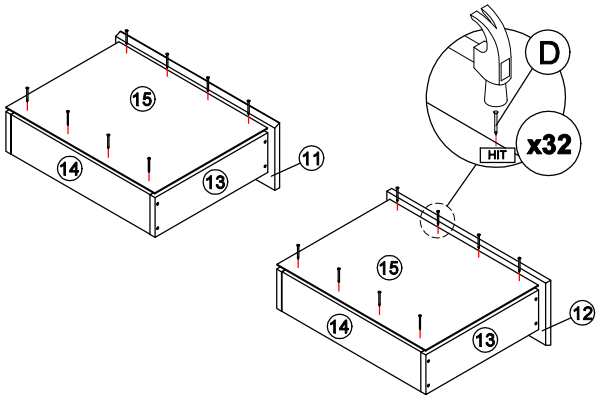

STEP 15

SCREWDRIVER REQUIRED

Assemble hardware **J2 (L/R)** to panel **(15)** by using hardware **G**.
(Repeat 3 times for each hardware.)
* In this step only show one of the drawers.

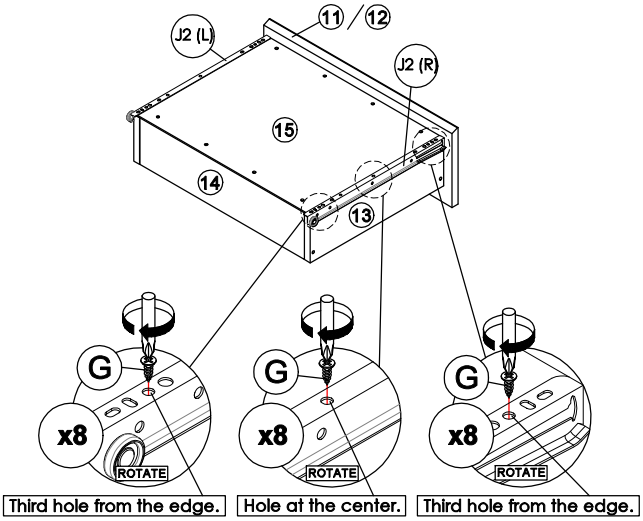

*Hardware **J2 (L/R)** shall be leaning against panel **(11)** or **(12)** when assembling.

STEP 16
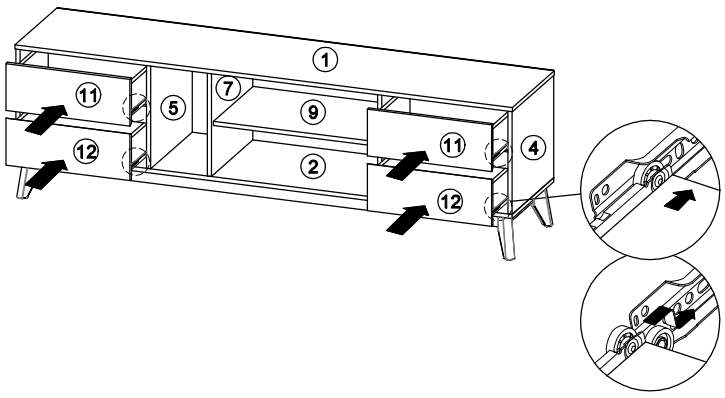
Put all the drawer in place along the drawer slides.