FREY

CODING
-362004
-362006

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

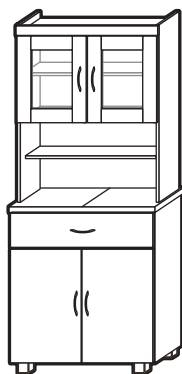| ITEM		HARDWARE LIST	QTY
1		M4 x 65mm Chipboard Screw	2
2		M4 x 45mm Chipboard Screw	18
3		M4 x 32mm Chipboard Screw	14
4		M4 x 25mm Chipboard Screw	31
5		M3.5 x 16mm Chipboard Screw	70
6		Nail	100
7		Wood Dowel 6 x 25mm	12
8		Hinges	8
9		Shelf Holder	8
10		L Bracket	3
11		Handle (1009)	5
12		Plastic Leg	4
13		Drawer Slide	2
14		Drawer Slide	2

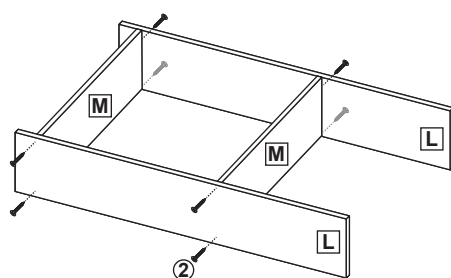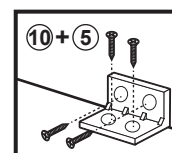| ITEM	PART LIST		QTY
A	Side Panel		2
B	Top Panel		1
C	Brace Panel		3
D	Bottom Panel		1
E	Back Panel		1
F	Drawer Side Panel		2
G	Drawer Front & Back Panel		2
H	Drawer Bottom Panel		1
I	Drawer Panel		1
J	Door Panel		2
K	Shelf Panel		1
L	Side Panel (Top)		2
M	Shelf Panel (Top)		2
N	Small Shelf Panel (Top)		2
O	Cap Panel (Top)		1
P	Back Panel (Top)		1
Q	Grass Door (Top)		2

FREY

CODING
-362004
-362006

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Step 1
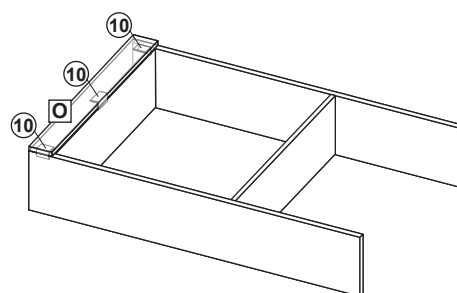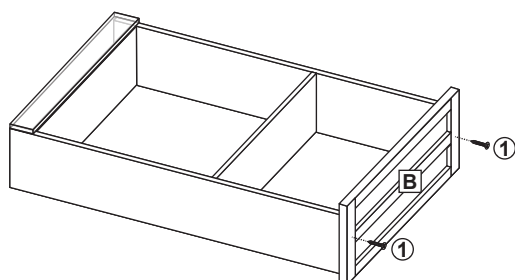
M   L   M   L   ②

Step 2

⑩   ⑩   O   ⑩

⑩ + ⑤

Step 3

B   ①   ①

Step 4

⑥   P

Step 5

⑤ x8

Step 6

⑬ + ⑤

⑬   A

⑬   A

Step 7

C   K   D   ⑦

FREY
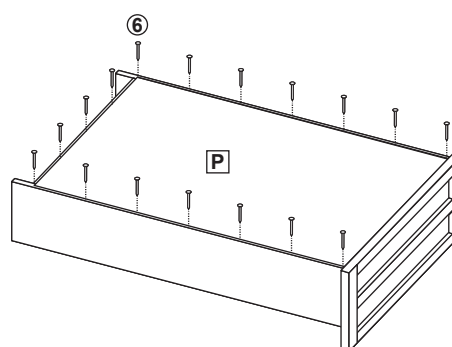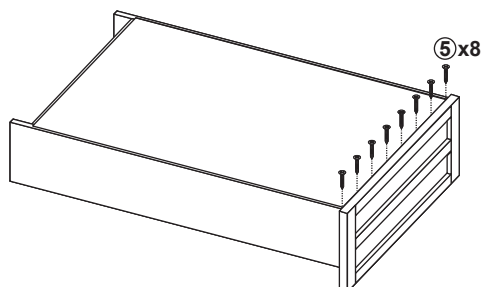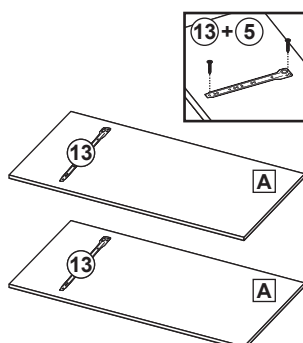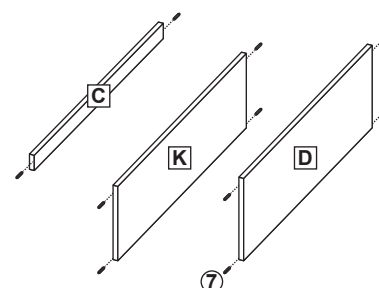
CODING
-362004
-362006

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Step 8

Step 9

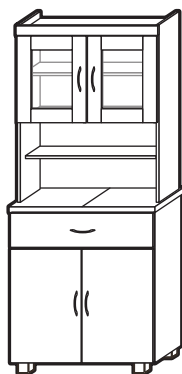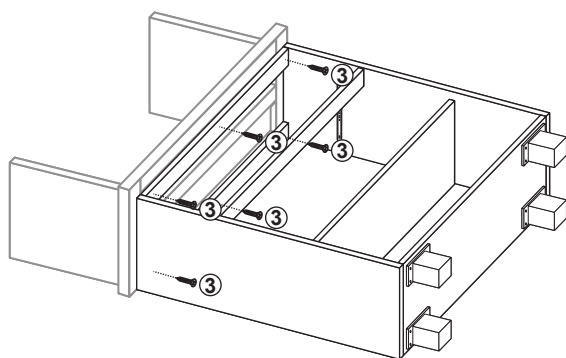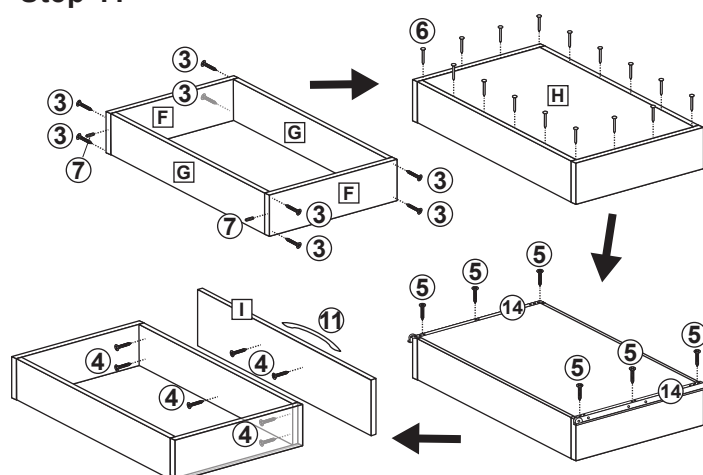**Step 10**

Step 12

Step 11