HIRADO

CODING
- 343042

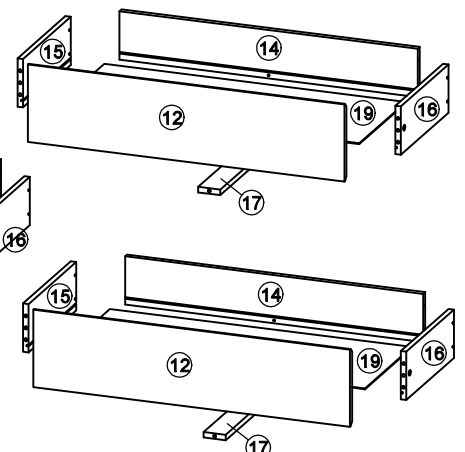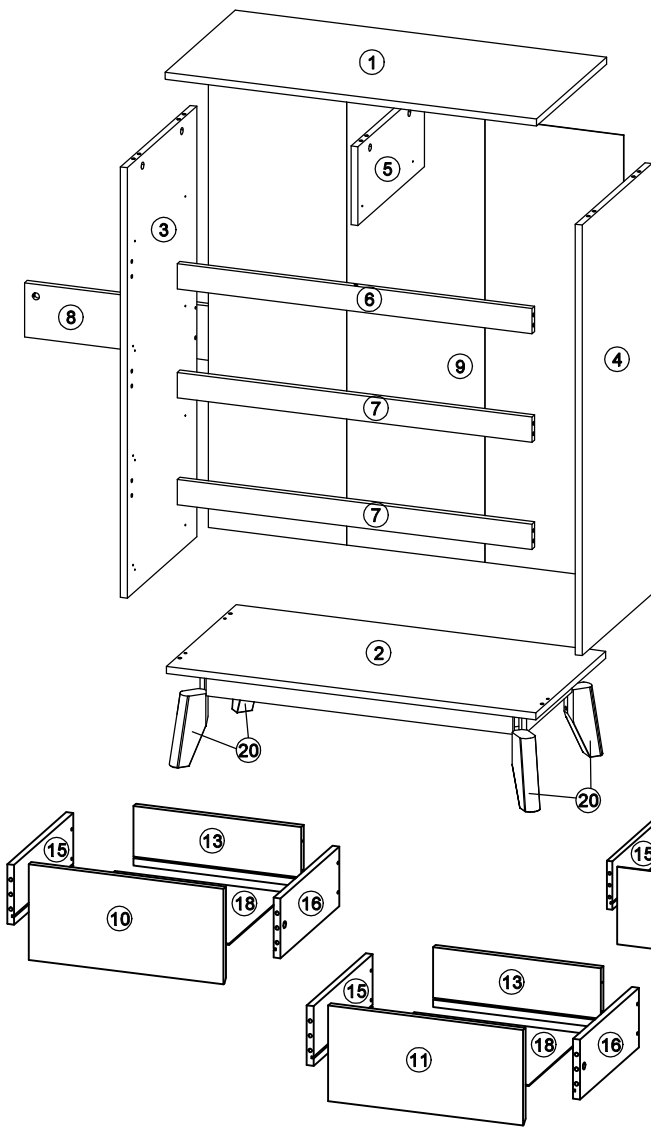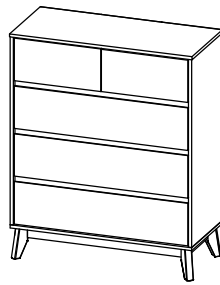**ISO 9001:2015**
Reg. No. 000435-1-MY-1-QMS

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

	PART LIST	QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	CENTER PANEL	1 PC
6	BONE PANEL UP	1 PC
7	BONE PANEL DOWN	2 PCS
8	BACK BONE	1 PC
9	BACK PANEL	1 PC
10	DRAWER FRONT SMALL (L)	1 PC
11	DRAWER FRONT SMALL (R)	1 PC
12	DRAWER FRONT BIG	3 PCS
13	DRAWER BACK SMALL	2 PCS
14	DRAWER BACK BIG	3 PCS
15	DRAWER SIDE (L)	5 PCS
16	DRAWER SIDE (R)	5 PCS
17	DRAWER BONE	3 PCS
18	DRAWER BOTTOM SMALL	2 PCS
19	DRAWER BOTTOM BIG	3 PCS
20	CABINET LEG	4 PCS

HIRADO

CODING
- **343042**

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

HARDWARE

A	MINI FIX	A1 A2 A3	24 SETS
B	M8 X 30MM WOOD DOWEL		45 PCS
C	M6 X 50MM CSK CAP WOOD SCREW		4 PCS
D	ALLEN KEY M4		1 PC
E	M3.5 X 16MM C.B SCREW		78 PCS
F	M4 X 38MM C.B SCREW		20 PCS
G	5/8 NAIL		22 PCS
H	ONE HOLE L BRACKET (2MM)		6 PCS

I	JCBC Screw M6 x 70		8 PCS
J	SPRING WASHER M6		8 PCS
K	FLAT WASHER M6		8 PCS
L	14" DRAWER SLIDE	L1 (L/R) L2 (L/R)	5 SETS
M	TIPPING PACK WITHOUT AI M1 M3 M5 M2 M4		2 SETS

SELF-PREPARED TOOLS: Tools below are NOT included in package.

SCREWDRIVER	HAMMER

STEP1
SCREWDRIVER REQUIRED
- Insert hardware **A1** onto panel **(3)** and **(4)**. (Repeat 4 times.)
- Insert hardware **A2** onto panel **(1)**, **(3)** and **(4)**. (Repeat 8 times.)
- Insert hardware **B** onto panel **(3)** and **(4)**. (Repeat 8 times.)

A1 x4 — PRESS
A2 x8 — ROTATE
B x8 — PRESS

* Ensure the arrows on hardware **A1** point towards mounting positions.

STEP 2
SCREWDRIVER REQUIRED
- Insert hardware **A1** onto panel **(5)**, **(8)**, **(15)**, **(16)** and **(17)**. (Repeat 20 times.)
- Insert hardware **B** onto panel **(5)**, **(8)**, **(15)** and **(16)**. (Repeat 25 times.)

A1 x20 — PRESS
B x25 — PRESS
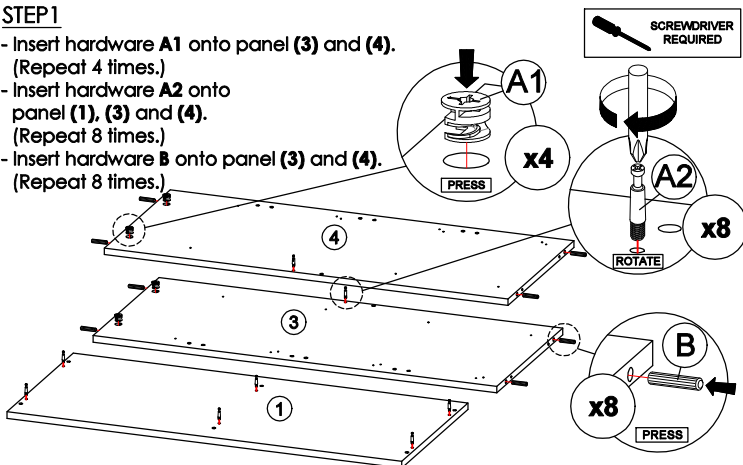
* Ensure the arrows on hardware **A1** point towards mounting positions.

STEP 3
SCREWDRIVER REQUIRED
- Insert hardware **A2** onto panel **(10)**, **(11)**, **(12)** and **(14)**. (Repeat 16 times.)

A2 x16 — ROTATE

STEP 4
SCREWDRIVER REQUIRED
- Assemble hardware **H** to panel **(6)** and **(7)** with hardware **E**. (Repeat 6 times.)
- Insert hardware **B** onto panel **(6)** and **(7)**. (Repeat 12 times.)

H E x6 — ROTATE
B x12 — PRESS
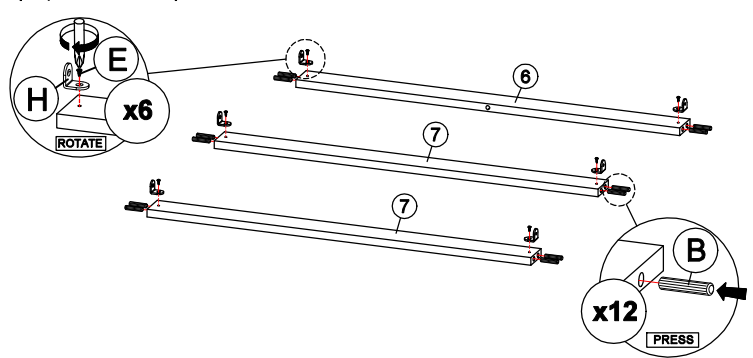
CODING
- **343042**

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

STEP 5
Fix hardware **L1 (L/R)** into panel **(3)**, **(4)** and **(5)** with hardware **E**.
(Repeat 3 times for each hardware.)

SCREWDRIVER REQUIRED

E x3 — ROTATE — First hole from the edge.
E x3 — ROTATE — Small hole at the center.
E x3 — ROTATE — Third hole from the edge.
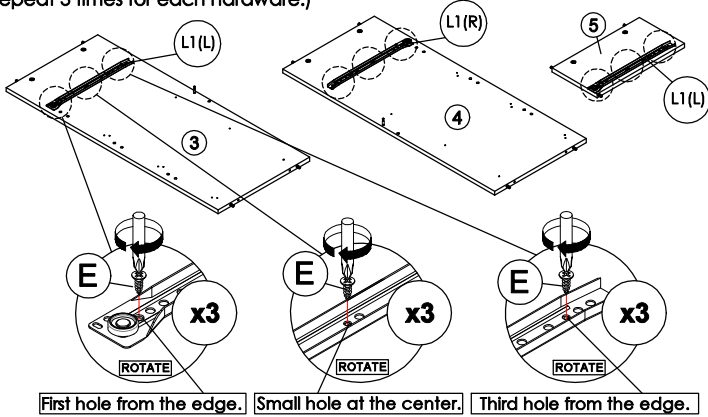
STEP 6
Fix hardware **L1 (R)** into panel **(5)** with hardware **E**.
(Repeat 3 times for each hardware.)

SCREWDRIVER REQUIRED

E x1 — ROTATE — Second hole from the edge.
E x1 — ROTATE — Big hole at the center.
E x1 — ROTATE — Second hole from the edge.
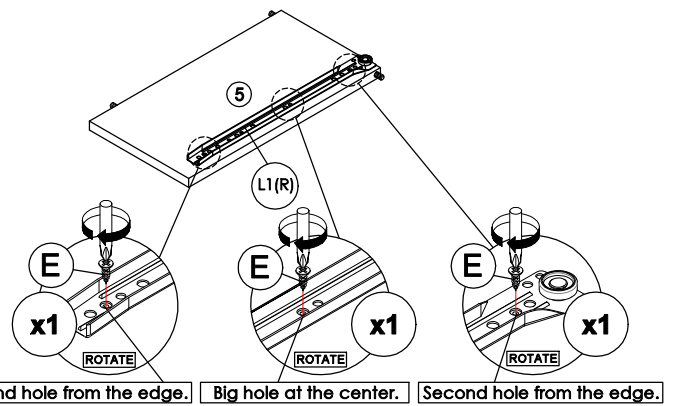
STEP 7
Fix hardware **L1 (L/R)** into panel **(3)** and **(4)** with hardware **E**.
(Repeat 4 times for each hardware.)

SCREWDRIVER REQUIRED

E x12 — ROTATE — First hole from the edge and top second hole from the edge.
E x6 — ROTATE — Small hole at the center.
E x6 — ROTATE — Third hole from the edge.
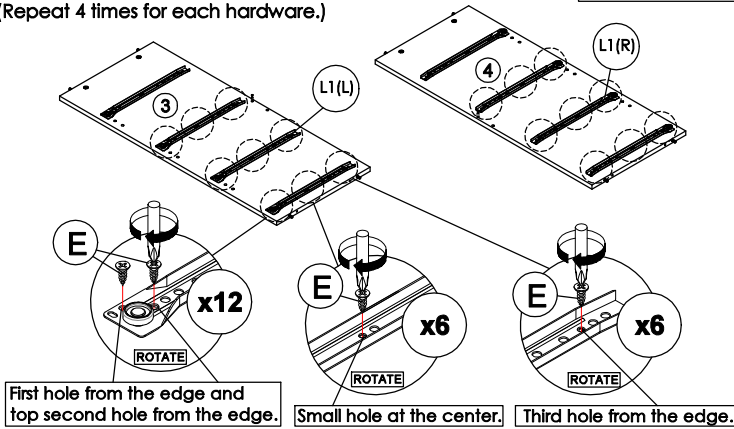
STEP 8
- Attach panel **(3)** and **(4)** to panel **(6)**, **(7)** and **(8)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
  (Repeat 2 times.)

SCREWDRIVER REQUIRED

OR

HARDWARE D

A2 A1 x2 — ROTATE
x2 A3 — PRESS
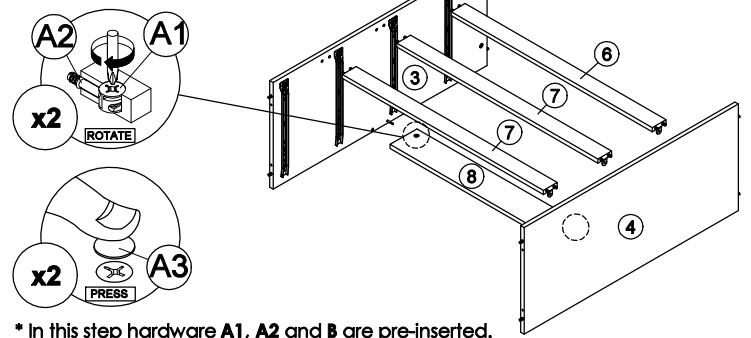
* In this step hardware **A1**, **A2** and **B** are pre-inserted.

STEP 9
Attach panel **(5)** to panel **(6)**.
(Repeat 1 times.)
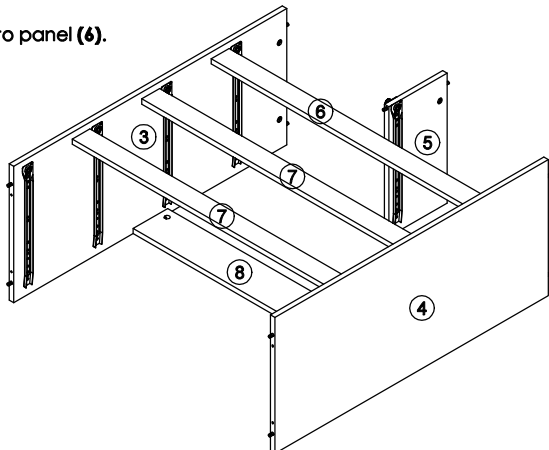
STEP 10
- Attach panel **(1)** to panel **(3)**, **(4)** and **(5)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
  (Repeat 6 times.)
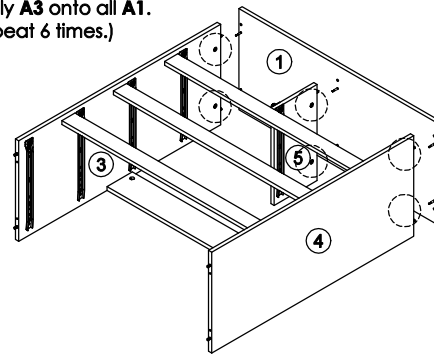
SCREWDRIVER REQUIRED

OR

HARDWARE D

Section View
A1 A2 x6 — ROTATE
A3 x6 — PRESS

* In this step hardware **A1**, **A2** and **B** are pre-inserted.
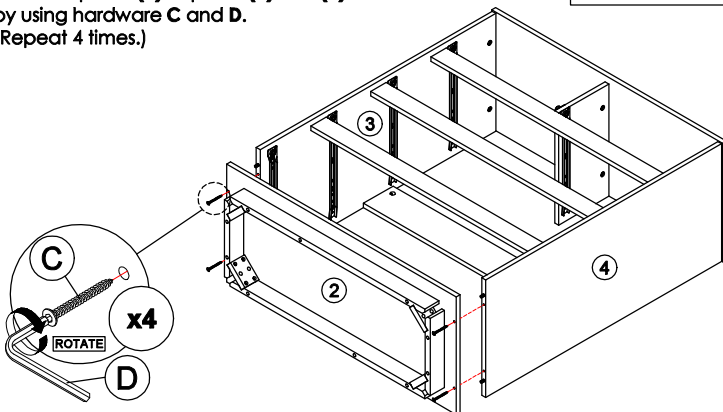
HIRADO

CODING
- 343042
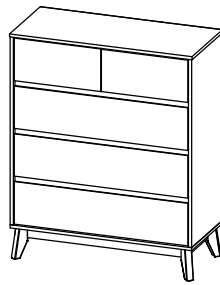
ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

STEP 11
Connect panel **(2)** to panel **(3)** and **(4)**
by using hardware **C** and **D**.
(Repeat 4 times.)

HARDWARE
D

C

x4

ROTATE

D

* In this step hardware **B** are pre-inserted.

STEP 12
Assemble hardware **H** to panel **(3)** and **(4)** with hardware **E**.
(Repeat 6 times.)

SCREWDRIVER
REQUIRED

E

x6

H

ROTATE

STEP 13
Assemble panel **(9)** to entire body with hardware **G**.
(Repeat 22 times.)

HAMMER
REQUIRED

G

x22

HIT
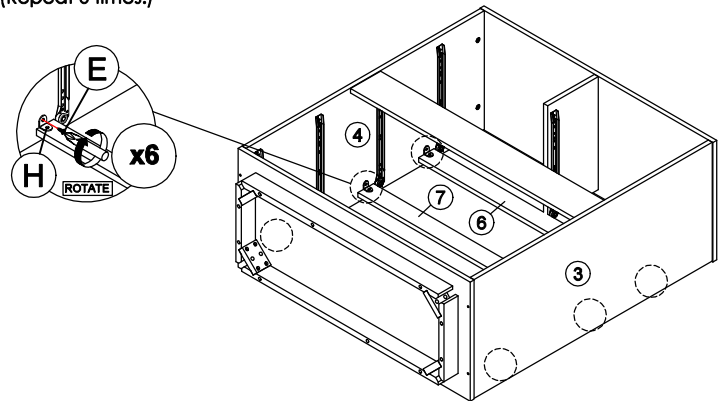
STEP 14
Assemble part **(20)** into panel **(2)** by
using hardware **D, I, J** and **K**.
(Repeat 2 times for each Leg.)

HARDWARE
D

K   I   D

x8

20

ROTATE   J
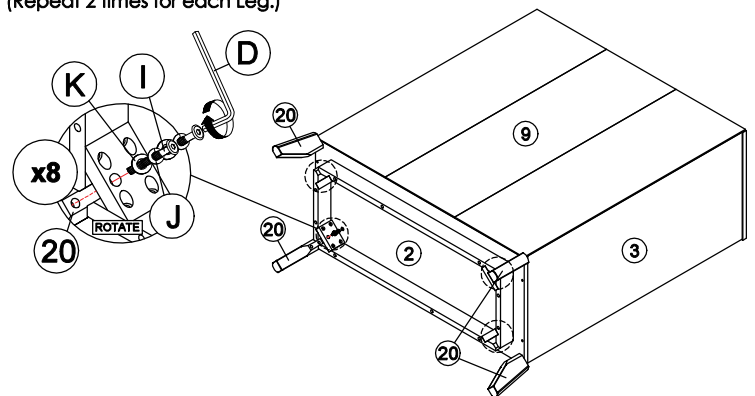
STEP 15
- Assemble panel **(13)** or **(14)** with panel **(15)** and **(16)**
  by using hardware **F**.
  (Repeat 16 times.)

SCREWDRIVER
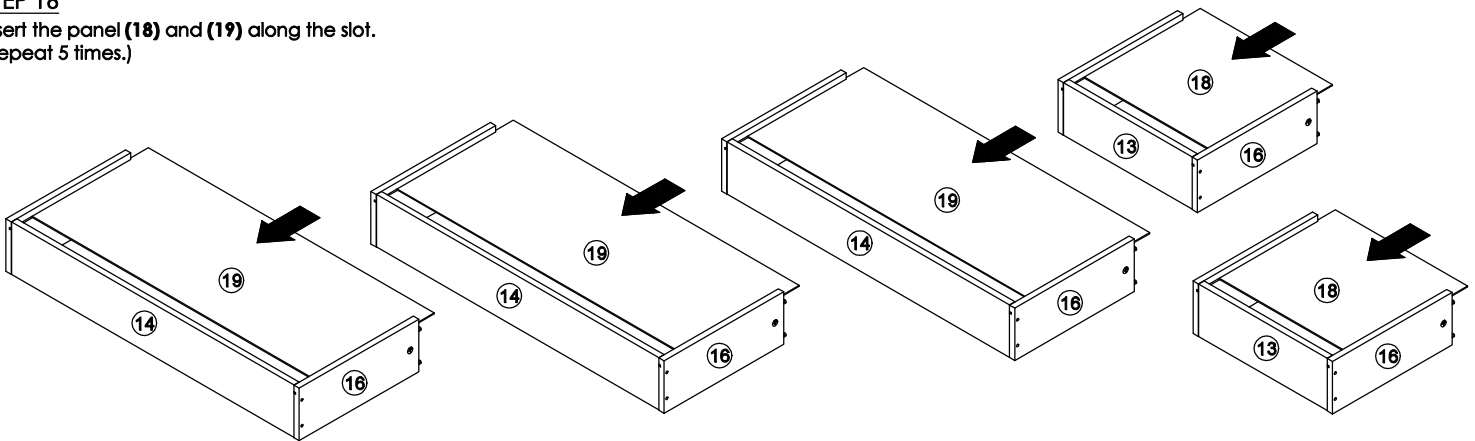REQUIRED

F

x20
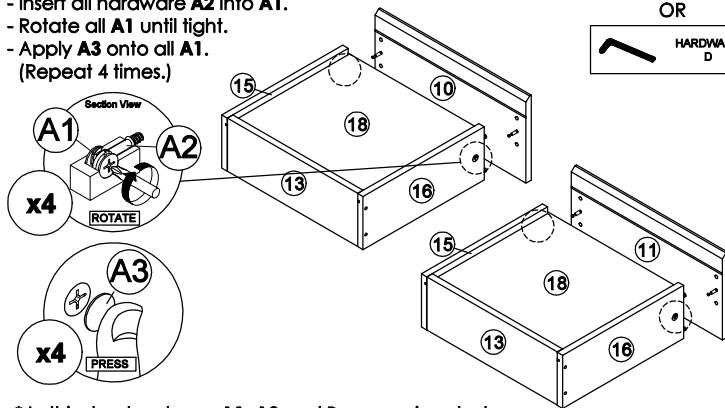
ROTATE

HIRADO
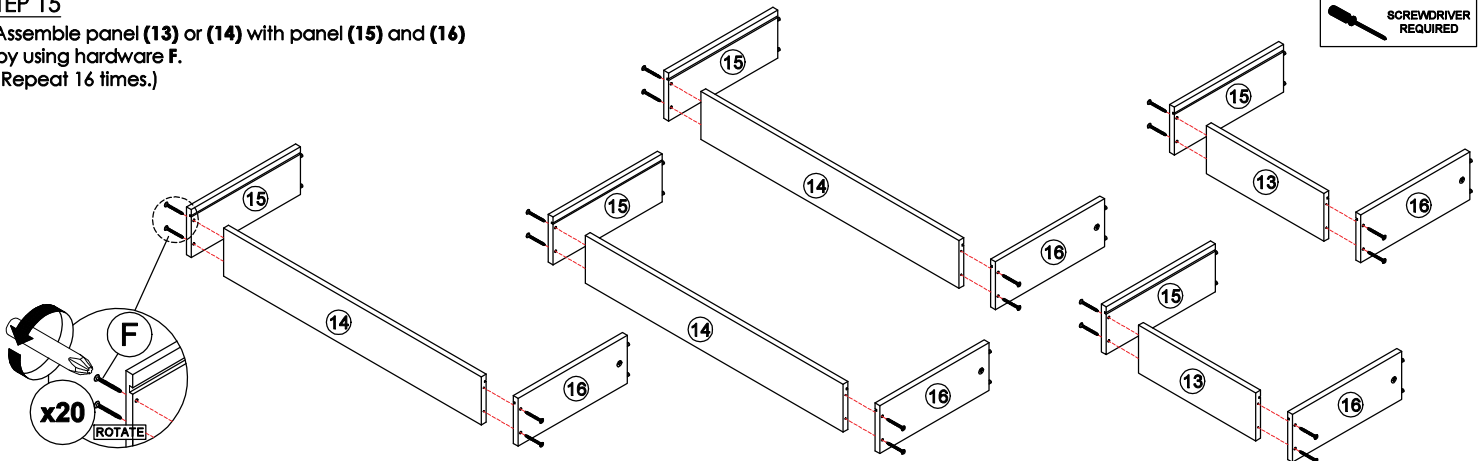
CODING
- 343042
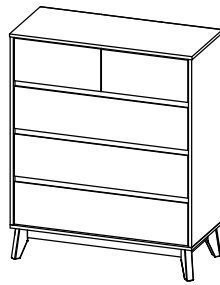
ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

STEP 16
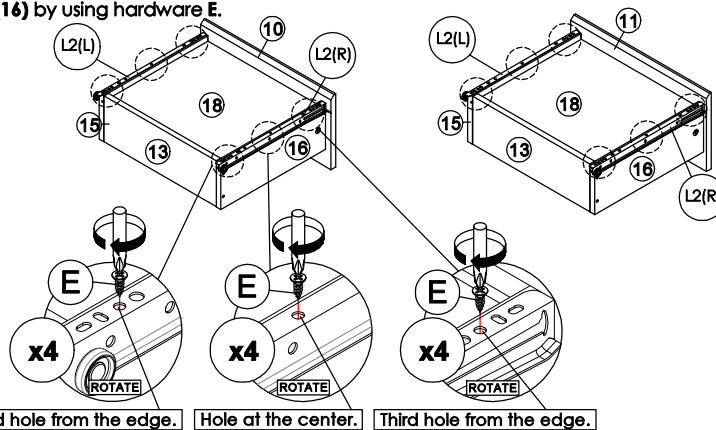Insert the panel **(18)** and **(19)** along the slot.
(Repeat 5 times.)

STEP 17
- Attach panel **(10)** or **(11)** to panel **(15)** and **(16)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
  (Repeat 4 times.)

SCREWDRIVER REQUIRED

OR

HARDWARE D

Section View

A1 A2 x4 ROTATE

A3 x4 PRESS

* In this step hardware **A1**, **A2** and **B** are pre-inserted.

STEP 18
- Attach panel **(17)** to panel **(14)**.
- Attach panel **(12)** to panel **(15)**, **(16)** and **(17)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
  (Repeat 12 times.)
* In this step only show one of the drawers.

SCREWDRIVER REQUIRED

OR

HARDWARE D

A1 A2 x12 ROTATE

A3 PRESS x12

* In this step hardware **A1**, **A2** and **B** are pre-inserted.

STEP 19
Assemble hardware **L2 (L/R)** to panel **(15)** and **(16)** by using hardware **E**.
(Repeat 3 times for each hardware.)

SCREWDRIVER REQUIRED

L2(L) L2(R)

E x4 ROTATE
E x4 ROTATE
E x4 ROTATE

Third hole from the edge. Hole at the center. Third hole from the edge.

*Hardware **L2 (L/R)** shall be leaning against panel **(10)** or **(11)** when assembling.
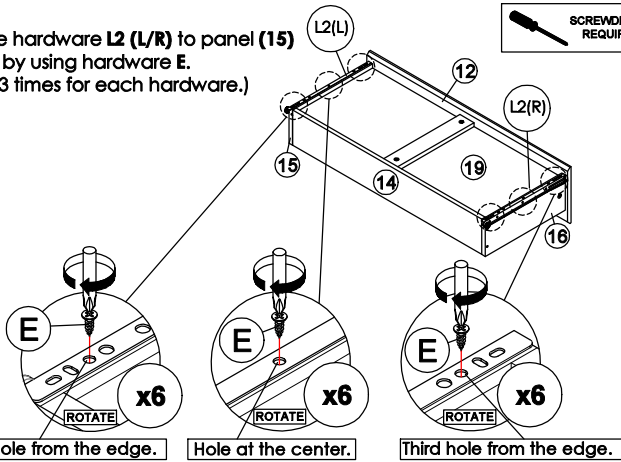
CODING
- 343042

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

STEP 20
Assemble hardware **L2 (L/R)** to panel **(15)** and **(16)** by using hardware **E**.
(Repeat 3 times for each hardware.)

SCREWDRIVER REQUIRED

L2(L)
L2(R)

E x6
Third hole from the edge.

E x6
Hole at the center.

E x6
Third hole from the edge.

ROTATE

*Hardware L2 (L/R) shall be leaning against panel **(12)** when assembling.

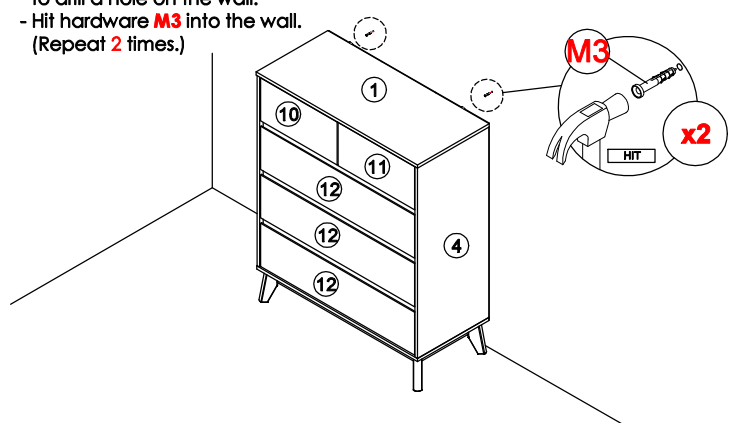### STEP 21
Put all the drawer in place along the drawer slides.

SCREWDRIVER REQUIRED
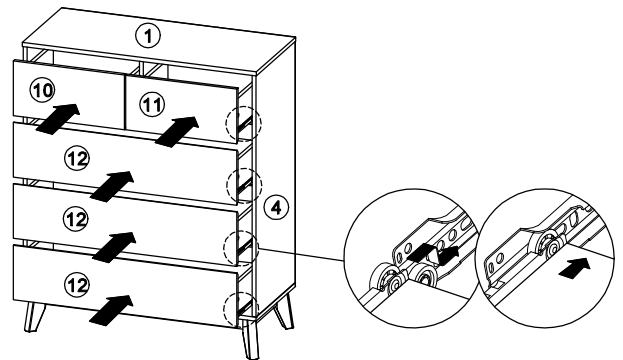
STEP 22
Assemble hardware **M1** into panel **(1)** and **(9)** by using hardware **M2**.
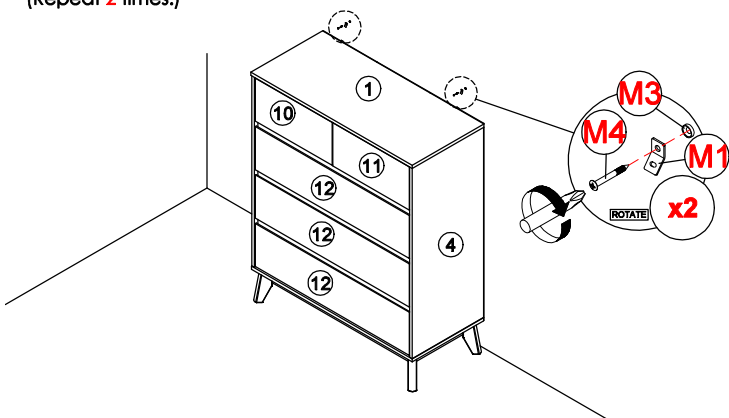(Repeat **2** times.)

SCREWDRIVER REQUIRED

M1
M2
x1
ROTATE
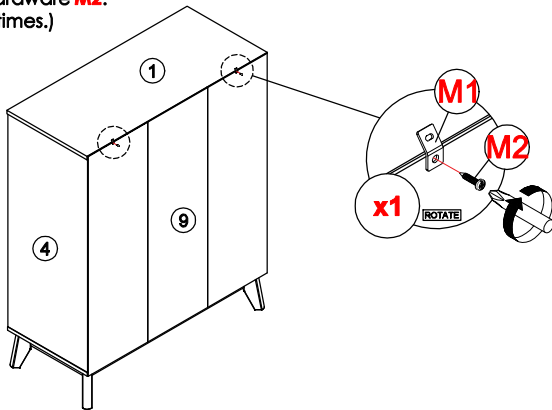
STEP 23
- Mark and use the power drill to drill a hole on the wall.
- Hit hardware **M3** into the wall.
  (Repeat **2** times.)

POWER DRILL REQUIRED

HAMMER REQUIRED

M3
x2
HIT

STEP 24
- Assemble hardware **M1** to **M3** by using hardware **M4**.
  (Repeat **2** times.)

SCREWDRIVER REQUIRED

M3
M4
M1
x2
ROTATE

STEP 25
- Connect both of the hardware **M1** by using hardware **M5**.
- Tighten the hardware **M5**.
  (Repeat **2** times.)

M1
M5
M1
x2
CONNECT

M5
M1
x2
M1
TIGHTEN