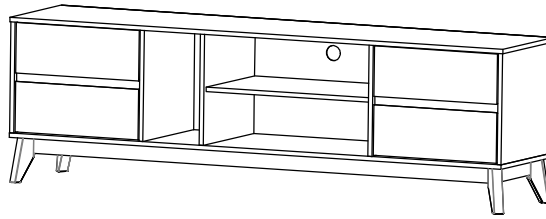# HIRADO

CODING
- **336066**
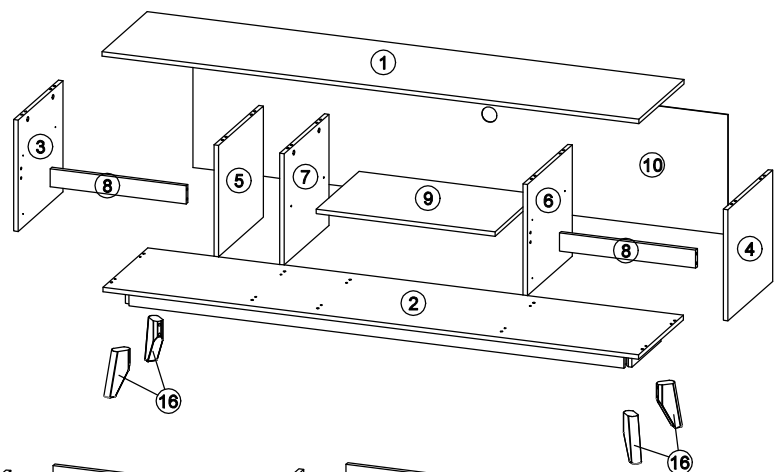
ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.
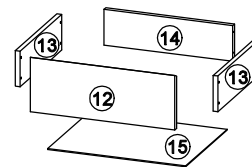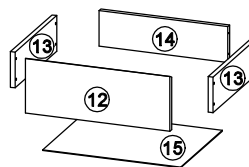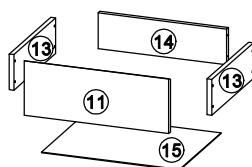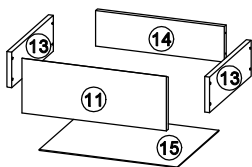
CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

HARDWARE

A	MINI FIX	A1 A2 A3	10 PCS
B	M8 X 30MM WOOD DOWEL		28 PCS
C	M6 X 5OMM CSK CAP WOOD SCREW		10 PCS
D	5/8 NAIL		67 PCS
E	ALLEN KEY M4		1 PC
F	ONE HOLE L BRACKET (2MM)		4 PCS
G	M3.5 X 16MM C.B SCREW		56 PCS
H	M4 X 38MM C.B SCREW		32 PCS
I	METAL SHELF SUPPORT		4 PCS
J	14" DRAWER SLIDE	J1 (L/R) J2 (L/R)	4 SETS
K	JCBC Screw M6 x 70		8 PCS
L	SPRING WASHER M6		8 PCS
M	FLAT WASHER M6		8 PCS
N	TIPPING PACK	N1 N3 N2 N4 N5	2 SETS

SELF-PREPARED TOOLS: Tools below are NOT included in package.

	SCREWDRIVER	
	HAMMER	

PART LIST

	PART LIST	QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	CENTER PANEL (L)	1 PC
6	CENTER PANEL (R)	1 PC
7	CENTER PANEL	1 PC
8	BONE PANEL	2 PCS
9	SHELF PANEL	1 PC
10	BACK PANEL	1 PC
11	DRAWER FRONT (UP)	2 PCS
12	DRAWER FRONT (DOWN)	2 PCS
13	DRAWER SIDE	8 PCS
14	DRAWER BACK	4 PCS
15	DRAWER BOTTOM	4 PCS
16	LEG	4 PCS

HIRADO
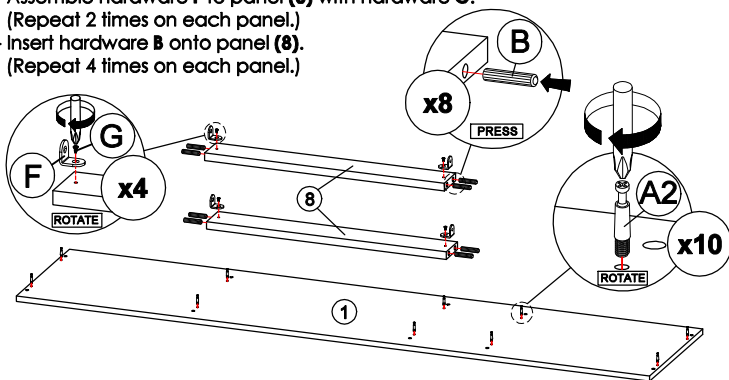
CODING
- **336066**
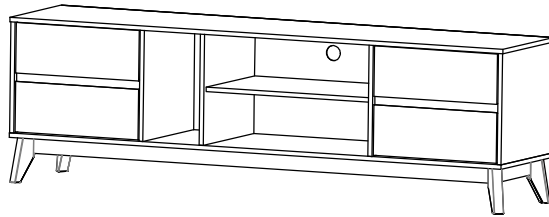
**ISO 9001:2015**
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

STEP 1
- Insert hardware **A2** onto panel **(1)**.
  (Repeat 10 times.)
- Assemble hardware **F** to panel **(8)** with hardware **G**.
  (Repeat 2 times on each panel.)
- Insert hardware **B** onto panel **(8)**.
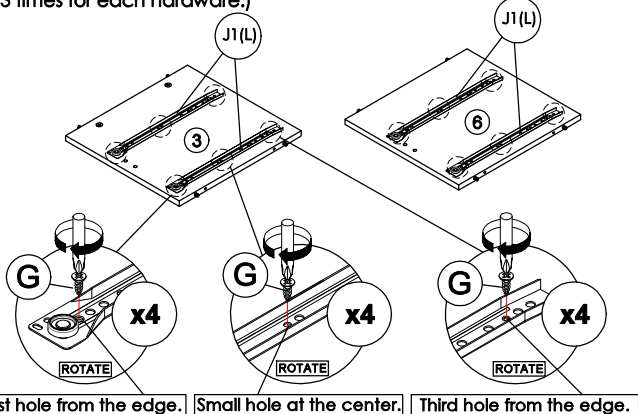 (Repeat 4 times on each panel.)

SCREWDRIVER REQUIRED

B x8 PRESS
F G x4 ROTATE
A2 x10 ROTATE

STEP 2
- Insert hardware **A1** onto panel **(3)**, **(4)**, **(5)**, **(6)** and **(7)**.
  (Repeat 2 times on each panel.)
- Insert hardware **B** onto panel **(3)**, **(4)**, **(5)**, **(6)** and **(7)**.
  (Repeat 4 times on each panel.)

A1 x10 PRESS
B x20 PRESS
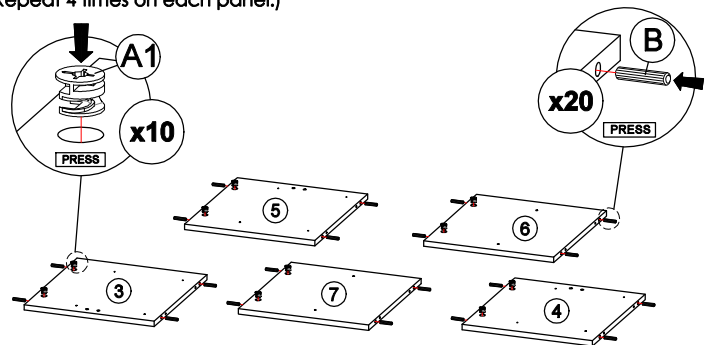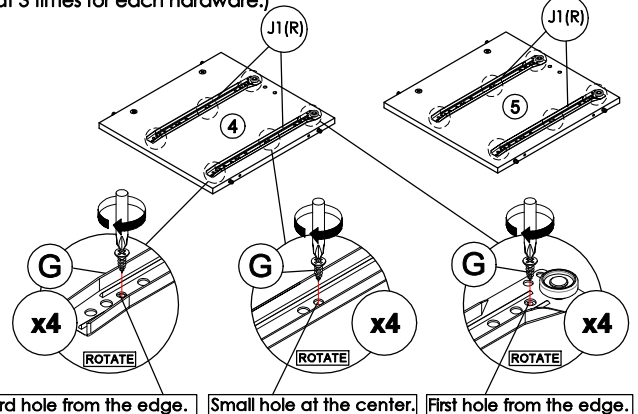
* Ensure the arrows on hardware **A1** point towards mounting positions.

STEP 3
Fix hardware **J1 (L)** into panel **(3)** and **(6)** with hardware **G**.
(Repeat 3 times for each hardware.)

SCREWDRIVER REQUIRED

J1(L) — J1(L)

G x4 ROTATE — First hole from the edge.
G x4 ROTATE — Small hole at the center.
G x4 ROTATE — Third hole from the edge.

STEP 4
Fix hardware **J1 (R)** into panel **(4)** and **(5)** with hardware **G**.
(Repeat 3 times for each hardware.)

SCREWDRIVER REQUIRED

J1(R) — J1(R)

G x4 ROTATE — Third hole from the edge.
G x4 ROTATE — Small hole at the center.
G x4 ROTATE — First hole from the edge.

STEP 5
- Attach panel **(8)** to panel **(3)** and **(5)**.
  (Repeat 1 times.)
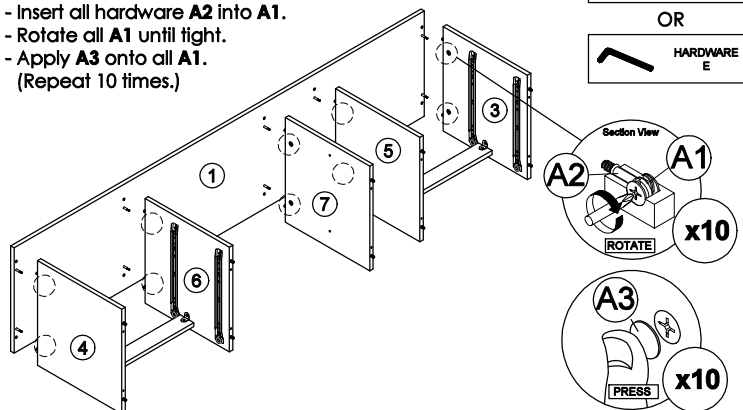- Attach panel **(8)** to panel **(4)** and **(6)**.
  (Repeat 1 times.)
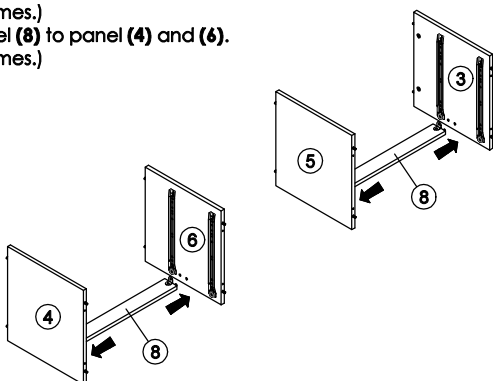
* In this step hardware **B** are pre-inserted.

STEP 6
- Attach panel **(3)**, **(4)**, **(5)**, **(6)** and **(7)** to panel **(1)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
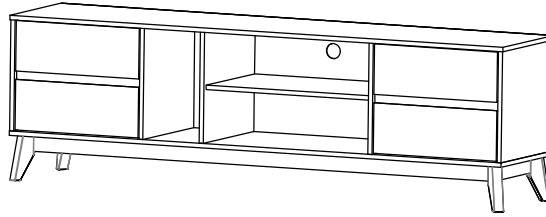 (Repeat 10 times.)

SCREWDRIVER REQUIRED
OR
HARDWARE E

Section View
A2 A1 x10 ROTATE
A3 x10 PRESS

* In this step hardware **A1**, **A2** and **B** are pre-inserted.

HIRADO

CODING
- 336066

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

STEP 7
- Assemble hardware **F** on panel **(8)** to panel **(3)** and **(5)** by using hardware **G**.
- Assemble hardware **F** on panel **(8)** to panel **(4)** and **(6)** by using hardware **G**.
(Repeat 1 times on each side panel.)

SCREWDRIVER REQUIRED
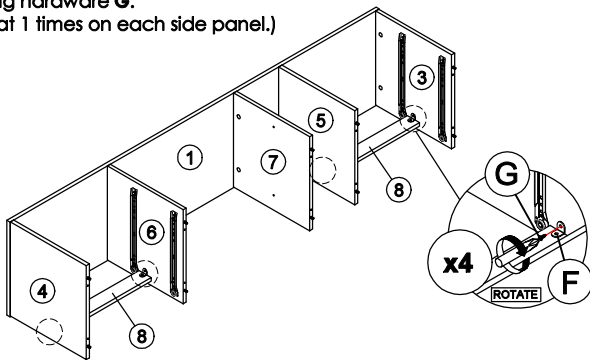
STEP 8
Connect panel **(2)** to panel **(3)**, **(4)**, **(5)**, **(6)** and **(7)** by using hardware **C** and **E**.
(Repeat 10 times.)
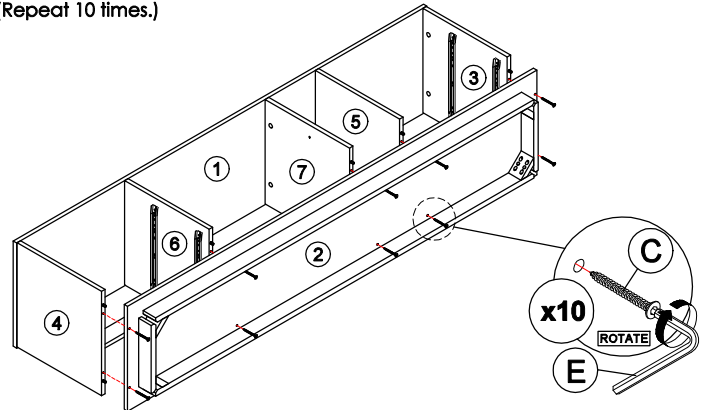
* In this step hardware **B** are pre-inserted.
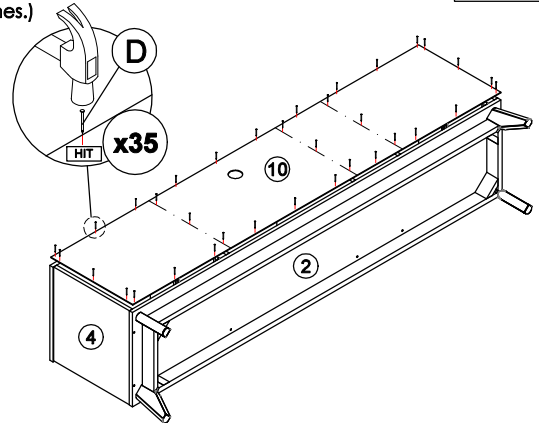
STEP 9
Assemble part **16** into panel **(2)** by using hardware **E, K, L** and **M**.
(Repeat 2 times for each Leg.)
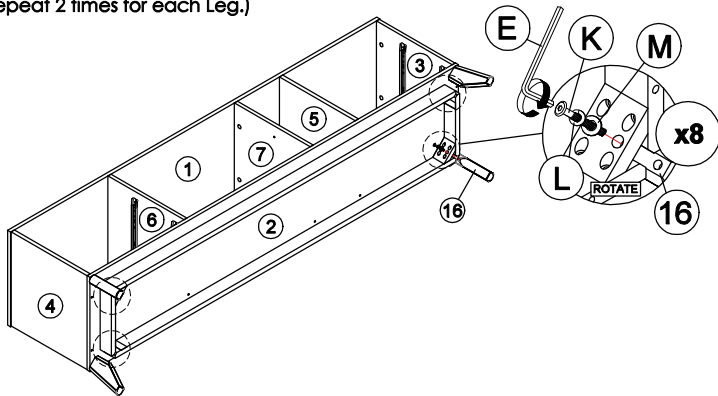
STEP 10
Assemble panel **(10)** to entire body with hardware **D**.
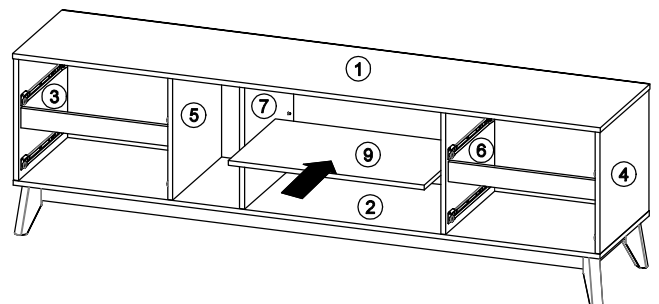(Repeat 35 times.)

HAMMER REQUIRED

STEP 11
Insert hardware **I** into mounting positions on panel **(6)** and **(7)** by hand.
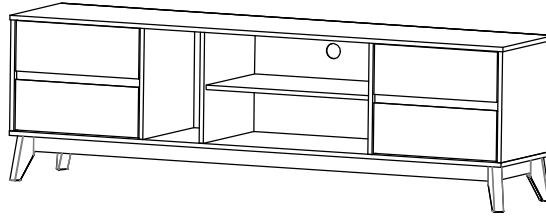(Repeat 4 times.)
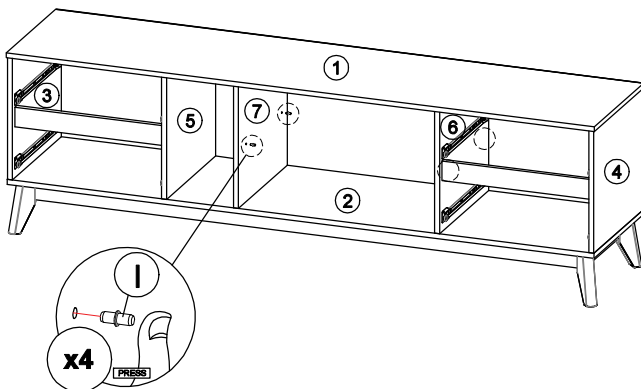
STEP 12
Assemble the panel **(9)** into between panel **(6)** and **(7)**.
(Repeat 1 times.)

* In this step hardware **I** are pre-inserted.
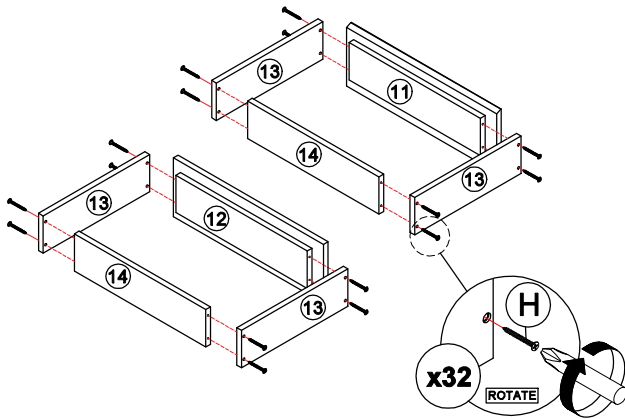
HIRADO

CODING
- 336066

ISO 9001:2015
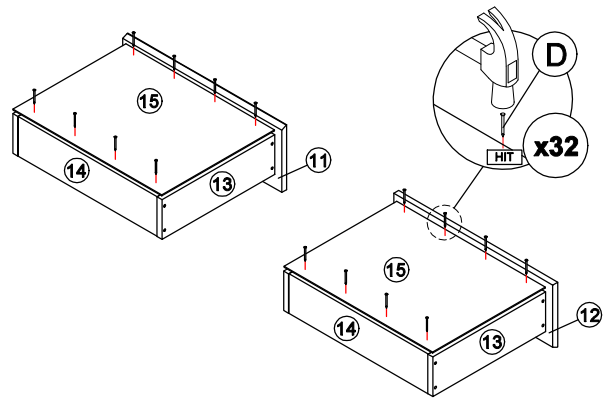Reg. No. 000435-1-MY-1-QMS

nuhoom.com

STEP 13
Assemble panel **(13)** with panel **(11)** or **(12)** and **(14)** by using hardware **H**.
(Repeat 8 times for each drawer.)
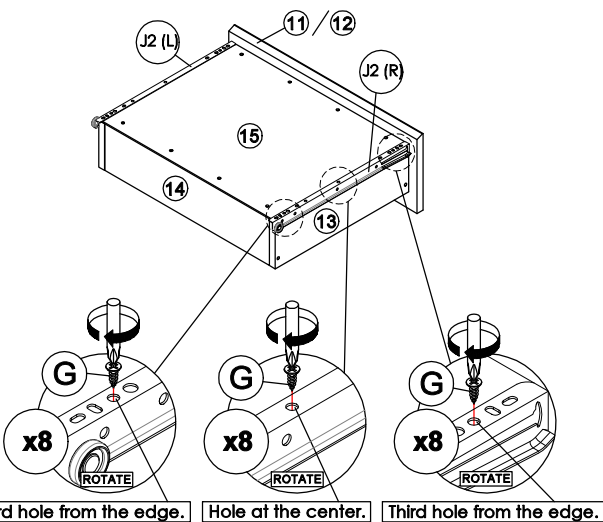* In this step only show one of the drawers.

SCREWDRIVER REQUIRED

STEP 14
Assemble panel **(15)** to entire body with hardware **D**.
(Repeat 8 times for each drawer.)
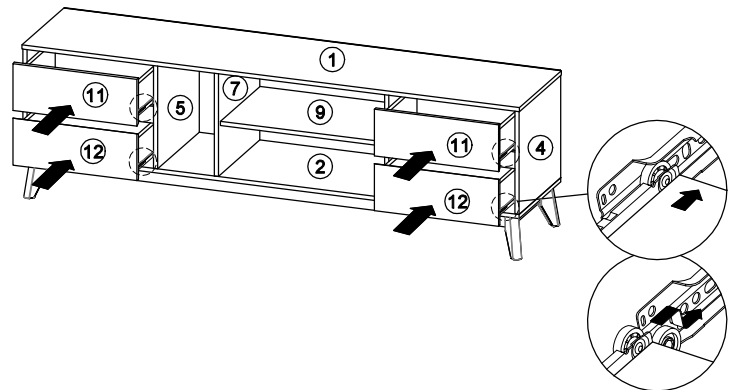* In this step only show one of the drawers.

HAMMER REQUIRED

STEP 15
Assemble hardware **J2 (L/R)** to panel **(15)** by using hardware **G**.
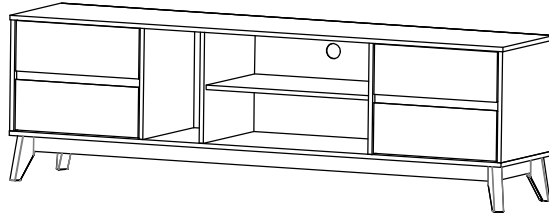(Repeat 3 times for each hardware.)
* In this step only show one of the drawers.

SCREWDRIVER REQUIRED

STEP 16
Put all the drawer in place along the drawer slides.

Third hole from the edge. | Hole at the center. | Third hole from the edge.

*Hardware **J2 (L/R)** shall be leaning against panel**(11)** or **(12)** when assembling.

HIRADO
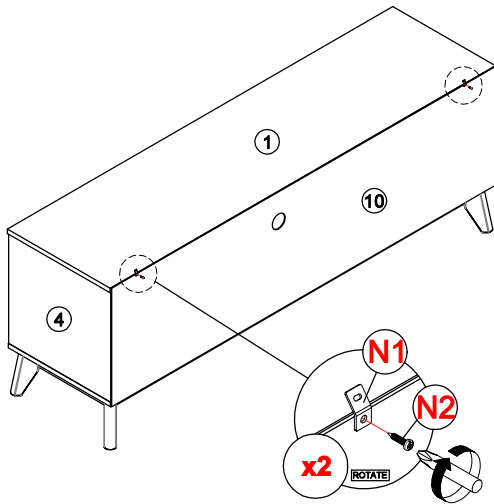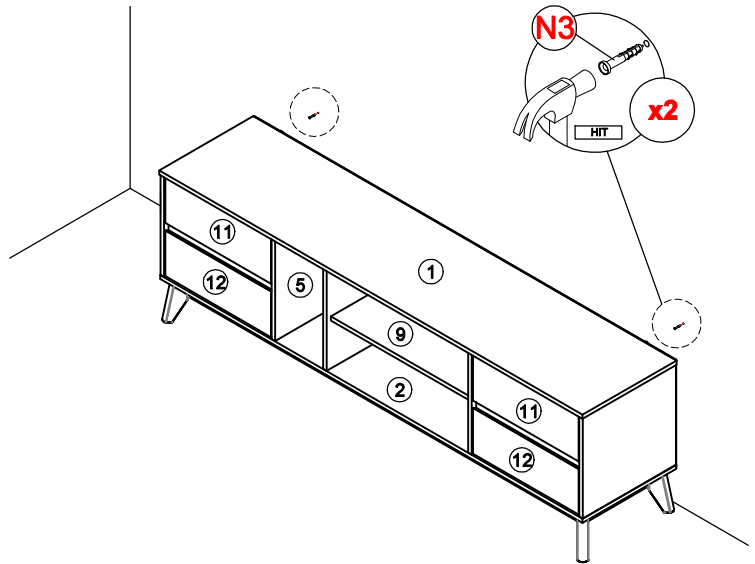
CODING
- 336066

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

STEP 17
Assemble hardware **N1** into panel **(1)** and **(10)** by using hardware **N2**.
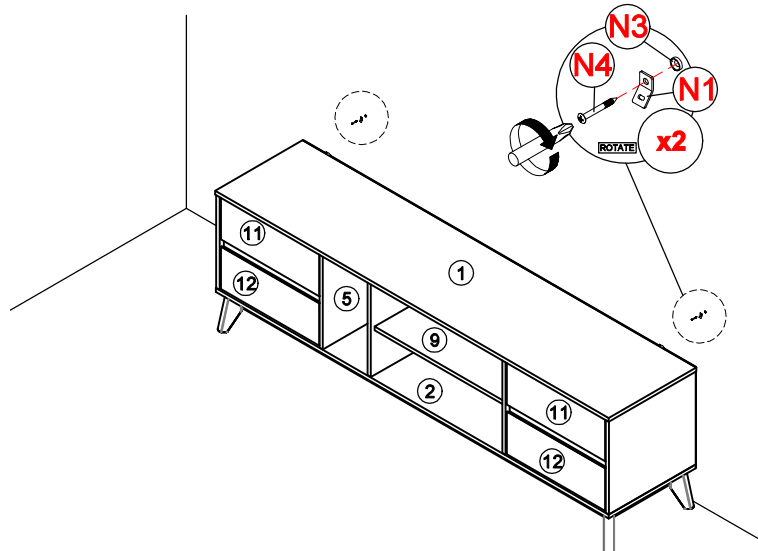(Repeat **2** times.)

SCREWDRIVER REQUIRED

STEP 18
- Mark and use the power drill to drill a hole on the wall.
- Hit hardware **N3** into the wall.
  (Repeat **2** times.)

POWER DRILL REQUIRED   HAMMER REQUIRED

STEP 19
Assemble hardware **N1** to **N3** by using hardware **N4**.
(Repeat **2** times.)

SCREWDRIVER REQUIRED

STEP 20
- Connect both of the hardware **N1** by using hardware **N5**.
- Tighten the hardware **N5**.
  (Repeat **2** times.)