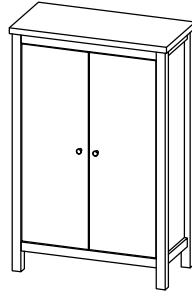# RHODES

CODING
- 332002

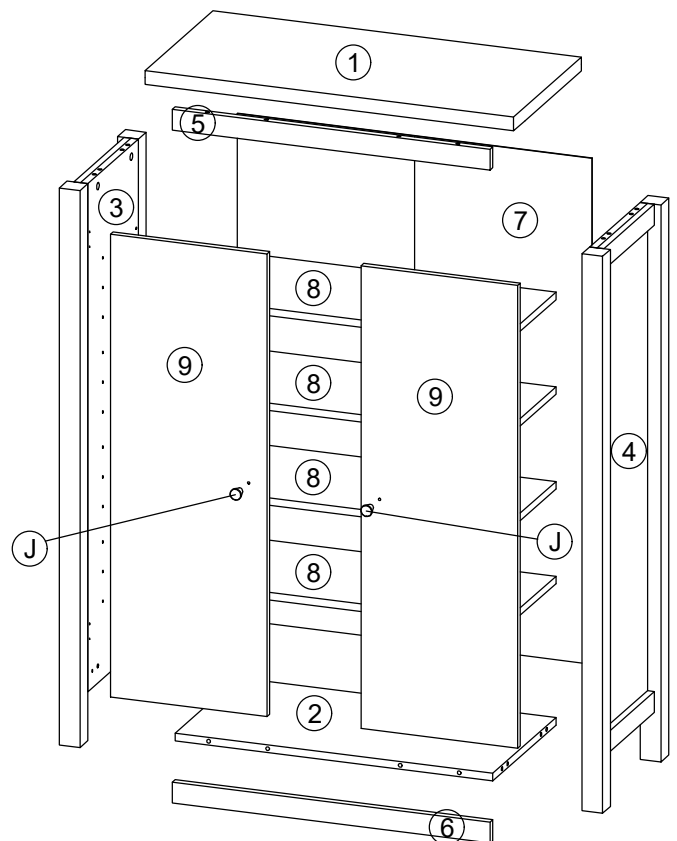ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.
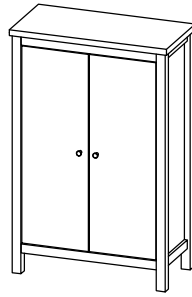
CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

HARDWARE

A	MINI FIX	A1　A2　A3	12 SETS
B	M8 X 30MM WOOD DOWEL		12 PCS
C	ALLEN KEY M4		1 PC
D	M3.5 X 16MM C.B SCREW		24 PCS
E	M4 X 30MM C.B SCREW		2 PCS
F	5/8 NAIL		24 PCS
G	5/8 PVC NAIL LEG		4 PCS
H	METAL SHELF SUPPORT		16 PCS
I	STOPPER(2 PIN)		2 PCS
J	311 KNOD		2 PCS
K	SOFT CLOSING 7/8 HINGES		4 PCS
	TIPPING PACK WITH AI		2 SETS

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
SCREWDRIVER	HAMMER

PART LIST

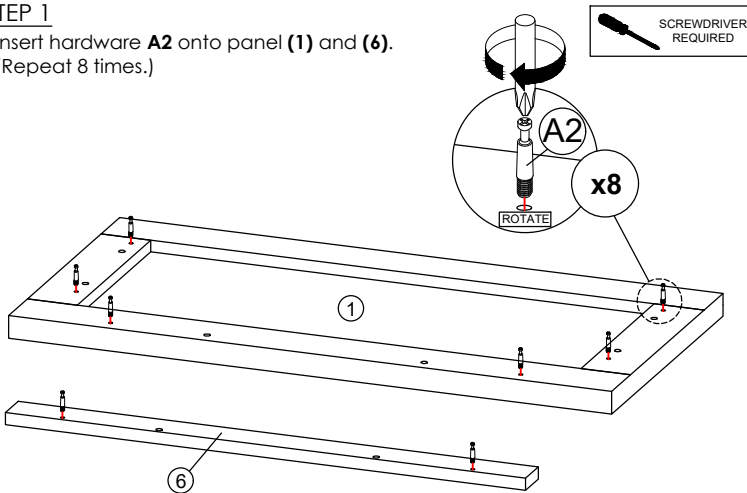|	PART LIST	QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	FRONT RAIL TOP	1 PC
6	FRONT RAIL BOTTOM	1 PC
7	BACK PANEL	1 PC
8	SHELF PANEL	4 PCS
9	DOOR PANEL	2 PCS

RHODES

CODING
- 332002

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

STEP 1
- Insert hardware **A2** onto panel **(1)** and **(6)**.
  (Repeat 8 times.)
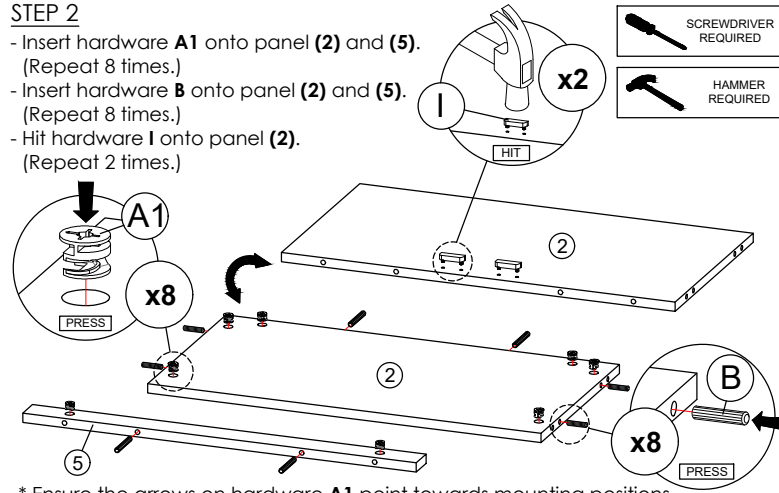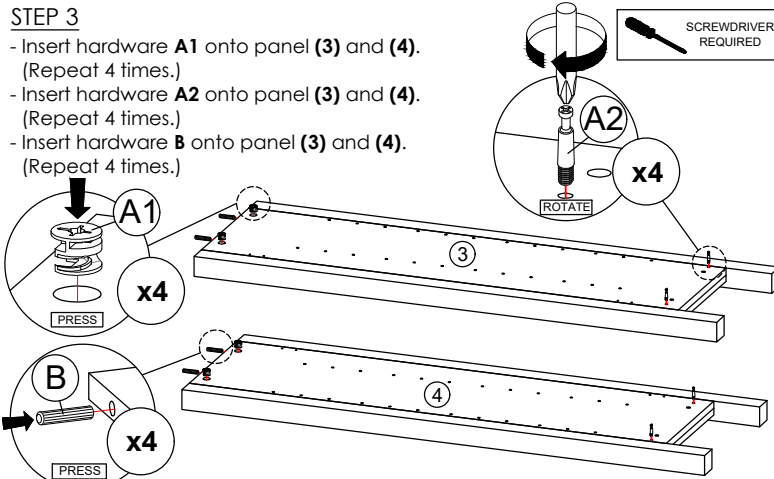
SCREWDRIVER REQUIRED

A2 x8
ROTATE

① ⑥

STEP 2
- Insert hardware **A1** onto panel **(2)** and **(5)**.
  (Repeat 8 times.)
- Insert hardware **B** onto panel **(2)** and **(5)**.
  (Repeat 8 times.)
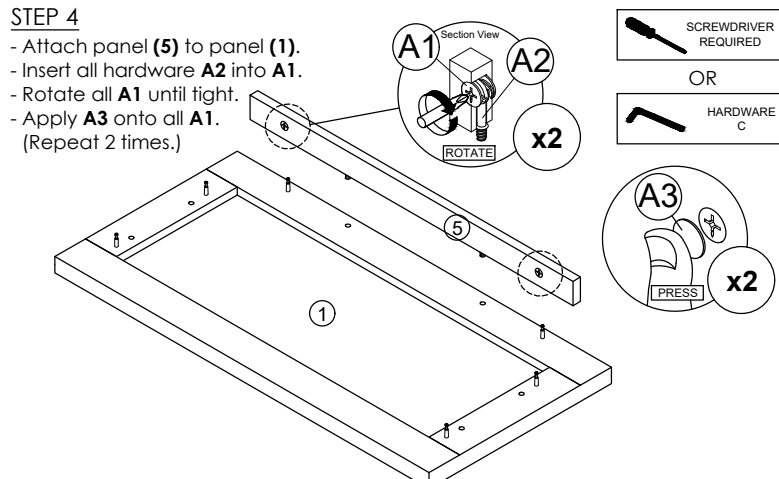- Hit hardware **I** onto panel **(2)**.
  (Repeat 2 times.)

SCREWDRIVER REQUIRED

HAMMER REQUIRED

x2

I HIT

A1 x8 PRESS

② ② ⑤

B x8 PRESS

* Ensure the arrows on hardware **A1** point towards mounting positions.

STEP 3
- Insert hardware **A1** onto panel **(3)** and **(4)**.
  (Repeat 4 times.)
- Insert hardware **A2** onto panel **(3)** and **(4)**.
  (Repeat 4 times.)
- Insert hardware **B** onto panel **(3)** and **(4)**.
  (Repeat 4 times.)

SCREWDRIVER REQUIRED

A2 x4
ROTATE

A1 x4 PRESS

B x4 PRESS

③ ④

* Ensure the arrows on hardware **A1** point towards mounting positions.

STEP 4
- Attach panel **(5)** to panel **(1)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
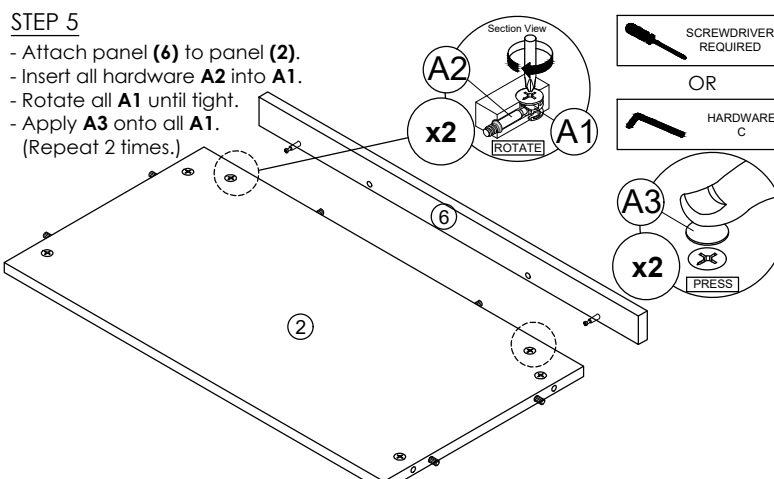- Apply **A3** onto all **A1**.
  (Repeat 2 times.)

SCREWDRIVER REQUIRED

OR

HARDWARE C

A1 Section View A2 x2
ROTATE

A3 x2 PRESS

① ⑤

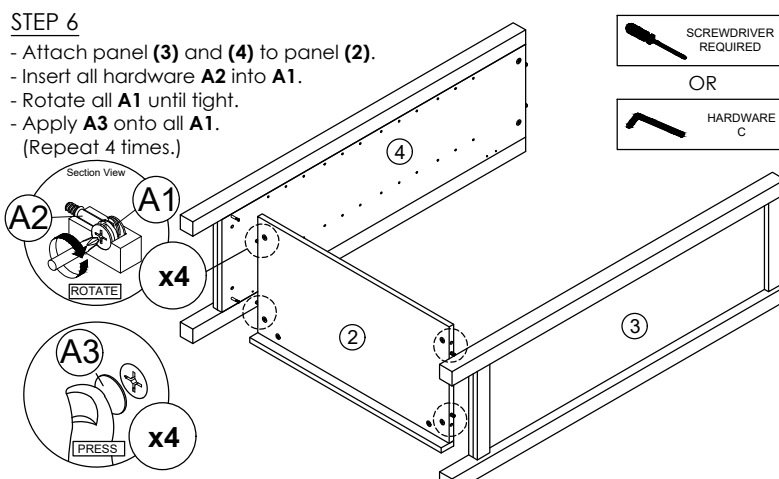* In this step hardware **A1**, **A2** and **B** are pre-inserted.

STEP 5
- Attach panel **(6)** to panel **(2)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
  (Repeat 2 times.)

SCREWDRIVER REQUIRED

OR

HARDWARE C

Section View A2 x2 A1
ROTATE

A3 x2 PRESS

⑥ ②

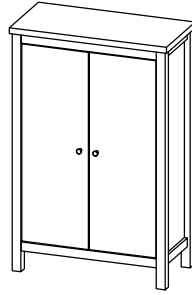* In this step hardware **A1**, **A2** and **B** are pre-inserted.

STEP 6
- Attach panel **(3)** and **(4)** to panel **(2)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
  (Repeat 4 times.)

SCREWDRIVER REQUIRED

OR

HARDWARE C

Section View A2 A1 x4
ROTATE

A3 x4 PRESS

④ ② ③

* In this step hardware **A1**, **A2** and **B** are pre-inserted.

RHODES

CODING
- 332002

ISO 9001:2015
Reg. No. 000435-1-MV-1-QMS

nuhoom.com

STEP 7
- Attach panel **(1)** to panel **(3)** and **(4)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
  (Repeat 4 times.)

SCREWDRIVER REQUIRED

OR

HARDWARE C

Section View

A1
A2
x4
ROTATE

A3
x4
PRESS

* In this step hardware **A1**, **A2** and **B** are pre-inserted.
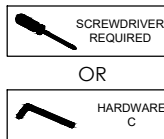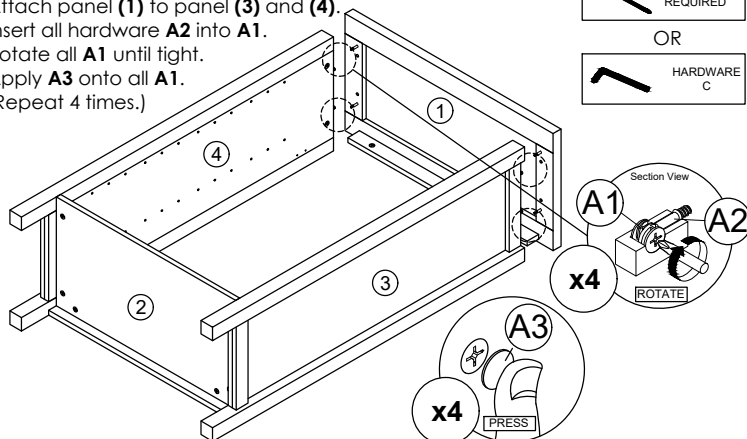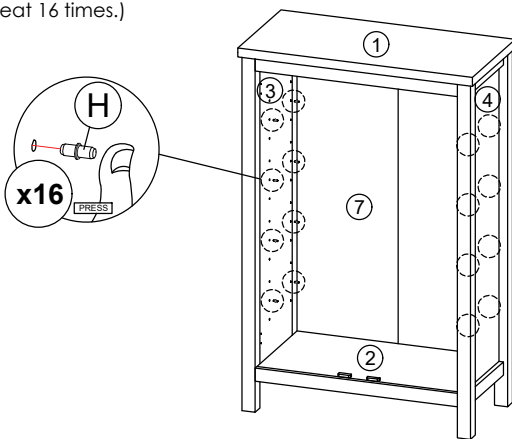
STEP 8
- Assemble panel **(7)** to entire body with hardware **F**.
  (Repeat 24 times.)
- Hit hardware **G** into bottom of panel **(3)** and **(4)**.
  (Repeat 4 times.)

HAMMER REQUIRED

F
x24
HIT

G
x4
HIT
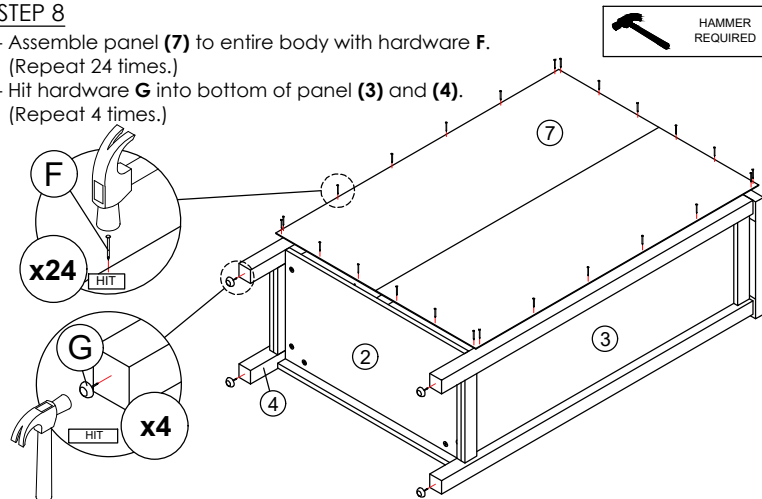
STEP 9
- Insert hardware **H** into mounting positions on panel **(3)** and **(4)** by hand.
  (Repeat 16 times.)

H
x16
PRESS

STEP 10
- Assemble panel **(8)** into
  between panel **(3)** and **(4)**.
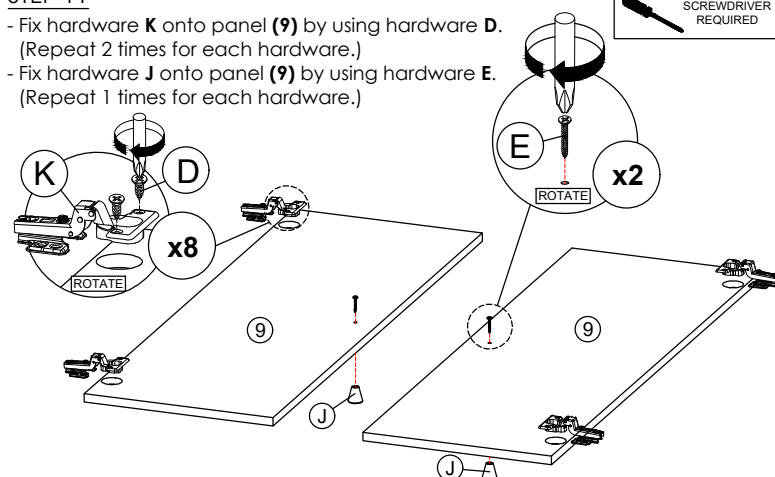 (Repeat 4 times.)
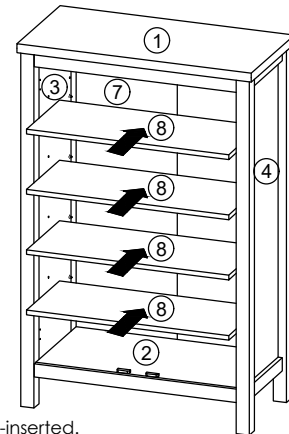
*In this step hardware **H** are pre-inserted.
*Hardware **H** can fix to another up and down hole
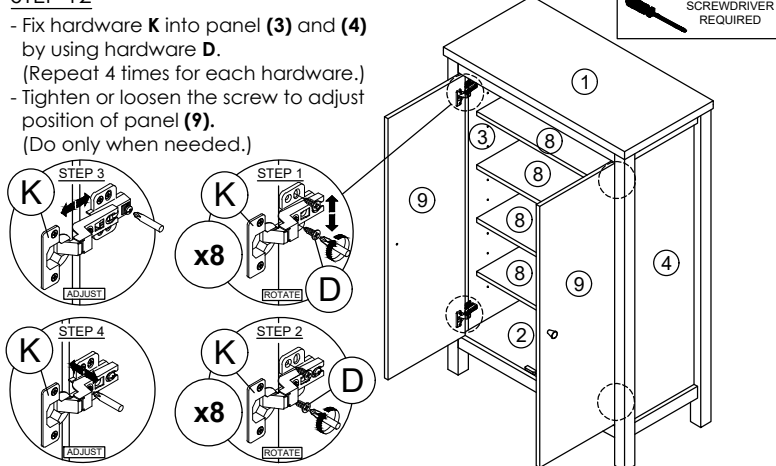 on panel **(3)** and **(4)** for adjust panel **(8)** to high or lower.

STEP 11
- Fix hardware **K** onto panel **(9)** by using hardware **D**.
  (Repeat 2 times for each hardware.)
- Fix hardware **J** onto panel **(9)** by using hardware **E**.
  (Repeat 1 times for each hardware.)

SCREWDRIVER REQUIRED

K D
x8
ROTATE

E
x2
ROTATE

STEP 12
- Fix hardware **K** into panel **(3)** and **(4)**
  by using hardware **D**.
  (Repeat 4 times for each hardware.)
- Tighten or loosen the screw to adjust
  position of panel **(9)**.
  (Do only when needed.)

SCREWDRIVER REQUIRED

K STEP 3
K STEP 1 **x8** D
ADJUST ROTATE

K STEP 4
K STEP 2 **x8** D
ADJUST ROTATE

* In this step hardware **K** have been assembled in panel **(9)**.