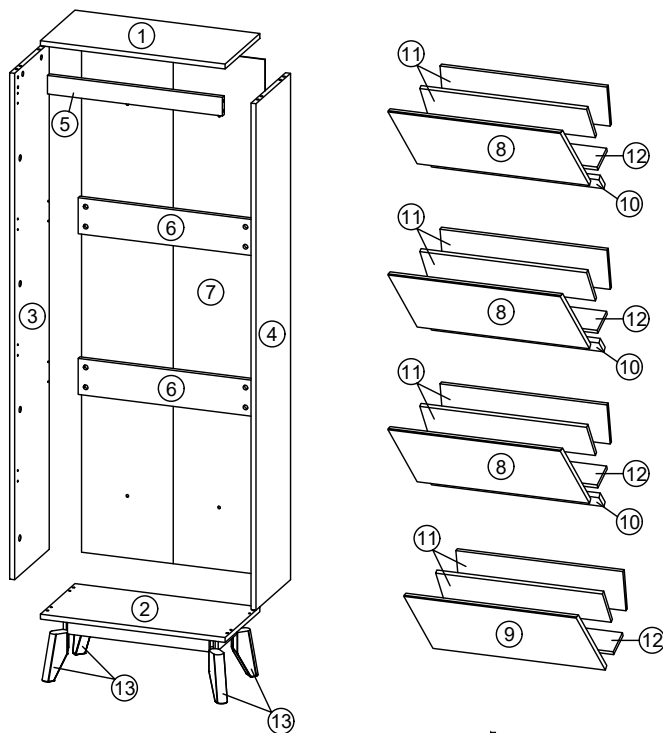# HIRADO

CODING
- 372070

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

HARDWARE		
A	MINI FIX A1 A2 A3	12 SETS
B	M8 X 30MM WOOD DOWEL	12 PCS
C	M8 X 20MM WOOD DOWEL	6 PCS
D	M6 X 50MM CSK CAP WOOD SCREW	4 PCS
E	ALLEN KEY M4	1 PC
F	M3 X 12MM C.B SCREW	24 PCS
G	M3.5 X 16MM C.B SCREW	24 PCS
H	M4 X 20MM C.B SCREW	17 PCS
I	5/8 NAIL	20 PCS
J	JCBC SCREW M6 X 70MM	8 PCS
K	SPRING WASHER M6	8 PCS
L	FLAT WASHER M6	8 PCS
M	STOPPER(2 PIN)	8 PCS
N	2 TRAY SHOE RACK 195MM N1 N2 N3	4 SETS
O	TIPPING PACK WITHOUT AI O1 O3 O2 O4 O5	2 SETS

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
SCREWDRIVER	HAMMER
POWER DRILL	

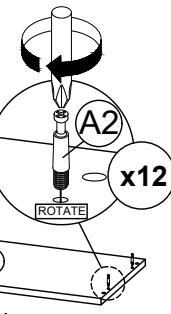| PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	BONE PANEL	1 PC
6	BACK SUPPORT	2 PCS
7	BACK PANEL	1 PC
8	DOOR PANEL (UP)	3 PCS
9	DOOR PANEL (DOWN)	1 PC
10	DOOR BONE	3 PCS
11	MIDDLE PANEL	8 PCS
12	MIDDLE BOTTOM	4 PCS
13	CABINET LEG	4 PCS

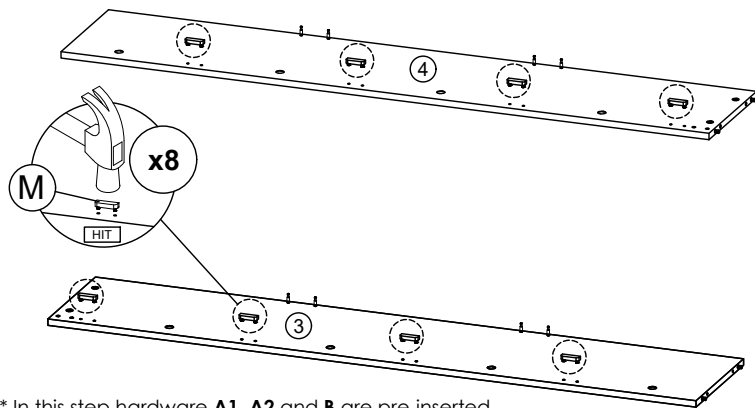# HIRADO

CODING
- 372070

nuhoom.com

STEP 1

- Insert hardware **A1** onto panel **(3)**, **(4)** and **(6)**.
  (Repeat 12 times.)
- Insert hardware **A2** onto panel **(1)**, **(3)** and **(4)**.
  (Repeat 12 times.)
- Insert hardware **B** onto
  panel **(3)**, **(4)** and **(5)**.
  (Repeat 12 times.)

SCREWDRIVER REQUIRED

B
A1
x12
PRESS
A2
PRESS
x12
ROTATE
x12

5
6 x2
1
3
4

* Ensure the arrows on hardware **A1** point towards mounting positions.

STEP 2

Hit hardware **M** onto panel **(3)** and **(4)**.
(Repeat 8 times.)

HAMMER REQUIRED

4
M
x8
HIT
3

* In this step hardware **A1**, **A2** and **B** are pre-inserted.
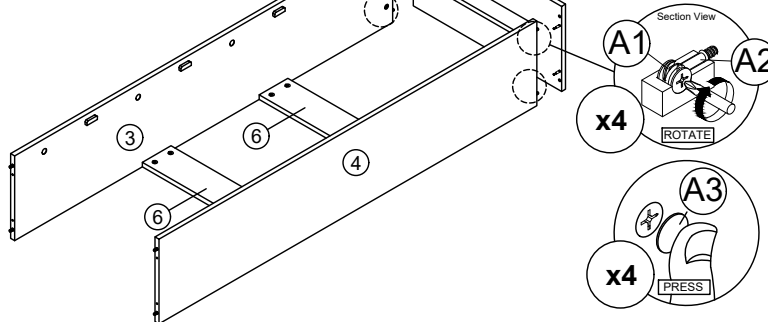
STEP 3

- Attach panel **(3)** and **(4)** to panel **(5)** and **(6)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
  (Repeat 8 times.)

SCREWDRIVER REQUIRED

OR

HARDWARE E

A2
A1
x8
ROTATE
x8
A3
PRESS

5
3
6
6
4
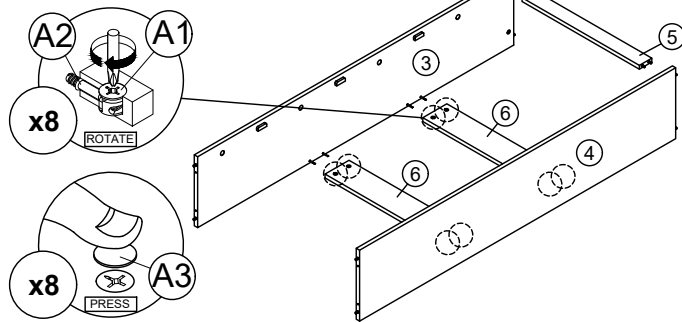
* In this step hardware **A1**, **A2** and **B** are pre-inserted.

STEP 4

- Attach panel **(1)** to panel **(3)** and **(4)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
  (Repeat 4 times.)

SCREWDRIVER REQUIRED

OR

HARDWARE E

1
A1
Section View
A2
x4
ROTATE
A3
x4
PRESS

3
6
4
6

* In this step hardware **A1**, **A2** and **B** are pre-inserted.

STEP 5

Connect panel **(2)** to panel **(3)** and **(4)**
by using hardware **D** and **E**.
(Repeat 4 times.)

HARDWARE E

1
4
6
3

D
x4
ROTATE
E
2
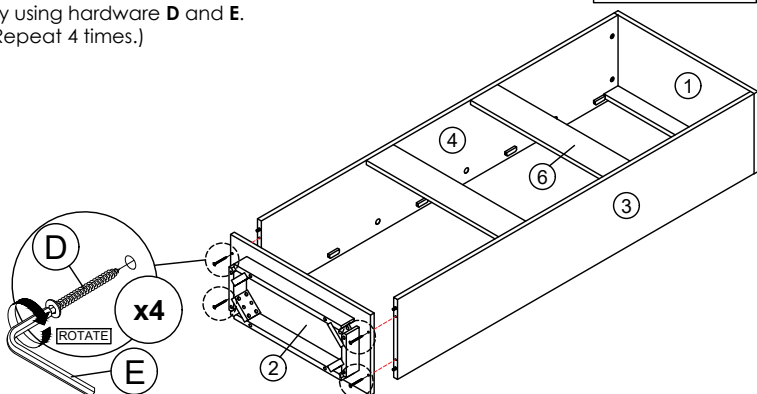
* In this step hardware **B** are pre-inserted.

STEP 6

Assemble part **13** into panel **(2)** by using hardware **E**, **J**, **K** and **L**.
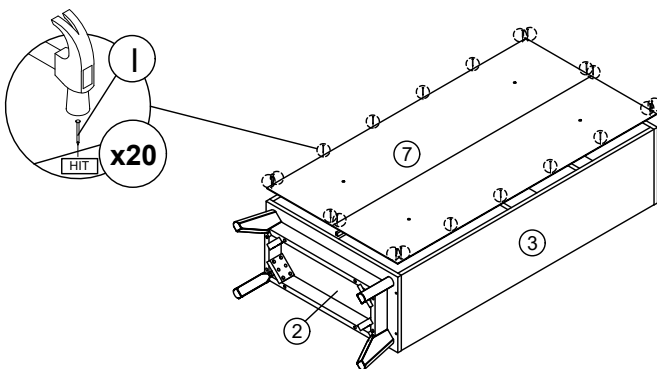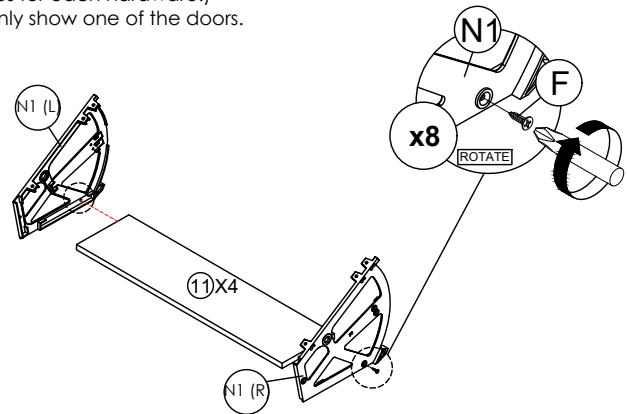(Repeat 2 times for each Leg.)

HARDWARE E

E
J
13
K
x8
ROTATE
L

1
4
6
3
2
13
13
13

HIRADO
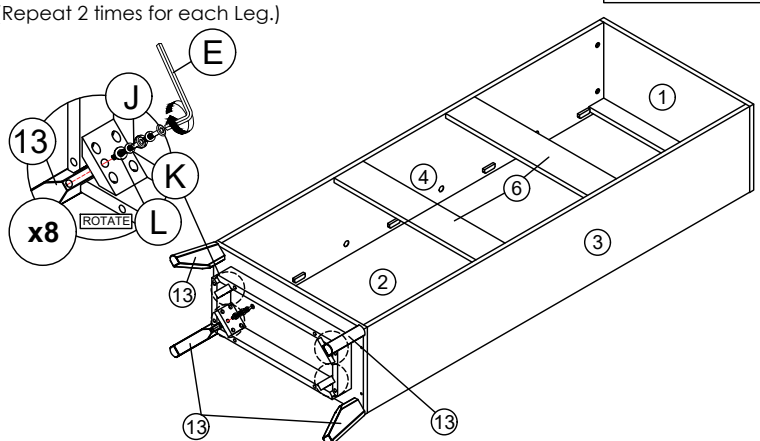
CODING
- 372070

nuhoom.com

STEP 7

Assemble panel **(7)** to entire body with hardware **I**.
(Repeat 20 times.)

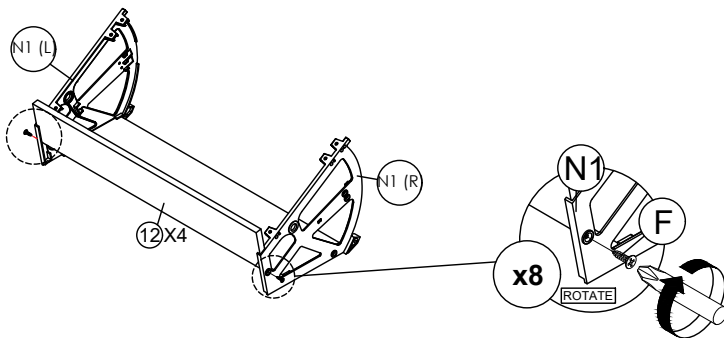HAMMER REQUIRED

I

HIT **x20**

STEP 8

Fix hardware **N1 (L/R)** onto panel **(11)** by using hardware **F**.
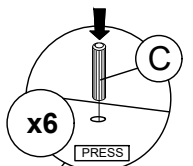(Repeat 1 times for each hardware.)
* In this step only show one of the doors.

SCREWDRIVER REQUIRED

N1 (L)

N1 (R)

(11)X4

N1

F

x8 ROTATE

STEP 9

- Insert the panel **(12)** along the slot.
  (Repeat 4 times.)
- Fix hardware **N1 (L/R)** onto panel **(12)** by using hardware **F**.
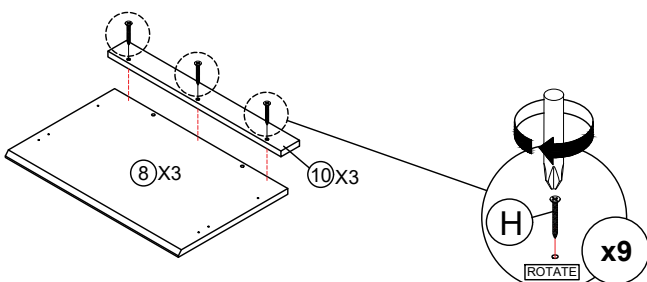 (Repeat 1 times for each hardware.)
* In this step only show one of the doors.

SCREWDRIVER REQUIRED

N1 (L)

N1 (R)

(12)X4

N1

F

x8 ROTATE

STEP 10

Insert hardware **C** onto panel **(8)**.
(Repeat 6 times.)
* In this step only show one of the doors.

C

x6 PRESS

(8)X3

STEP 11

Assemble panel **(10)** with panel **(8)**
by using hardware **H**.
(Repeat 9 times.)
* In this step only show one of the doors.

SCREWDRIVER REQUIRED

(8)X3   (10)X3

H

x9 ROTATE

STEP 12

Fix hardware **N1 (L/R)** onto panel **(8)** by using hardware **G**.
(Repeat 3 times for each hardware.)
* In this step only show one of the doors.

SCREWDRIVER REQUIRED
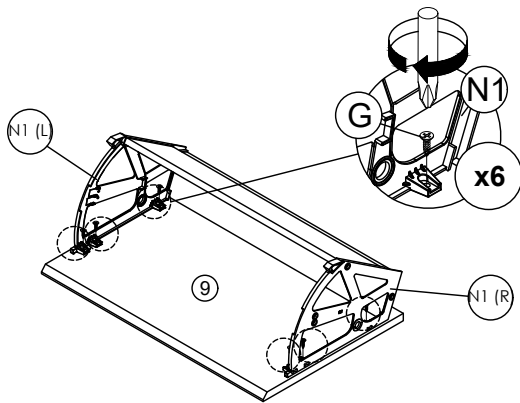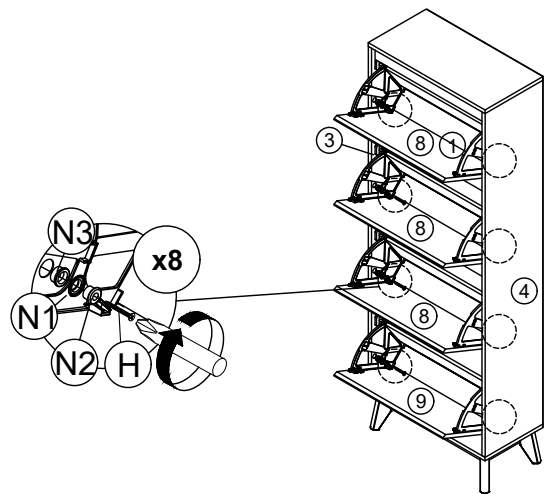
N1 (L)X3

G

N1

x18

(8)X3

N1 (R)X3

HIRADO
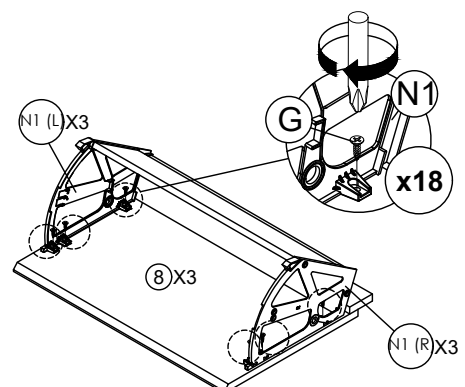
CODING
- 372070

nuhoom.com

STEP 13
Fix hardware **N1 (L/R)** onto panel **(9)** by using hardware **G**.
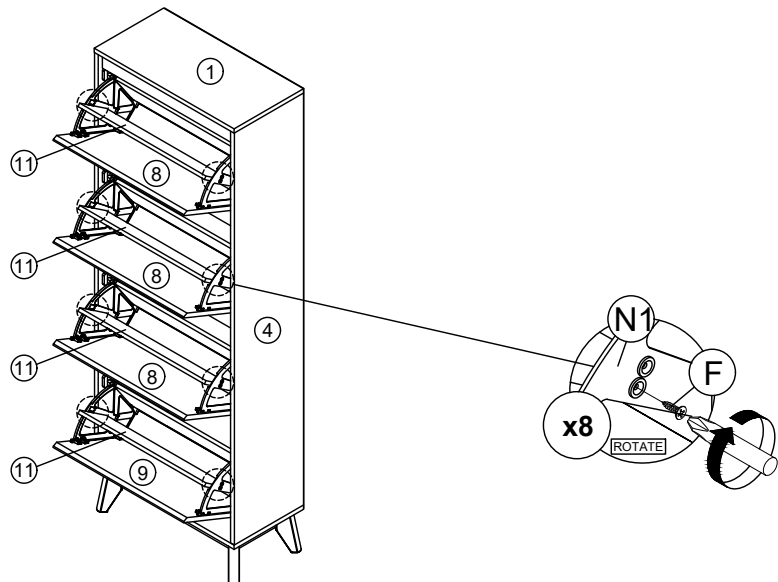(Repeat 3 times for each hardware.)

SCREWDRIVER REQUIRED

STEP 14
Assemble hardware **N1 (L/R)** into panel **(3)** and **(4)**
by using hardware **H, N2** and **N3**.
(Repeat 1 times for each hardware .)

SCREWDRIVER REQUIRED

STEP 15
- Insert the panel **(11)** along the slot.
  (Repeat 4 times.)
- Fix hardware **N1 (L/R)** onto panel **(11)** by using hardware **F**.
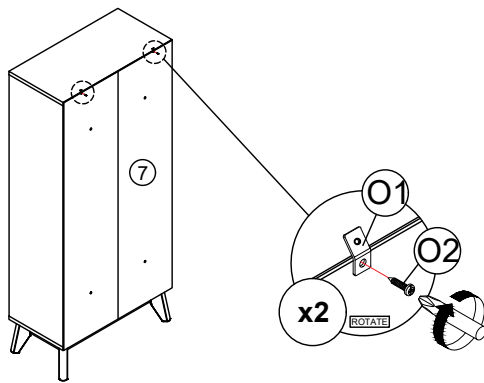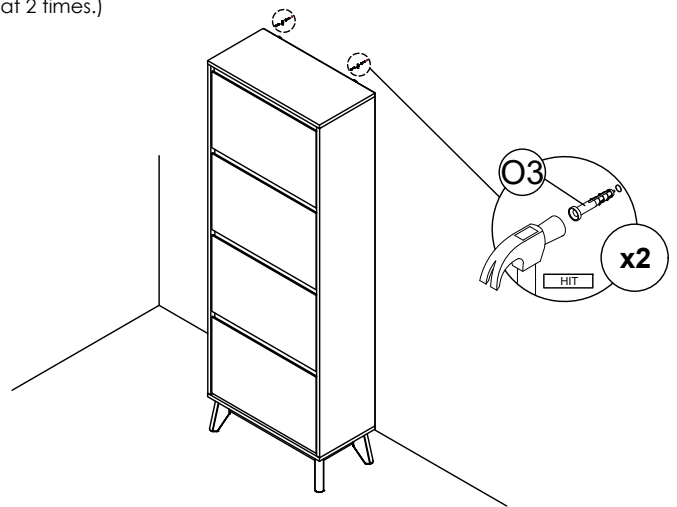 (Repeat 1 times for each hardware.)

SCREWDRIVER REQUIRED

HIRADO

CODING
- 372070

STEP 16

Assemble hardware **O1** into panel **(7)**
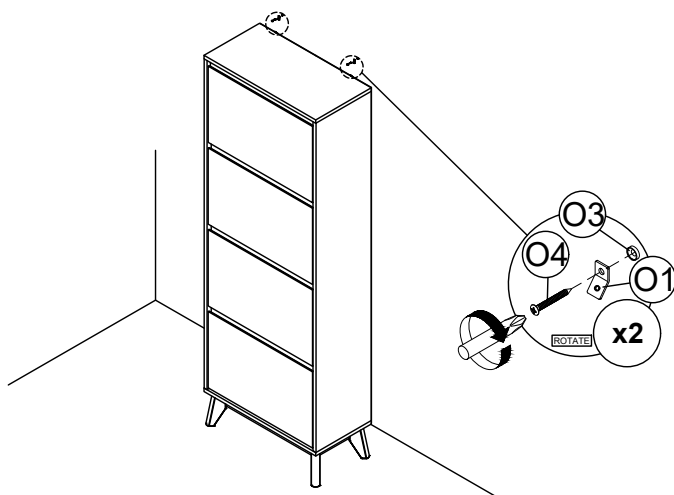by using hardware **O2**.
(Repeat 2 times.)

SCREWDRIVER REQUIRED

STEP 17

- Mark and use the power drill
  to drill a hole on the wall.
- Hit hardware **O3** into the wall.
  (Repeat 2 times.)

POWER DRILL REQUIRED

HAMMER REQUIRED

STEP 18

- Assemble hardware **O1** into **O3** by using hardware **O4**.
  (Repeat 2 times.)

SCREWDRIVER REQUIRED

STEP 19

- Connect both of the hardware **O1** by using hardware **O5**.
- Tighten the hardware **O5.**
  (Repeat 2 times.)